



SEAT BRACKETS

INSTRUCTION MANUAL

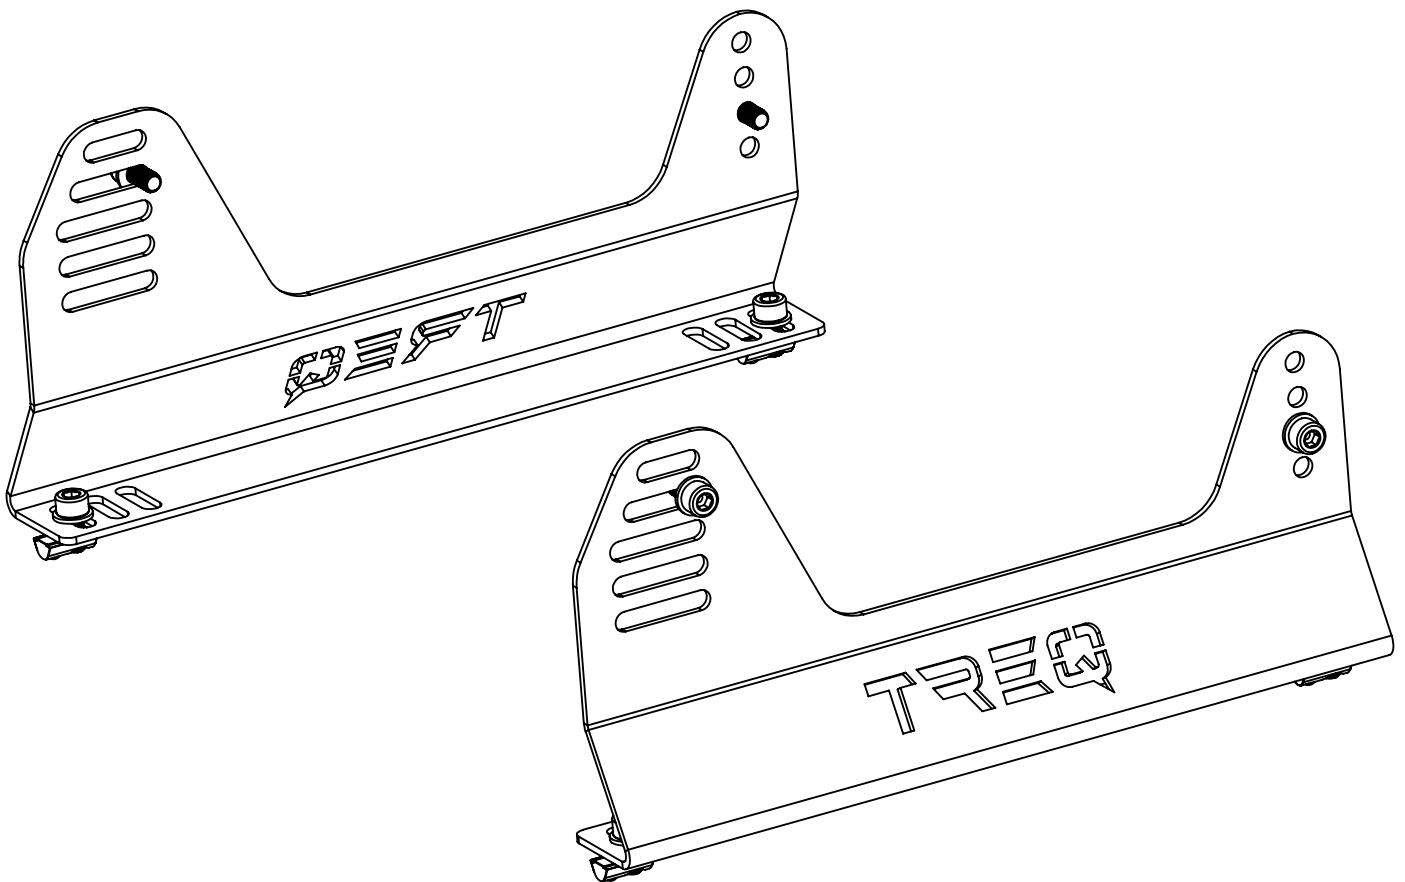


REQUIRED TOOLS:

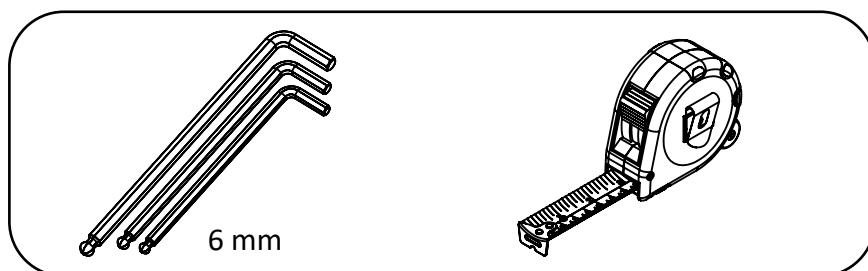



GENERAL INSTRUCTIONS

The easiest way to mount the T-Slot Click-in-Nuts, is to slide them in from one side of the profile, with the ball facing down. But don't worry if you need to put in a click-in-nut in a profile which has both ends already closed: it is also possible to push them in the T-slot anywhere you like!

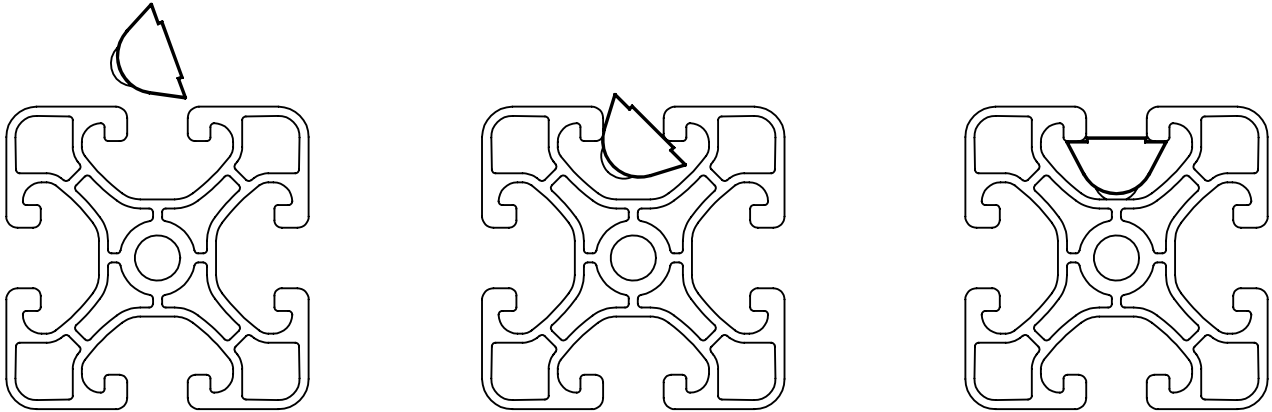


INCLUDED ITEMS

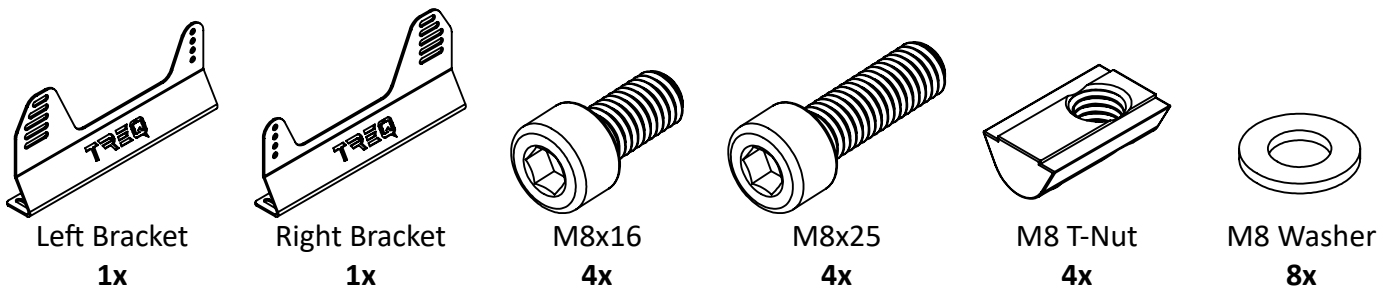


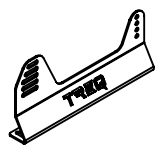

Left Bracket
1x

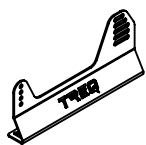


Right Bracket
1x

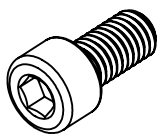

M8x16
4x




M8 T-Nut
4x




M8 Washer
4x

1

Attach both the left and right seat bracket to your rig.

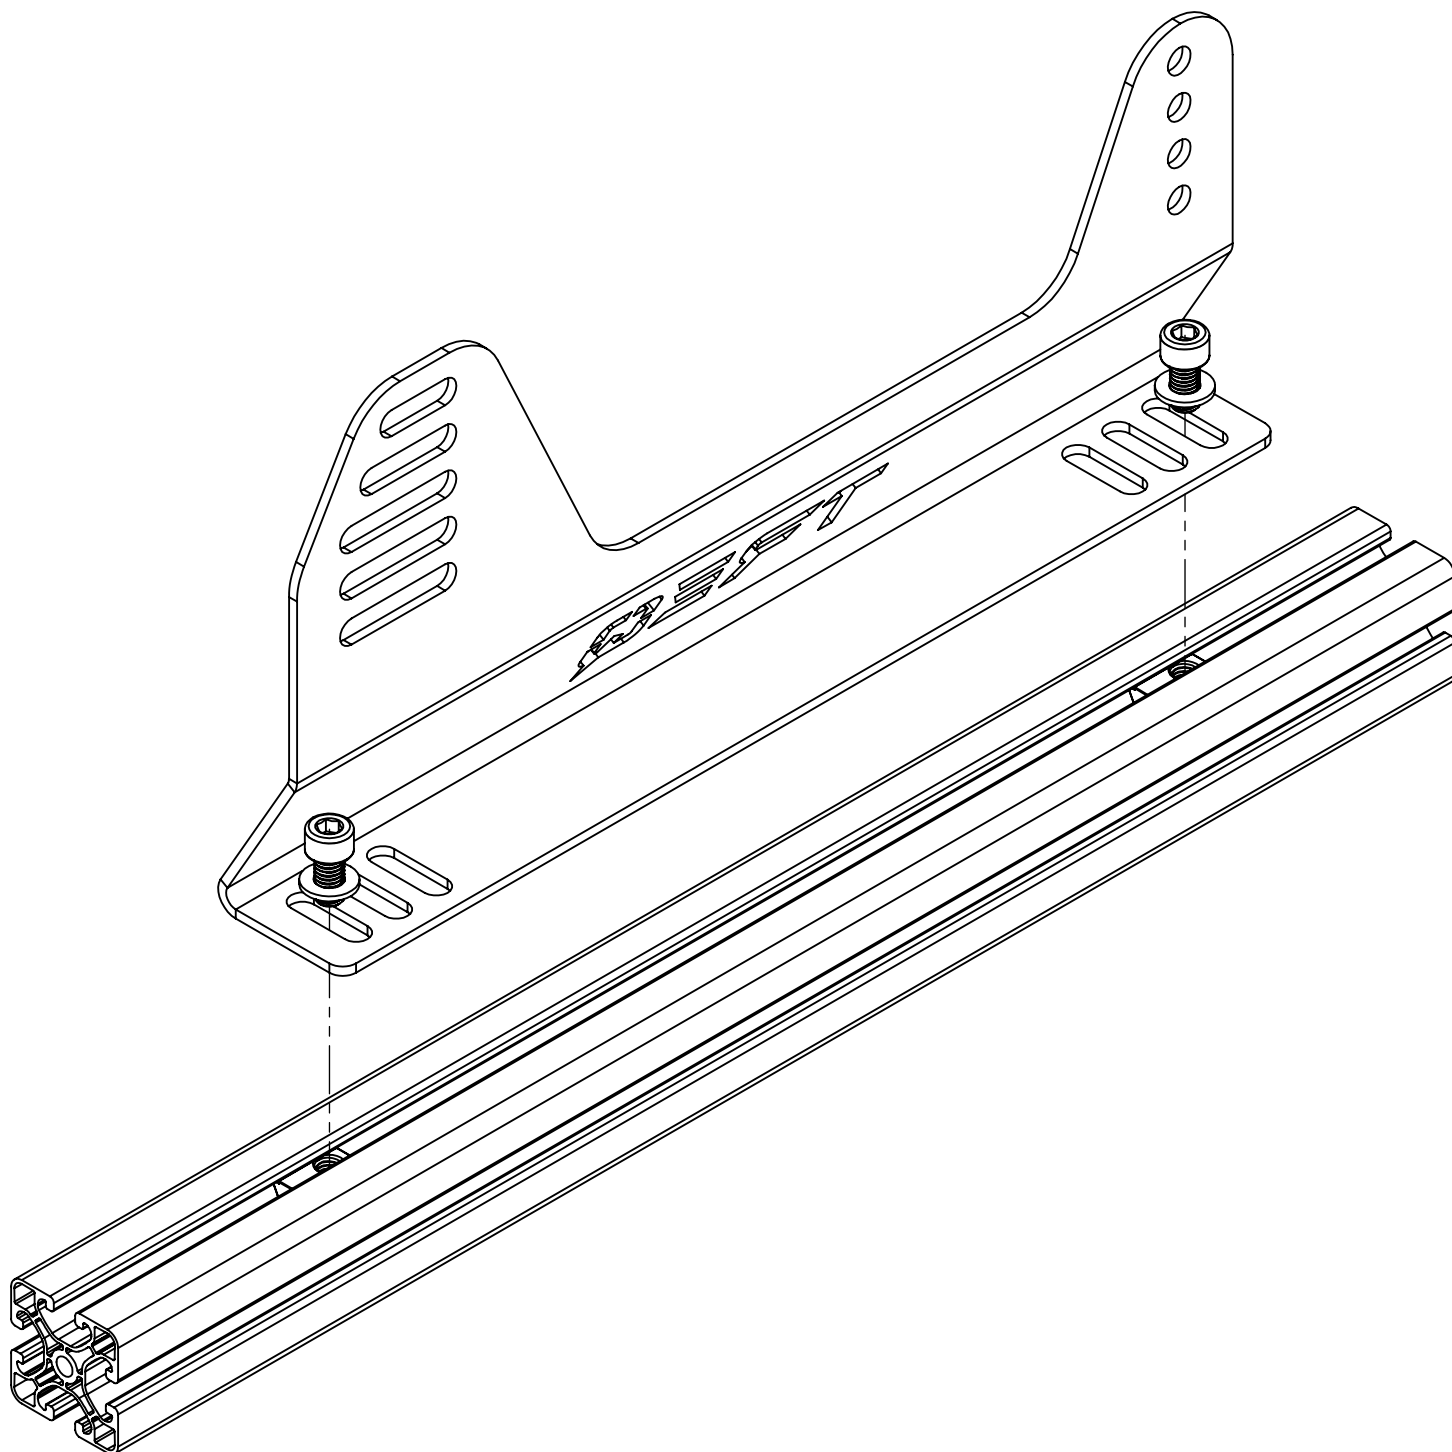



2

