



BASIC MONITOR MOUNT

INSTRUCTION MANUAL

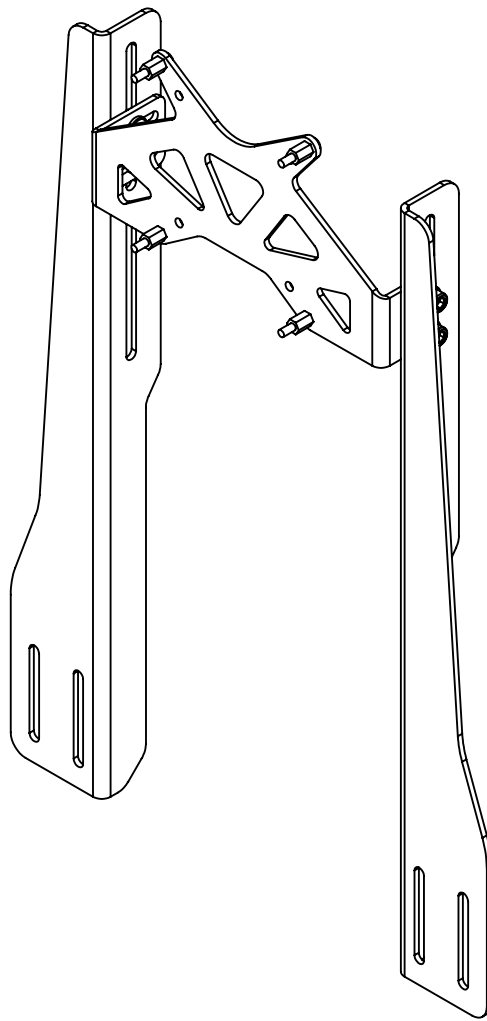


REQUIRED TOOLS:

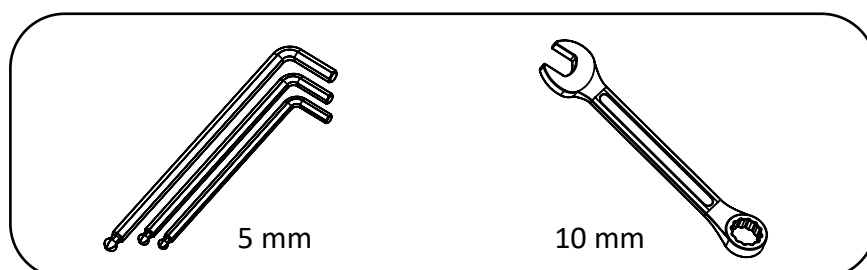


GENERAL INSTRUCTIONS


The easiest way to mount the T-Slot Click-in-Nuts, is to slide them in from one side of the profile, with the ball facing down. But don't worry if you need to put in a click-in-nut in a profile which has both ends already closed: it is also possible to push them in the T-slot anywhere you like!

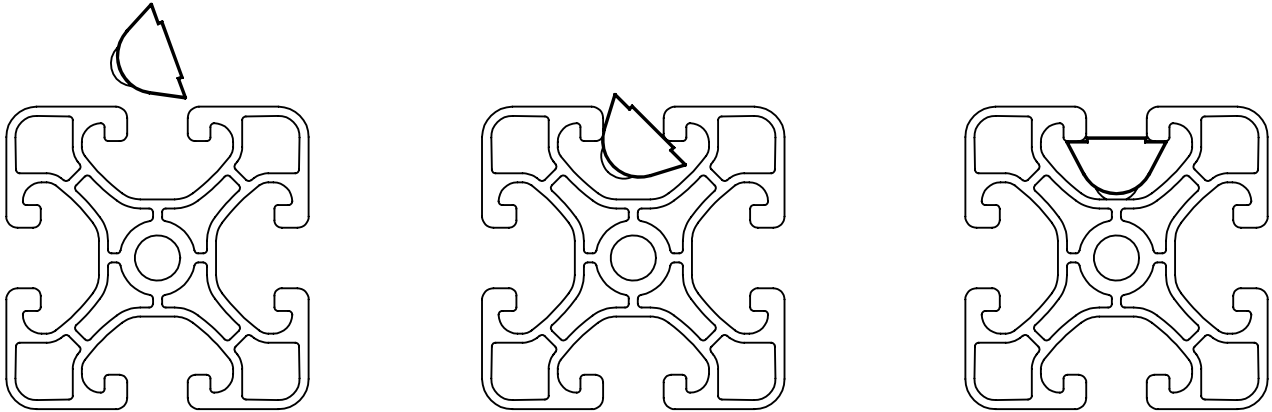


INCLUDED ITEMS

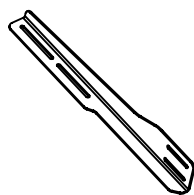


Left Bracket
1x

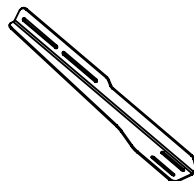

Right Bracket
1x

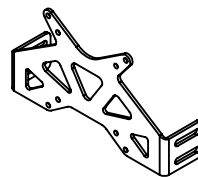

VESA Plate
1x

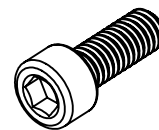

M6x16
8x




M6 T-Nut
4x



M6 Lock Nut
4x




M8 Washer
12x



M4 Spacer
4x




M4x12
4x

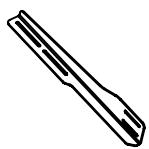


Left Bracket

1x

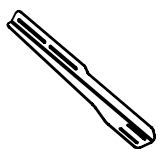

Right Bracket

1x

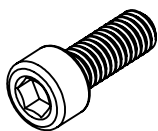


M6x16

4x



M6 T-Nut

4x





M8 Washer

4x



1a


Follow this step if your wheel is front or side mounted (vertical profiles):

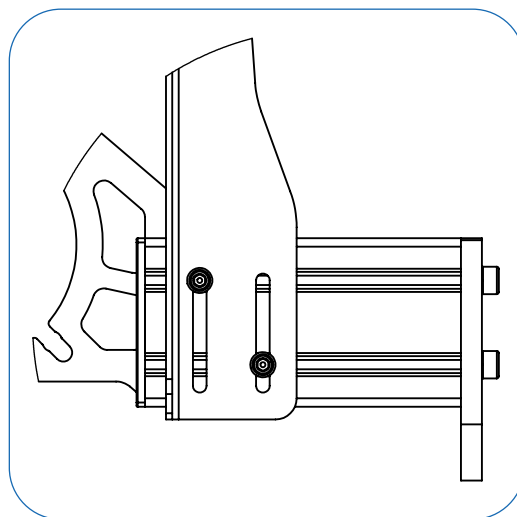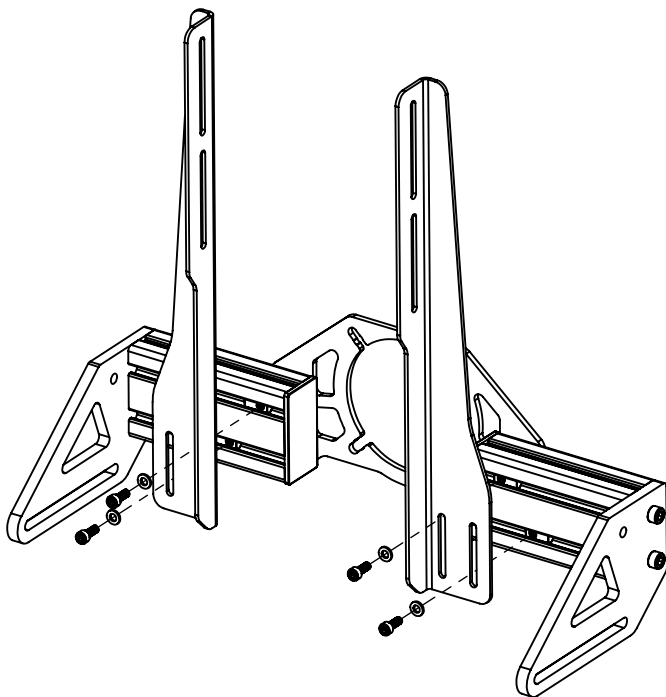


1b

Follow this step if your wheel is bottom mounted (horizontal profiles):

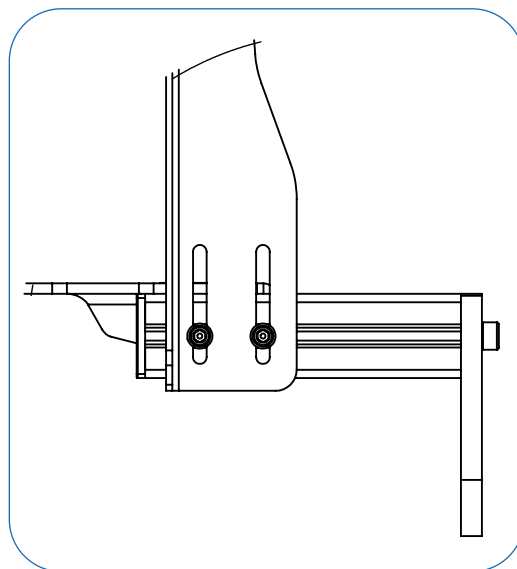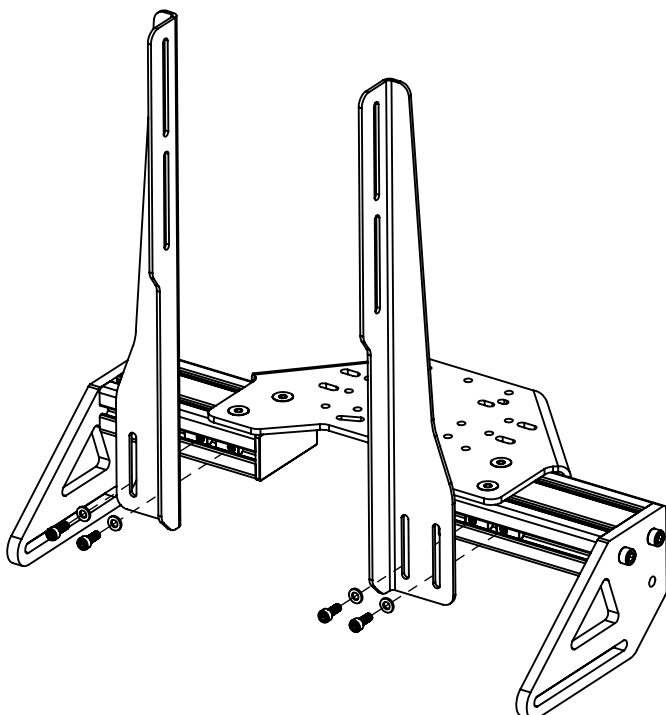

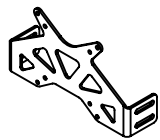


VESA Plate
1x

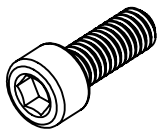

M6x16
4x





M6 Lock Nut
4x



M8 Washer
8x

2

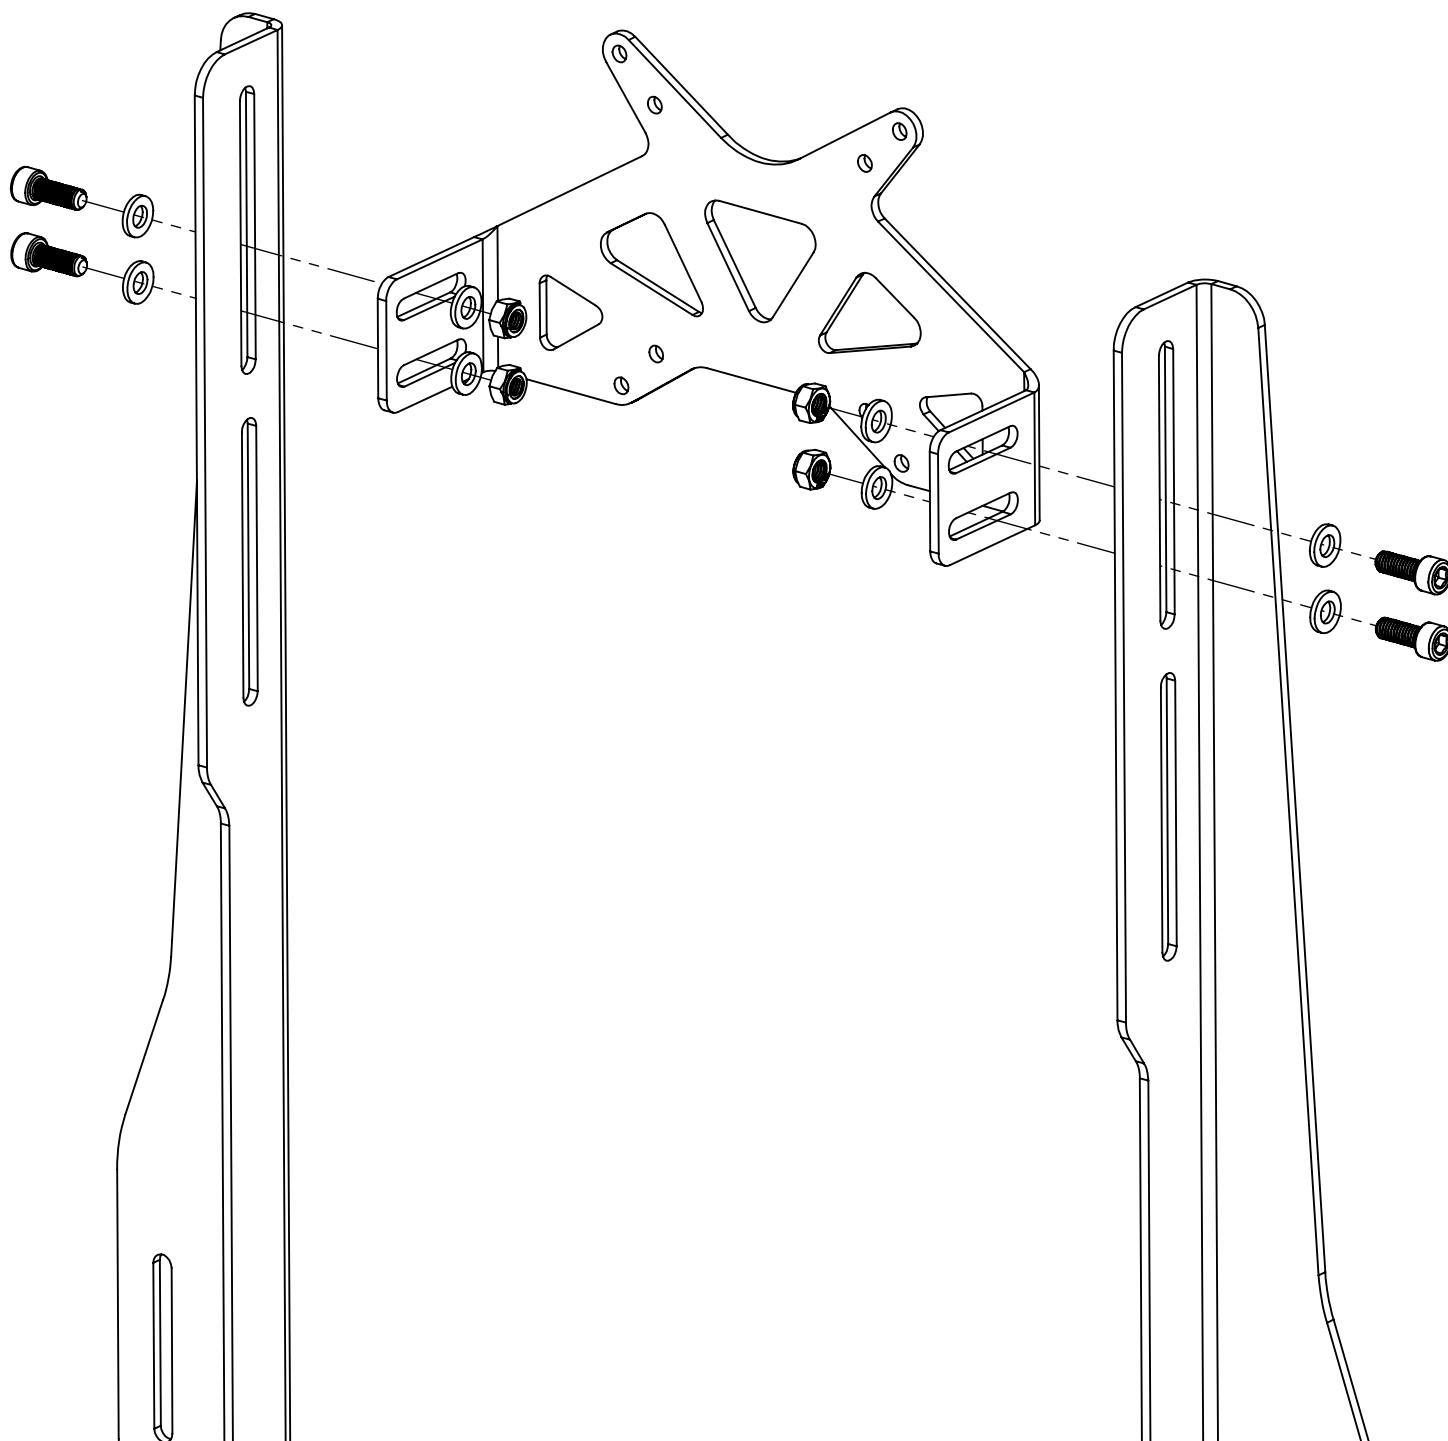



M4 Spacer
4x



M4x12
4x

3

