



INSTRUCTION MANUAL

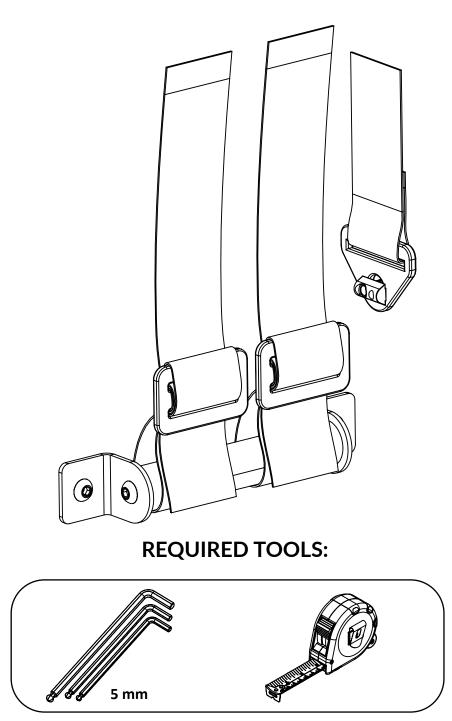





GENERAL INSTRUCTIONS

The easiest way to mount the T-Slot Click-in-Nuts, is to slide them in from one side of the profile, with the ball facing down. But don't worry if you need to put in a click-in-nut in a profile which has both ends already closed: it is also possible to push them in the T-slot anywhere you like!

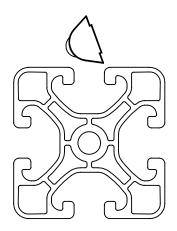

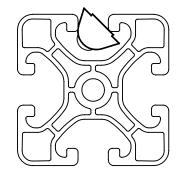


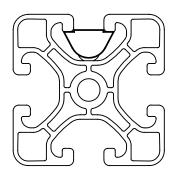

INCLUDED ITEMS



Sabelt Sim Seatbelt **1x**



Bracket **2x**



Tube D28 L=150 **1x**



M8x12 **4x**



M8x16 **2x**




M8 T-Nut **4x**




M8 Washer 2x



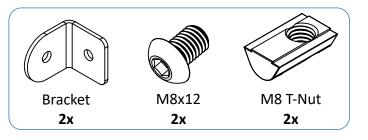





Attach the two brackets to the back of your simulator.

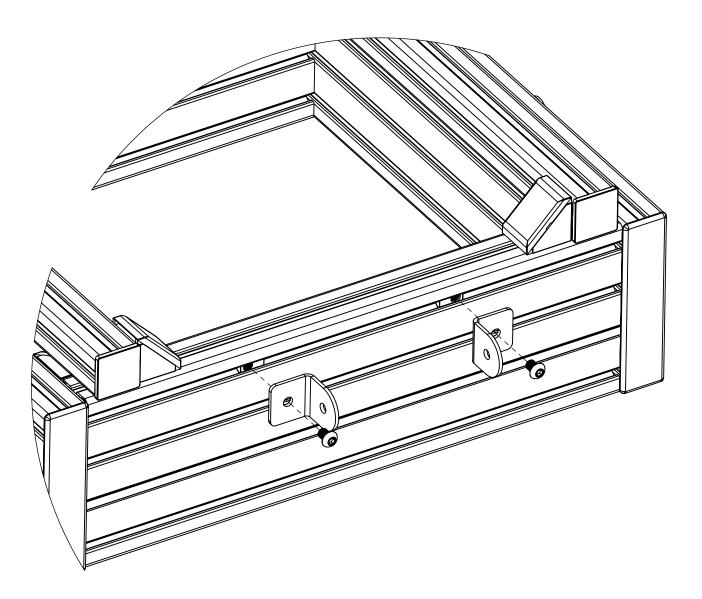




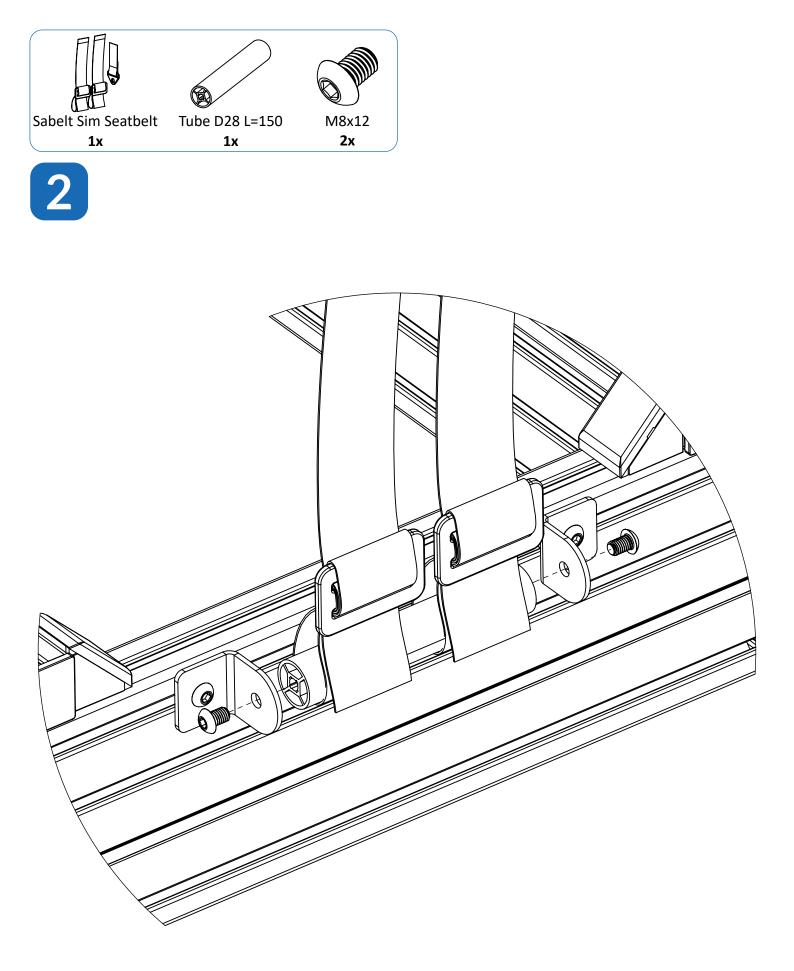



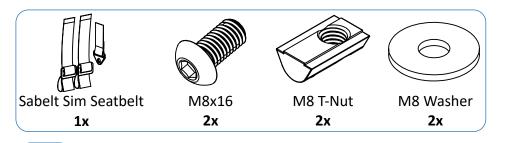



Attach the short straps of the seatbelts to both sides of your rig.

