



# STANDARD VESA BRACKET

## INSTRUCTION MANUAL

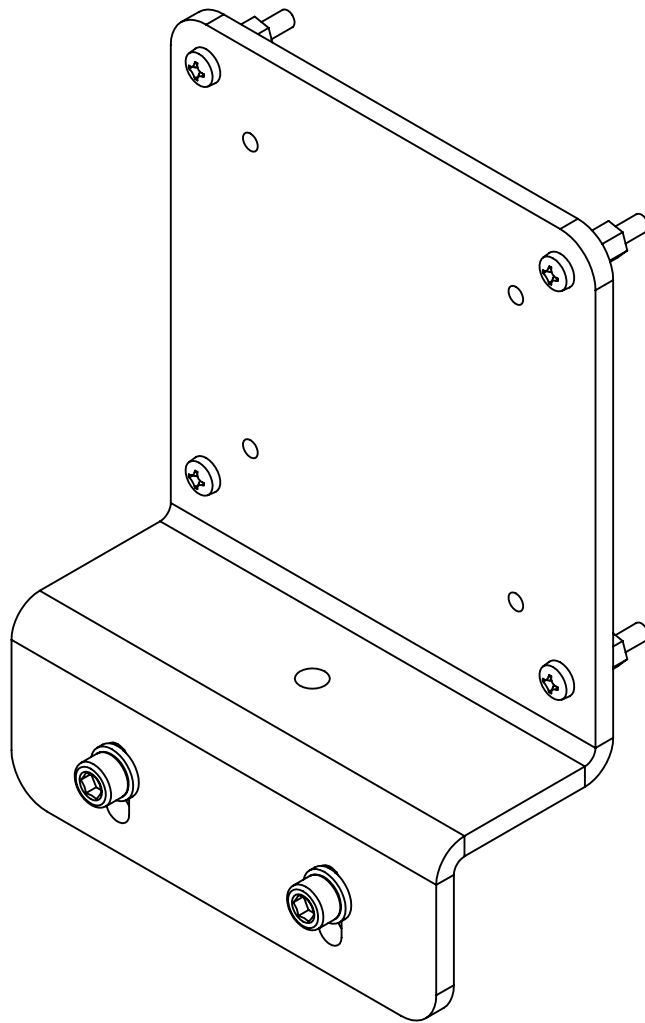


### REQUIRED TOOLS:

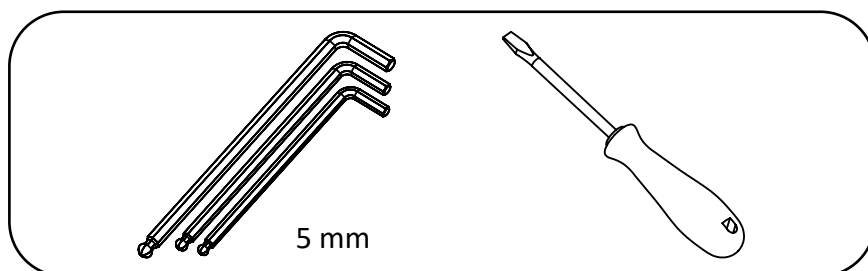


# GENERAL INSTRUCTIONS

The easiest way to mount the T-Slot Click-in-Nuts, is to slide them in from one side of the profile, with the ball facing down. But don't worry if you need to put in a click-in-nut in a profile which has both ends already closed: it is also possible to push them in the T-slot anywhere you like!

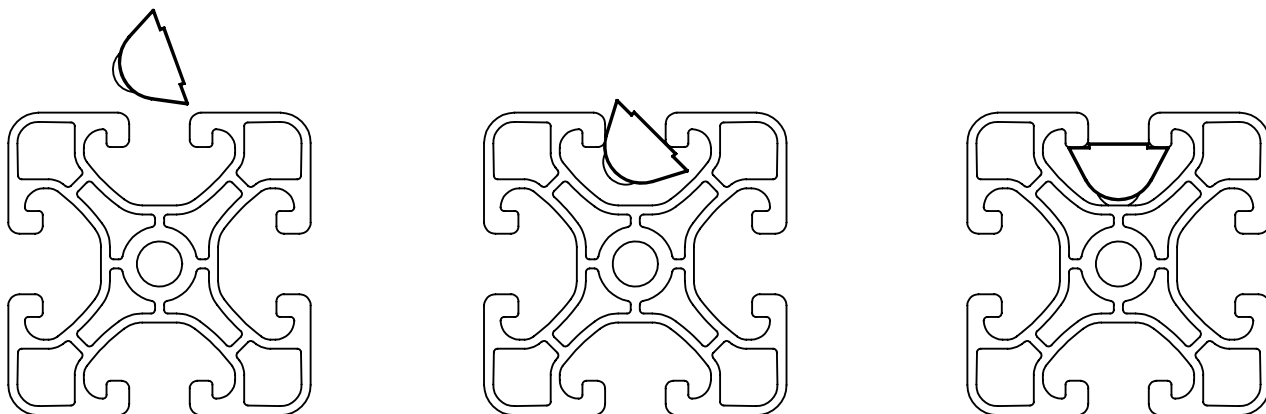


## INCLUDED ITEMS

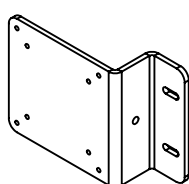

VESA Bracket  
**1x**



M4x12  
**4x**



M4 Spacer  
**4x**




M6x16  
**2x**



M6 T-Nut  
**2x**




M6 Washer  
**2x**




M4 Spacer  
4x

1


Screw the M4 spacers into the back of your monitor. Using a tool is not necessary. Turning them by hand is fine, because you will tighten them on the next page when applying a screw driver.

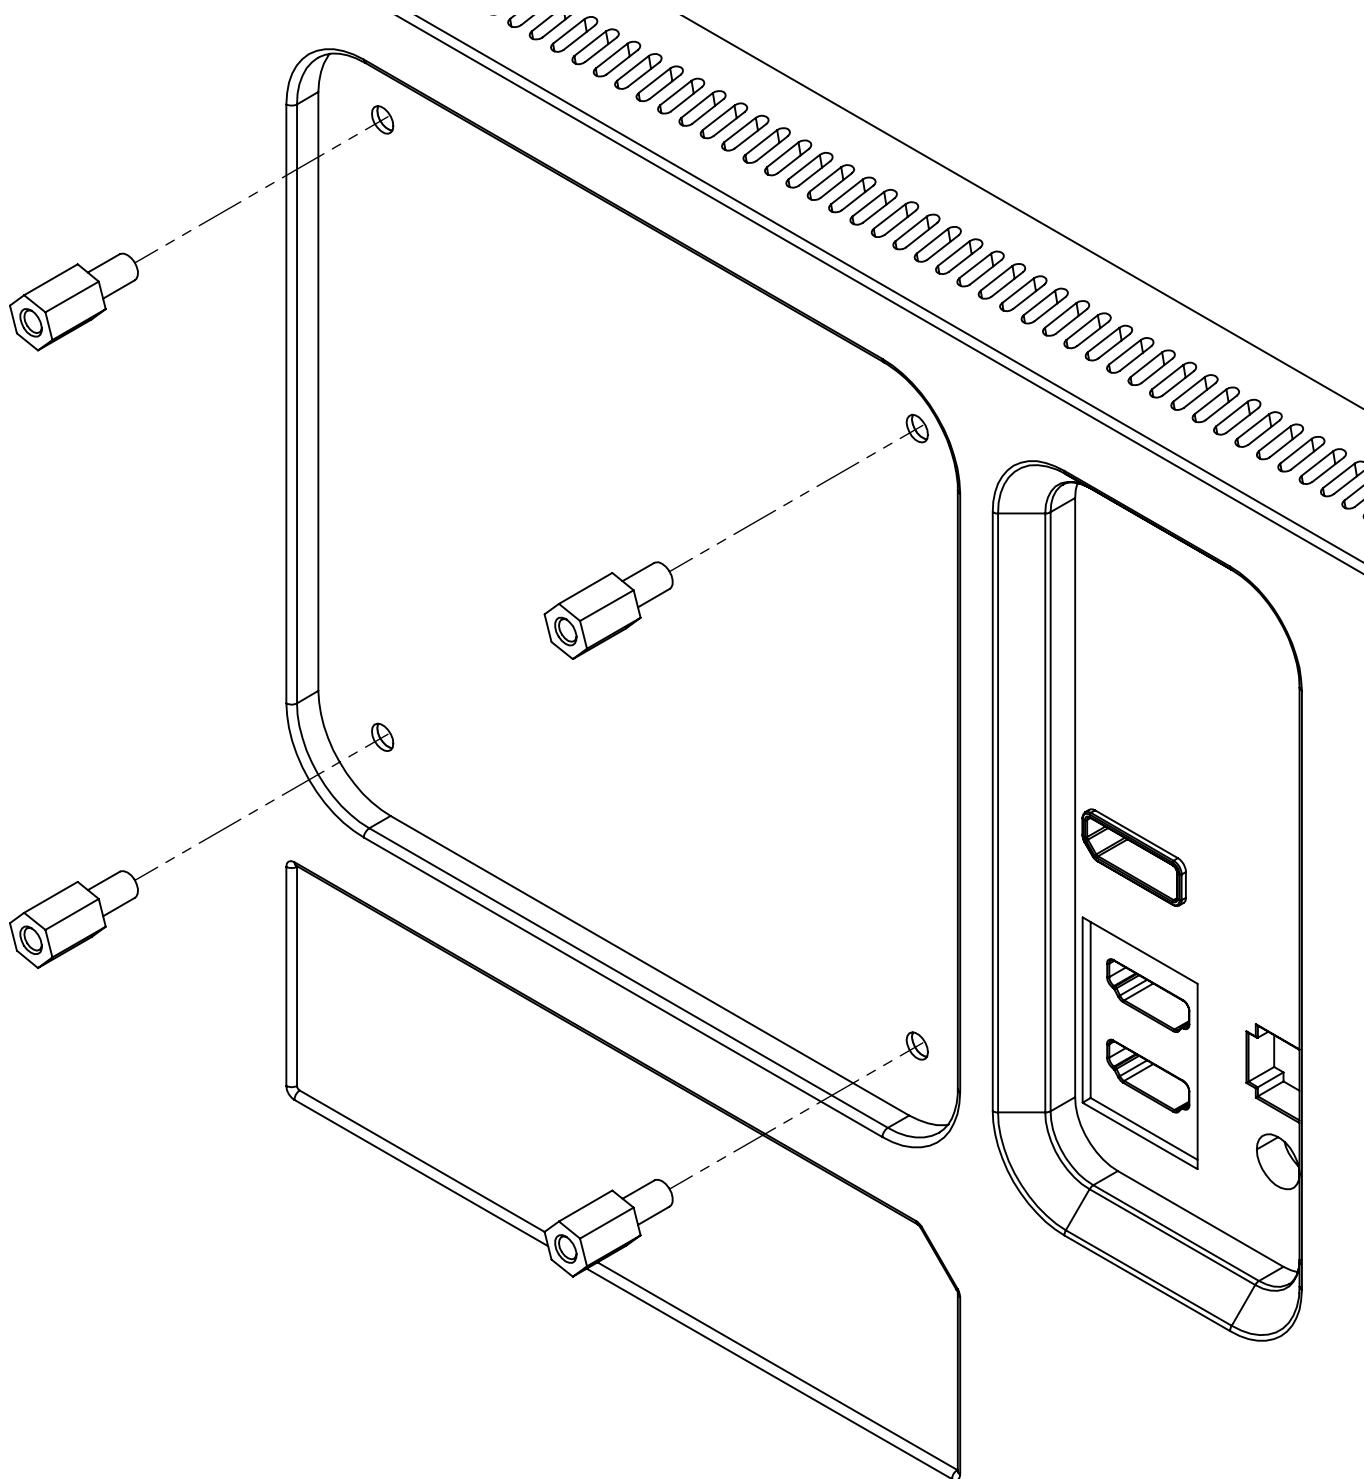

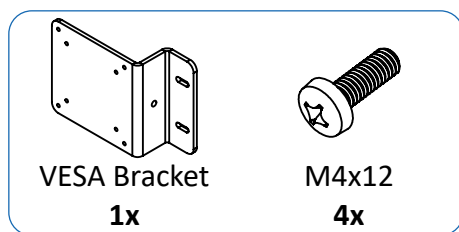

2

Mount the VESA Bracket to the back of your monitor, using a screw driver.

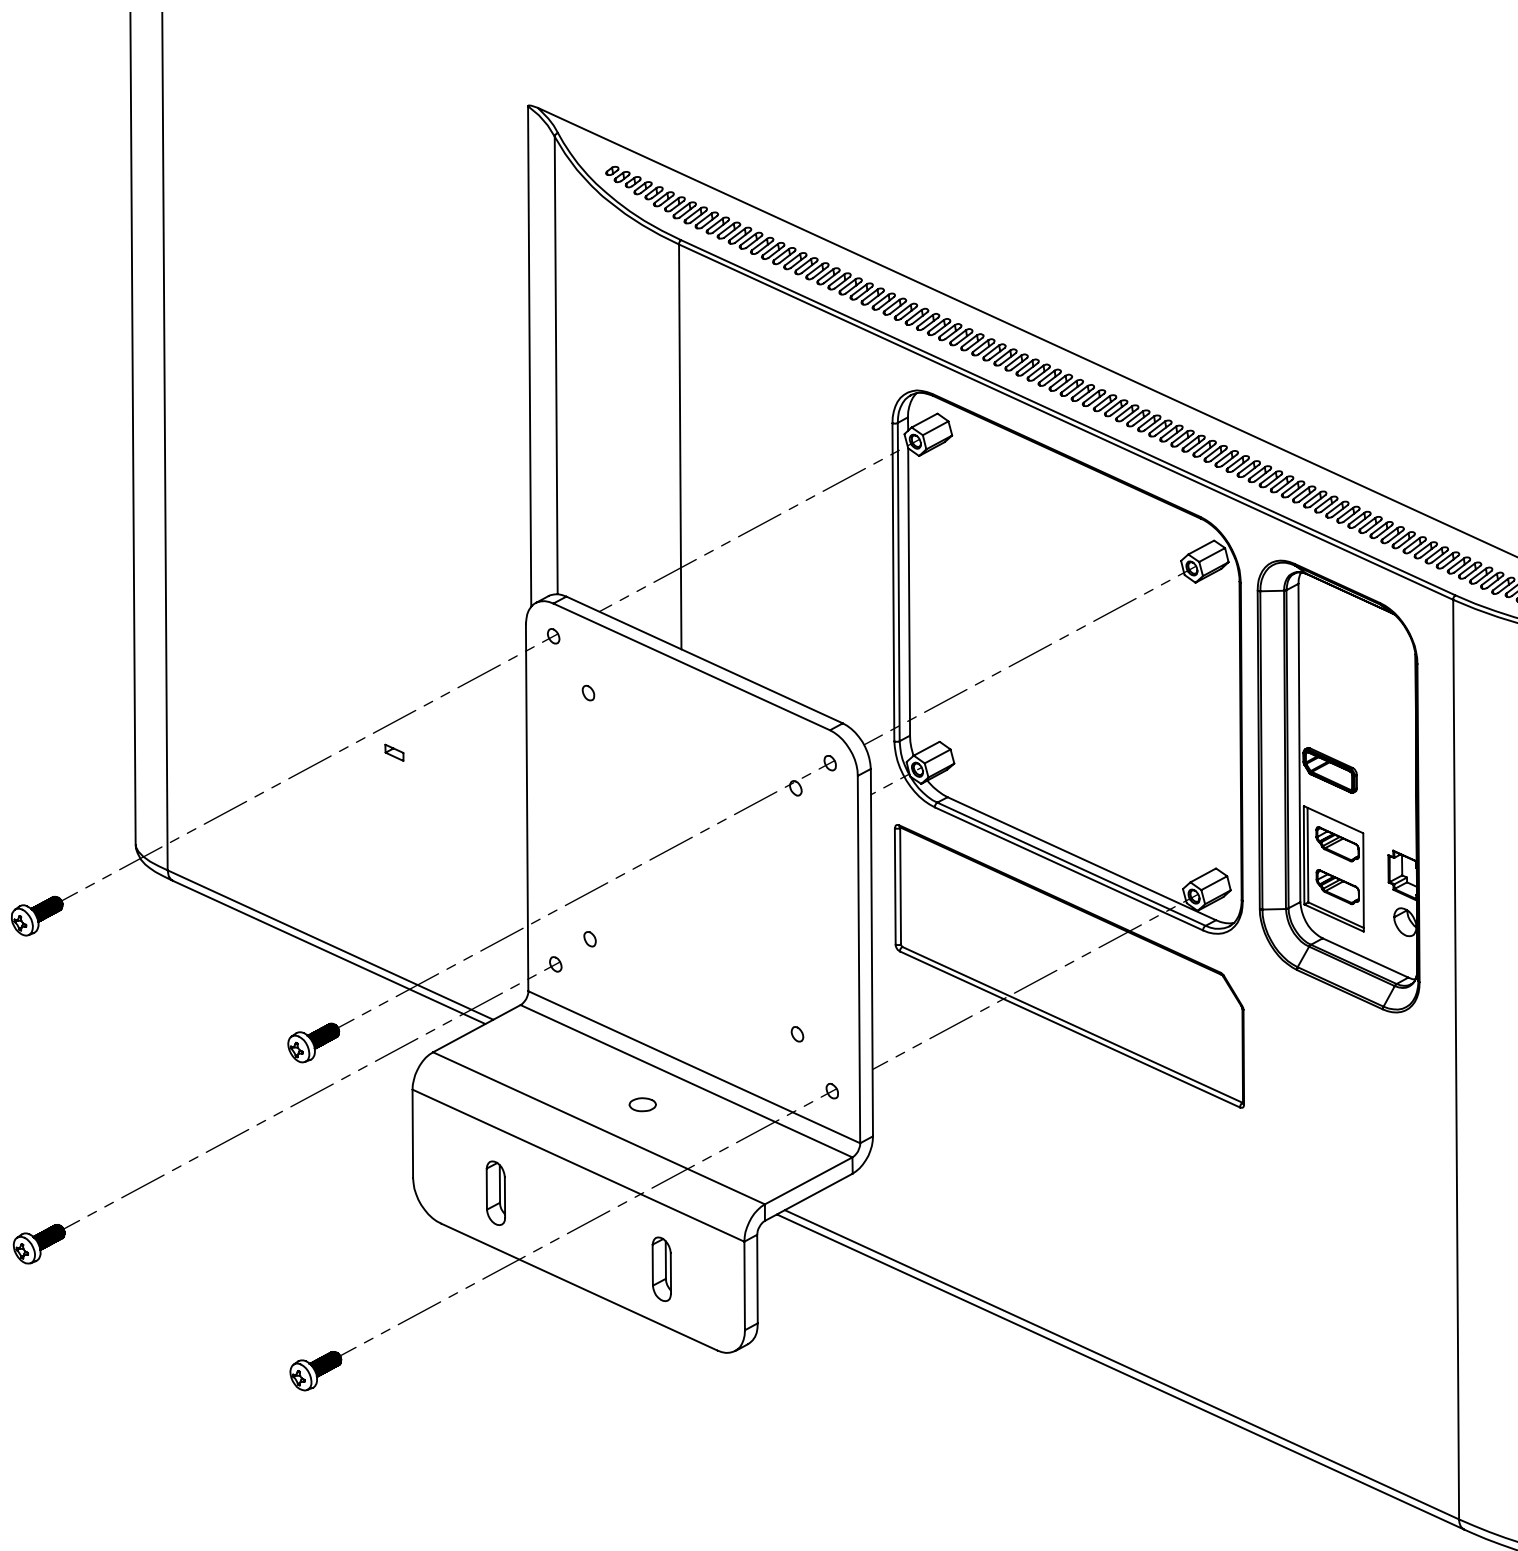



M6 T-Nut  
2x

3

Place the M6 T-nuts where the VESA Bracket is going to be.



M6x16  
2x



M6 Washer  
2x

4

Mount the monitor / VESA Bracket on its desired position.

