



MOUSE PAD

INSTRUCTION MANUAL

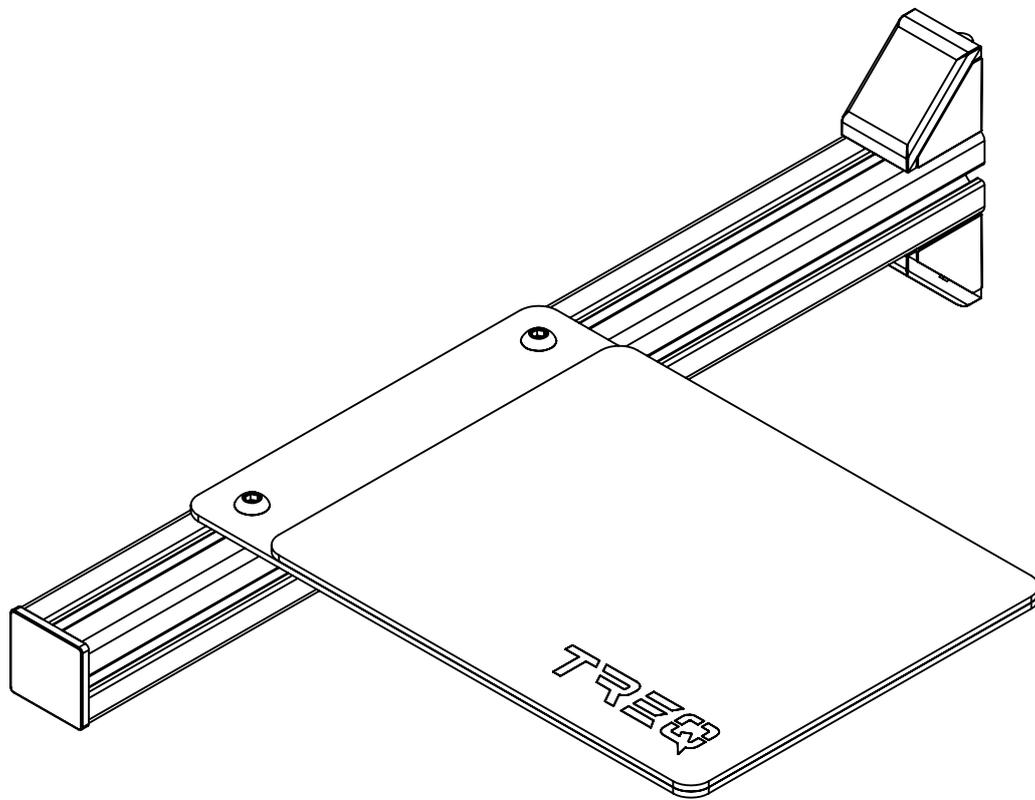


REQUIRED TOOLS:

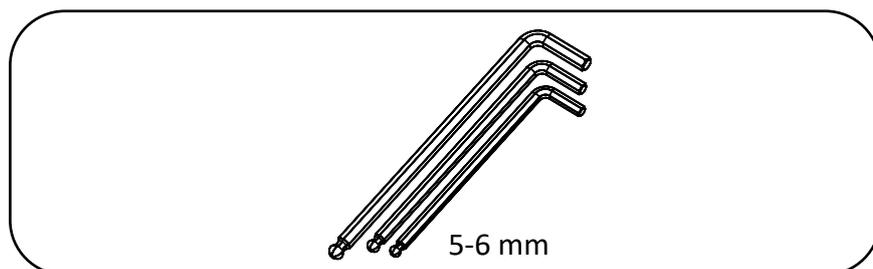

GENERAL INSTRUCTIONS

The easiest way to mount the T-Slot Click-in-Nuts, is to slide them in from one side of the profile, with the ball facing down. But don't worry if you need to put in a click-in-nut in a profile which has both ends already closed: it is also possible to push them in the T-slot anywhere you like!

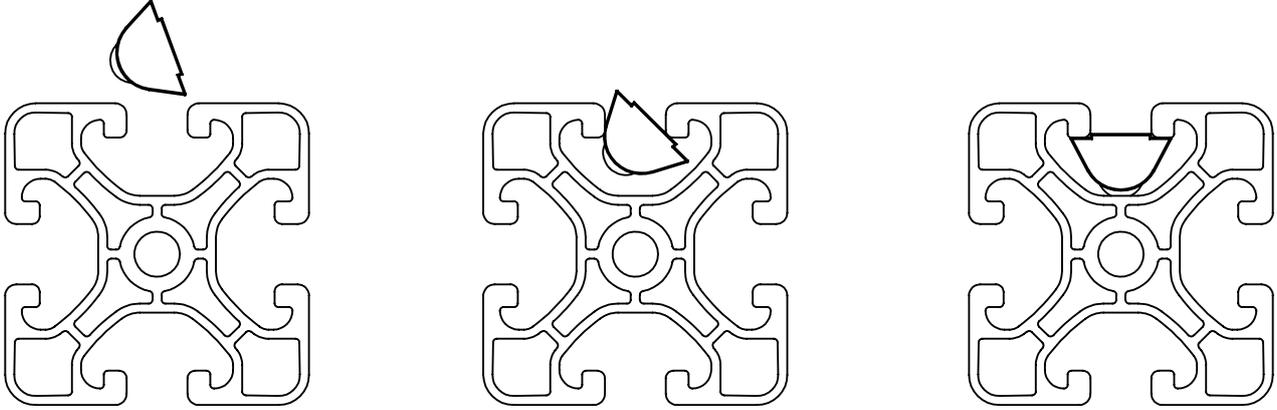

INCLUDED ITEMS



Mouse Pad
1x

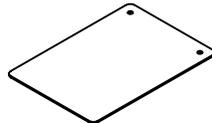


Plate
1x




M8x12
2x




M8 T-Nut
2x


Additionally with 'Profile Included' option:

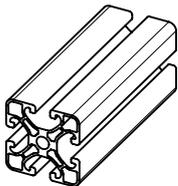

4040 L=500
1x

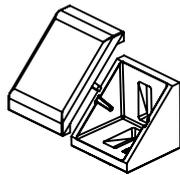

Corner Bracket
2x




Cover 4040
2x



M8x16
4x



M8 T-Nut
4x

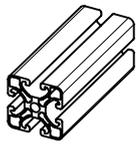

4040 L=500
1x



Corner Bracket
2x




M8x16
4x



M8 T-Nut
4x

1

Skip this step if you have the 'Plate Only' version.

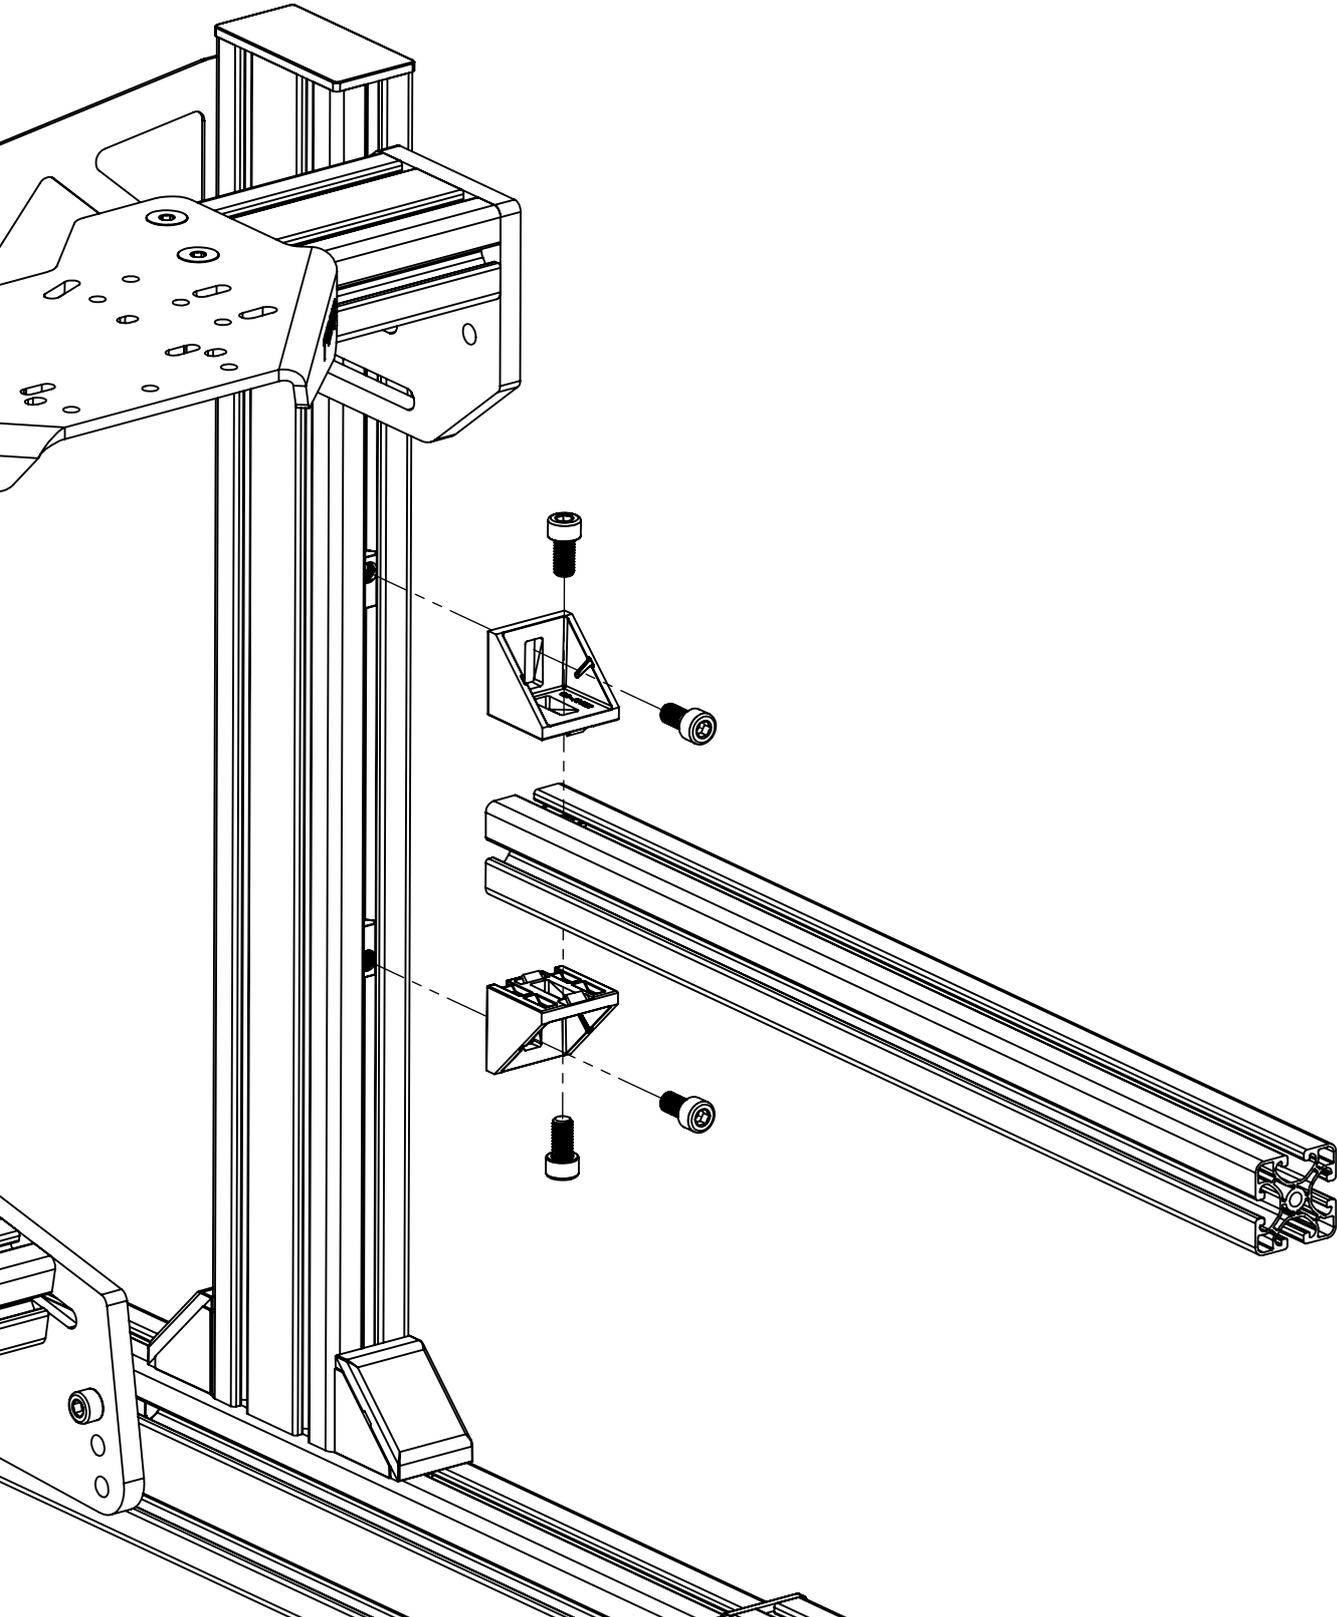



Mouse Pad
1x




Plate
1x




M8x12
2x



M8 T-Nut
2x

2

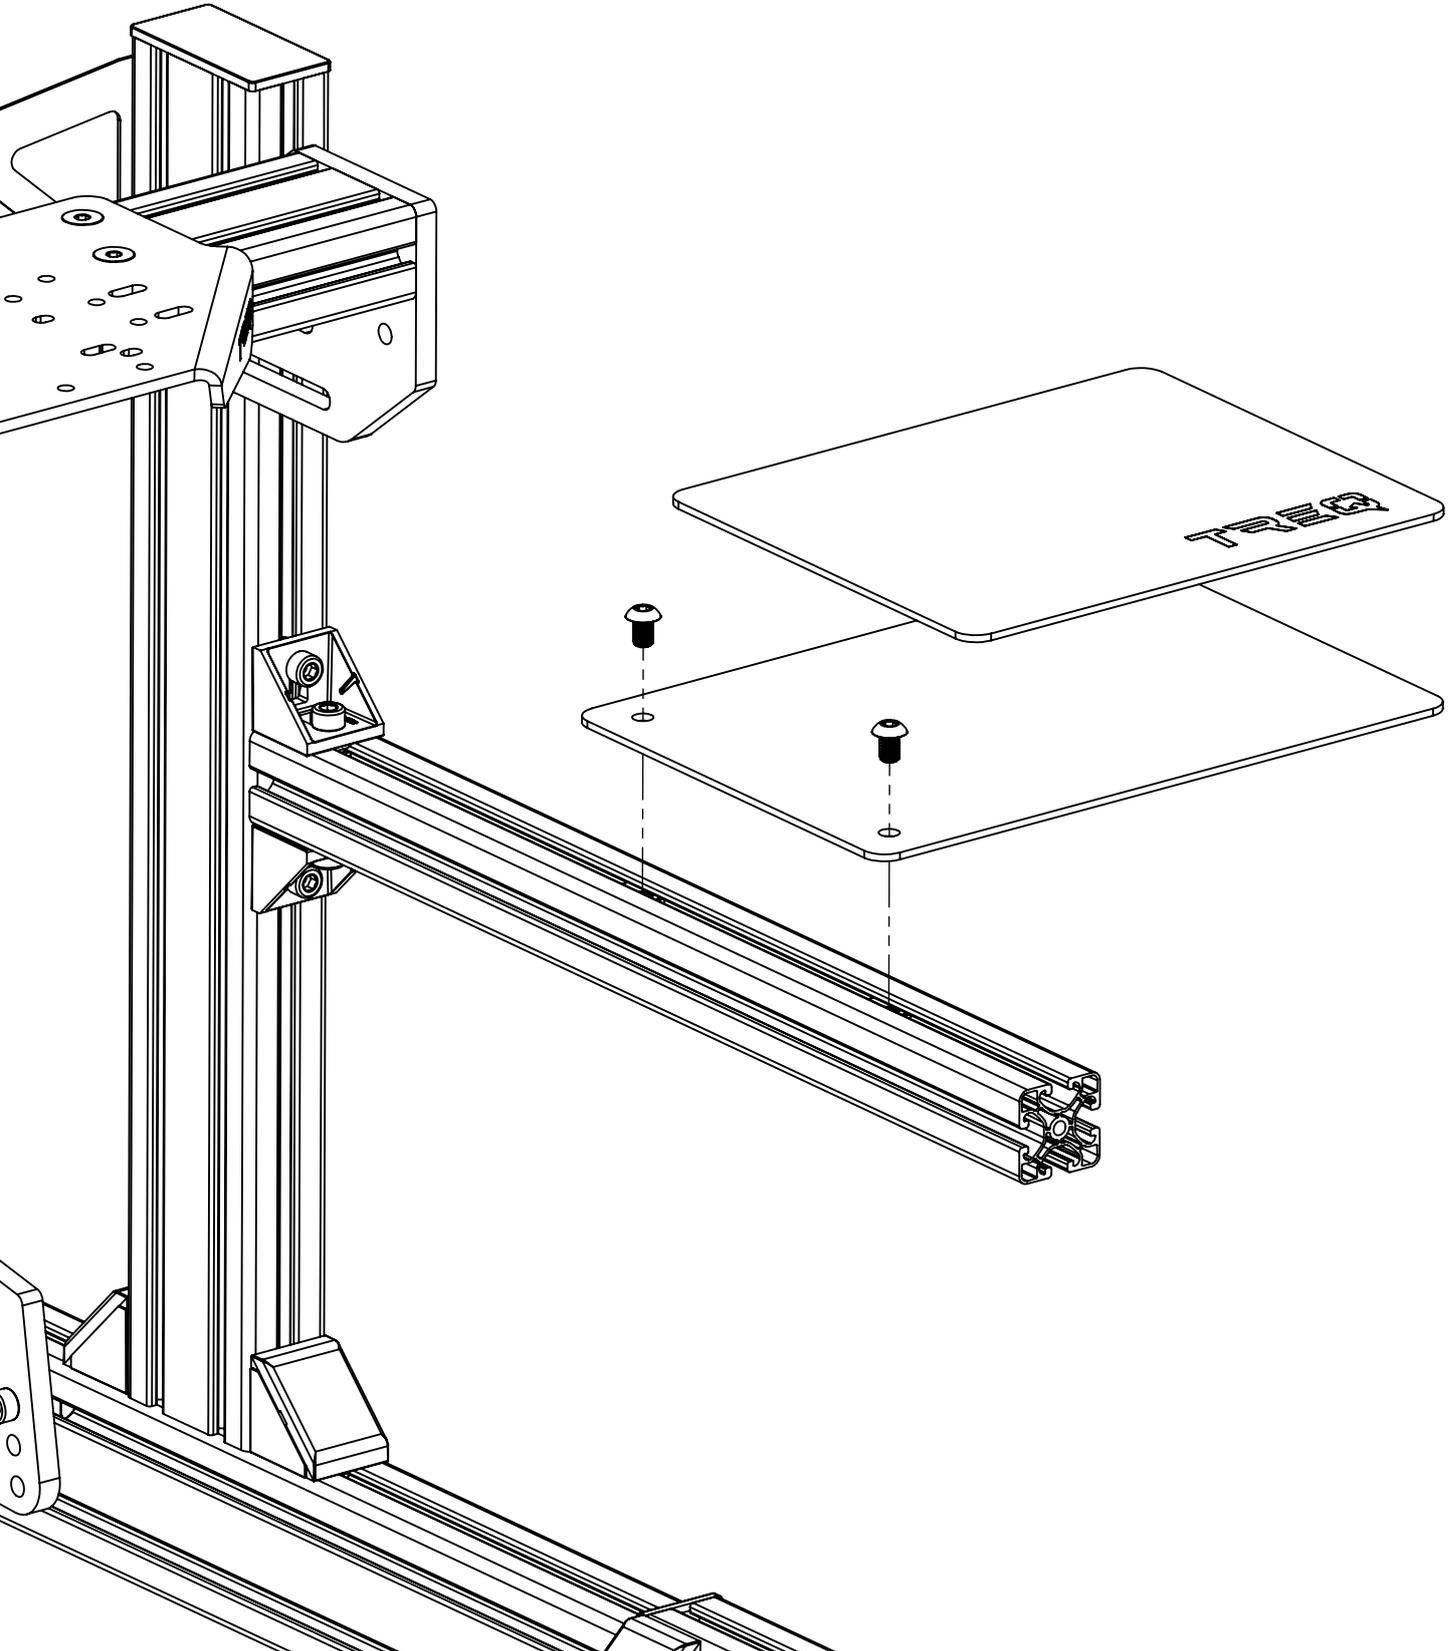

3

