



# INVERTED PEDAL DECK

## INSTRUCTION MANUAL

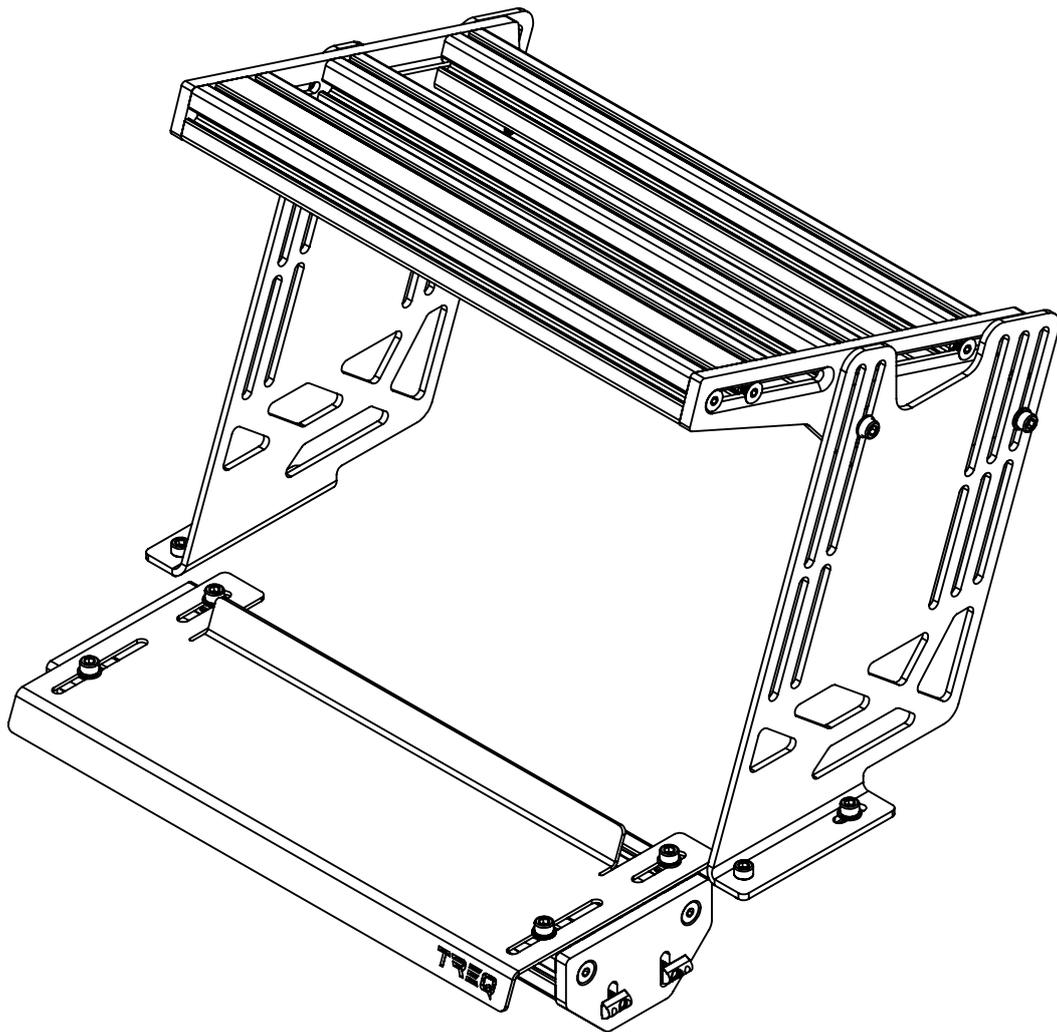


### REQUIRED TOOLS:

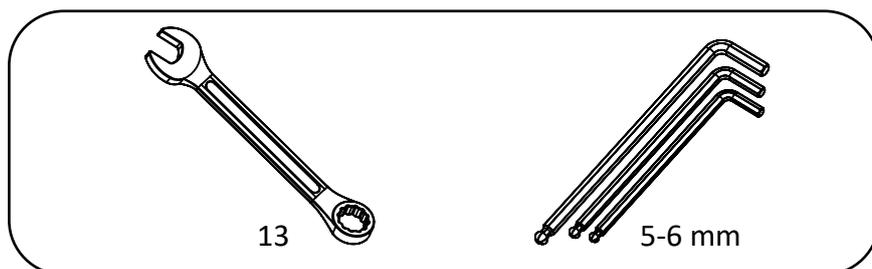


# GENERAL INSTRUCTIONS


The easiest way to mount the T-Slot Click-in-Nuts, is to slide them in from one side of the profile, with the ball facing down. But don't worry if you need to put in a click-in-nut in a profile which has both ends already closed: it is also possible to push them in the T-slot anywhere you like!

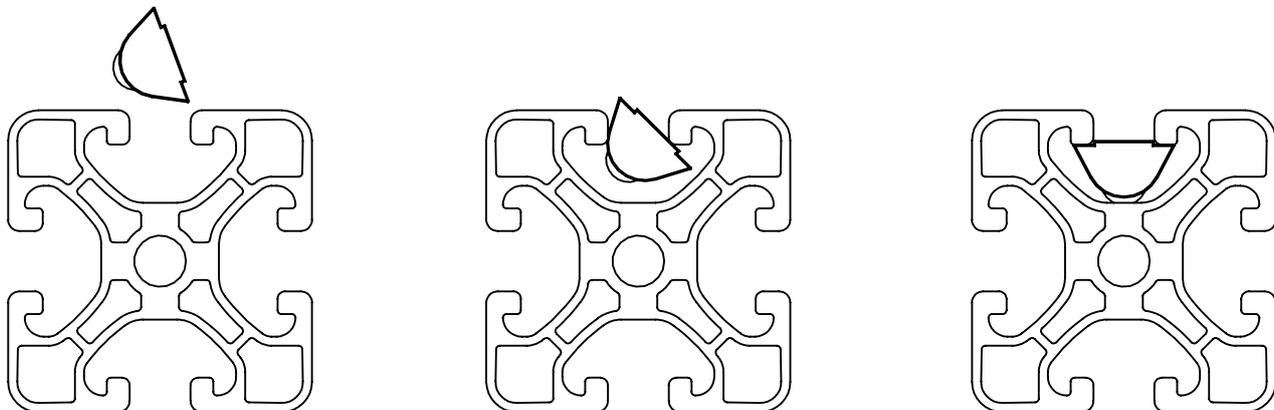


## INCLUDED ITEMS

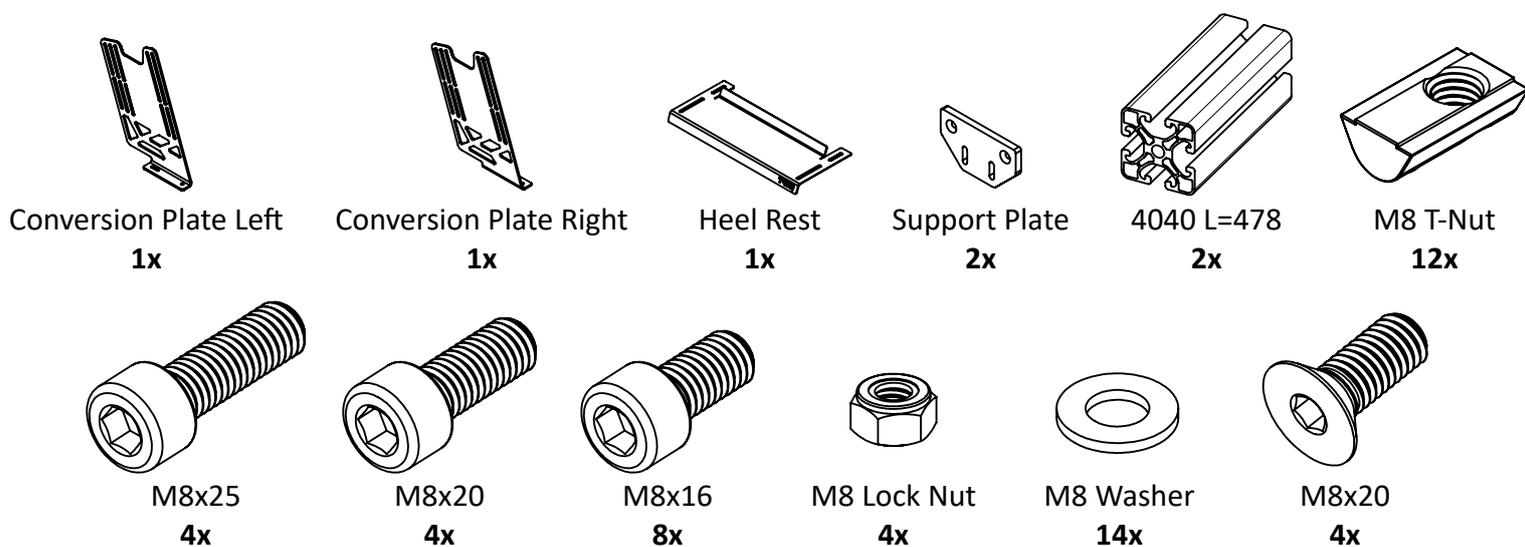


## EXTRA ITEMS INCLUDED WITH THE 'COMPLETE KIT'

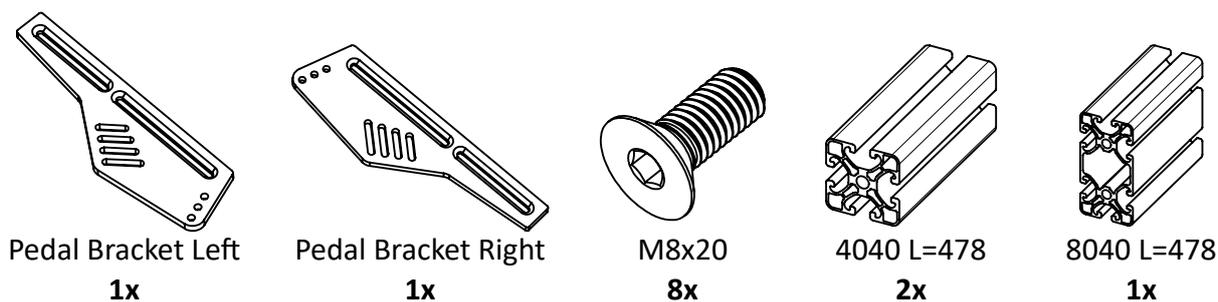

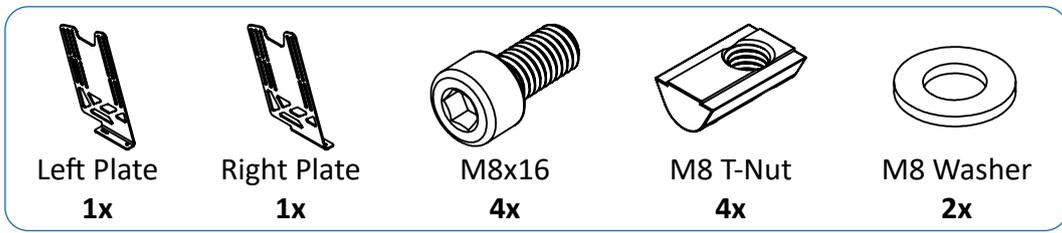


**1**

Attach the two brackets to your simulator.

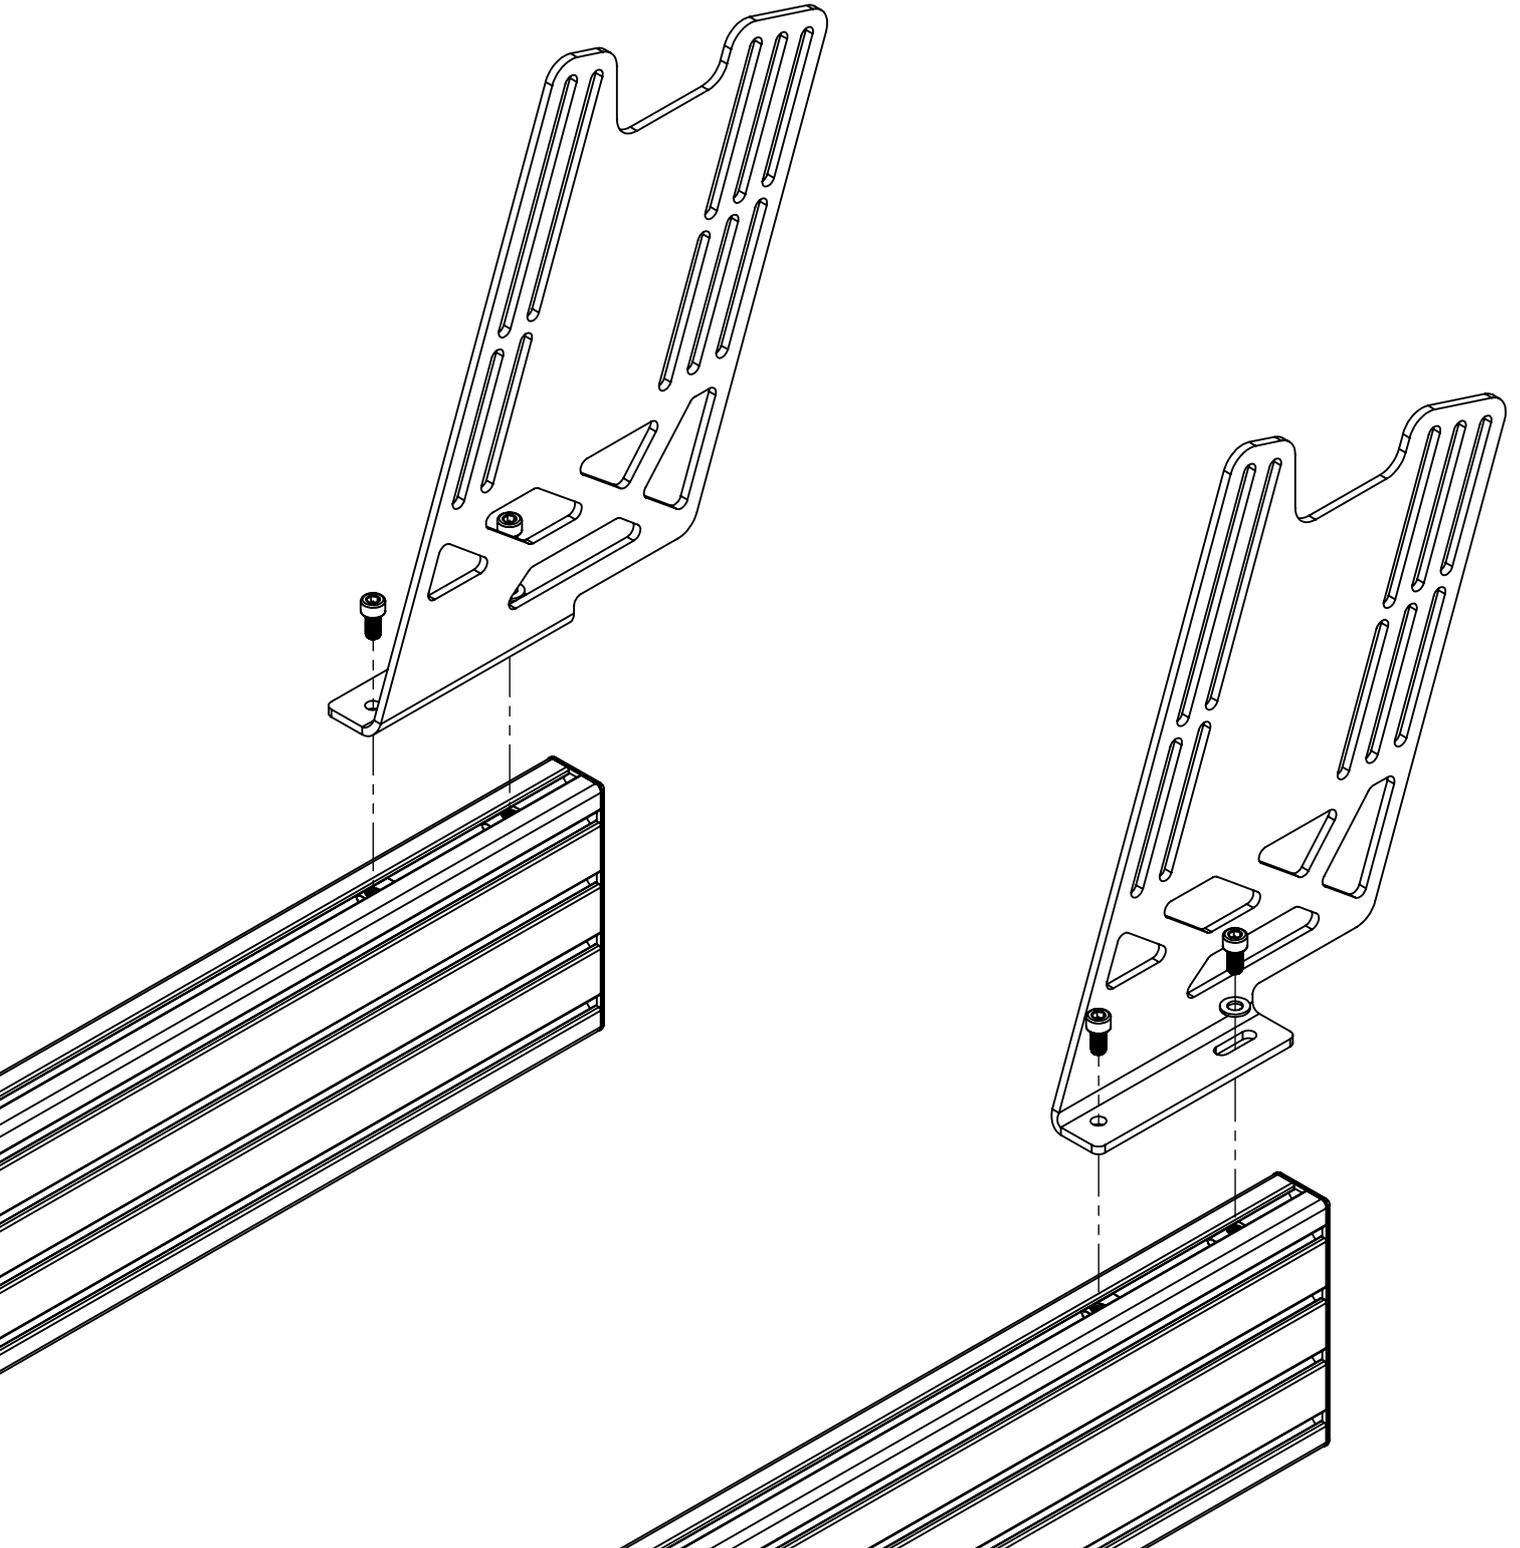



Support Plate  
2x

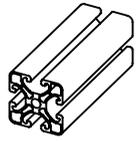


4040 L=478  
2x



M8x20  
4x

2

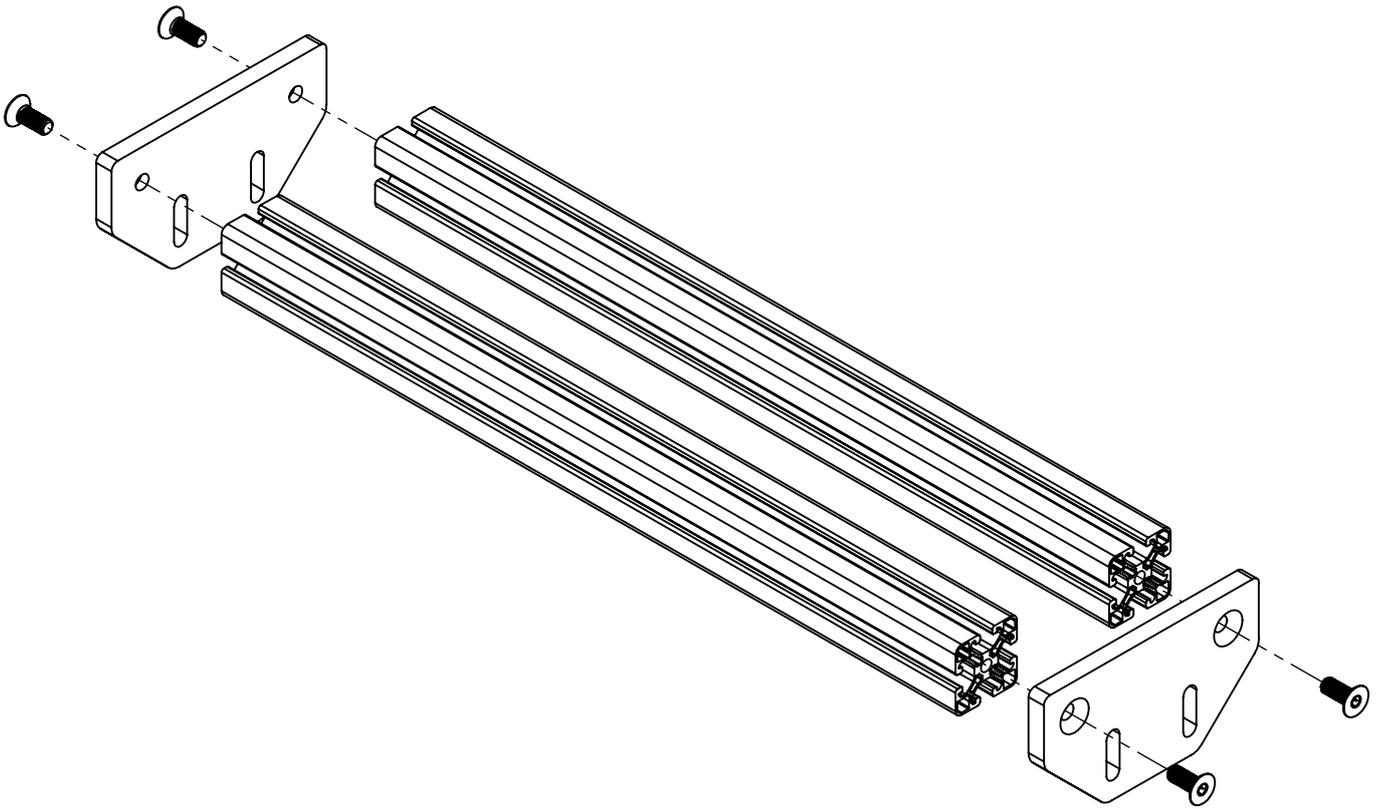




M8x20  
4x




M8 T-Nut  
4x




M8 Washer  
4x

3

Attach the Heel Rest Support Frame to your rig. You can also flip and/or rotate this part.

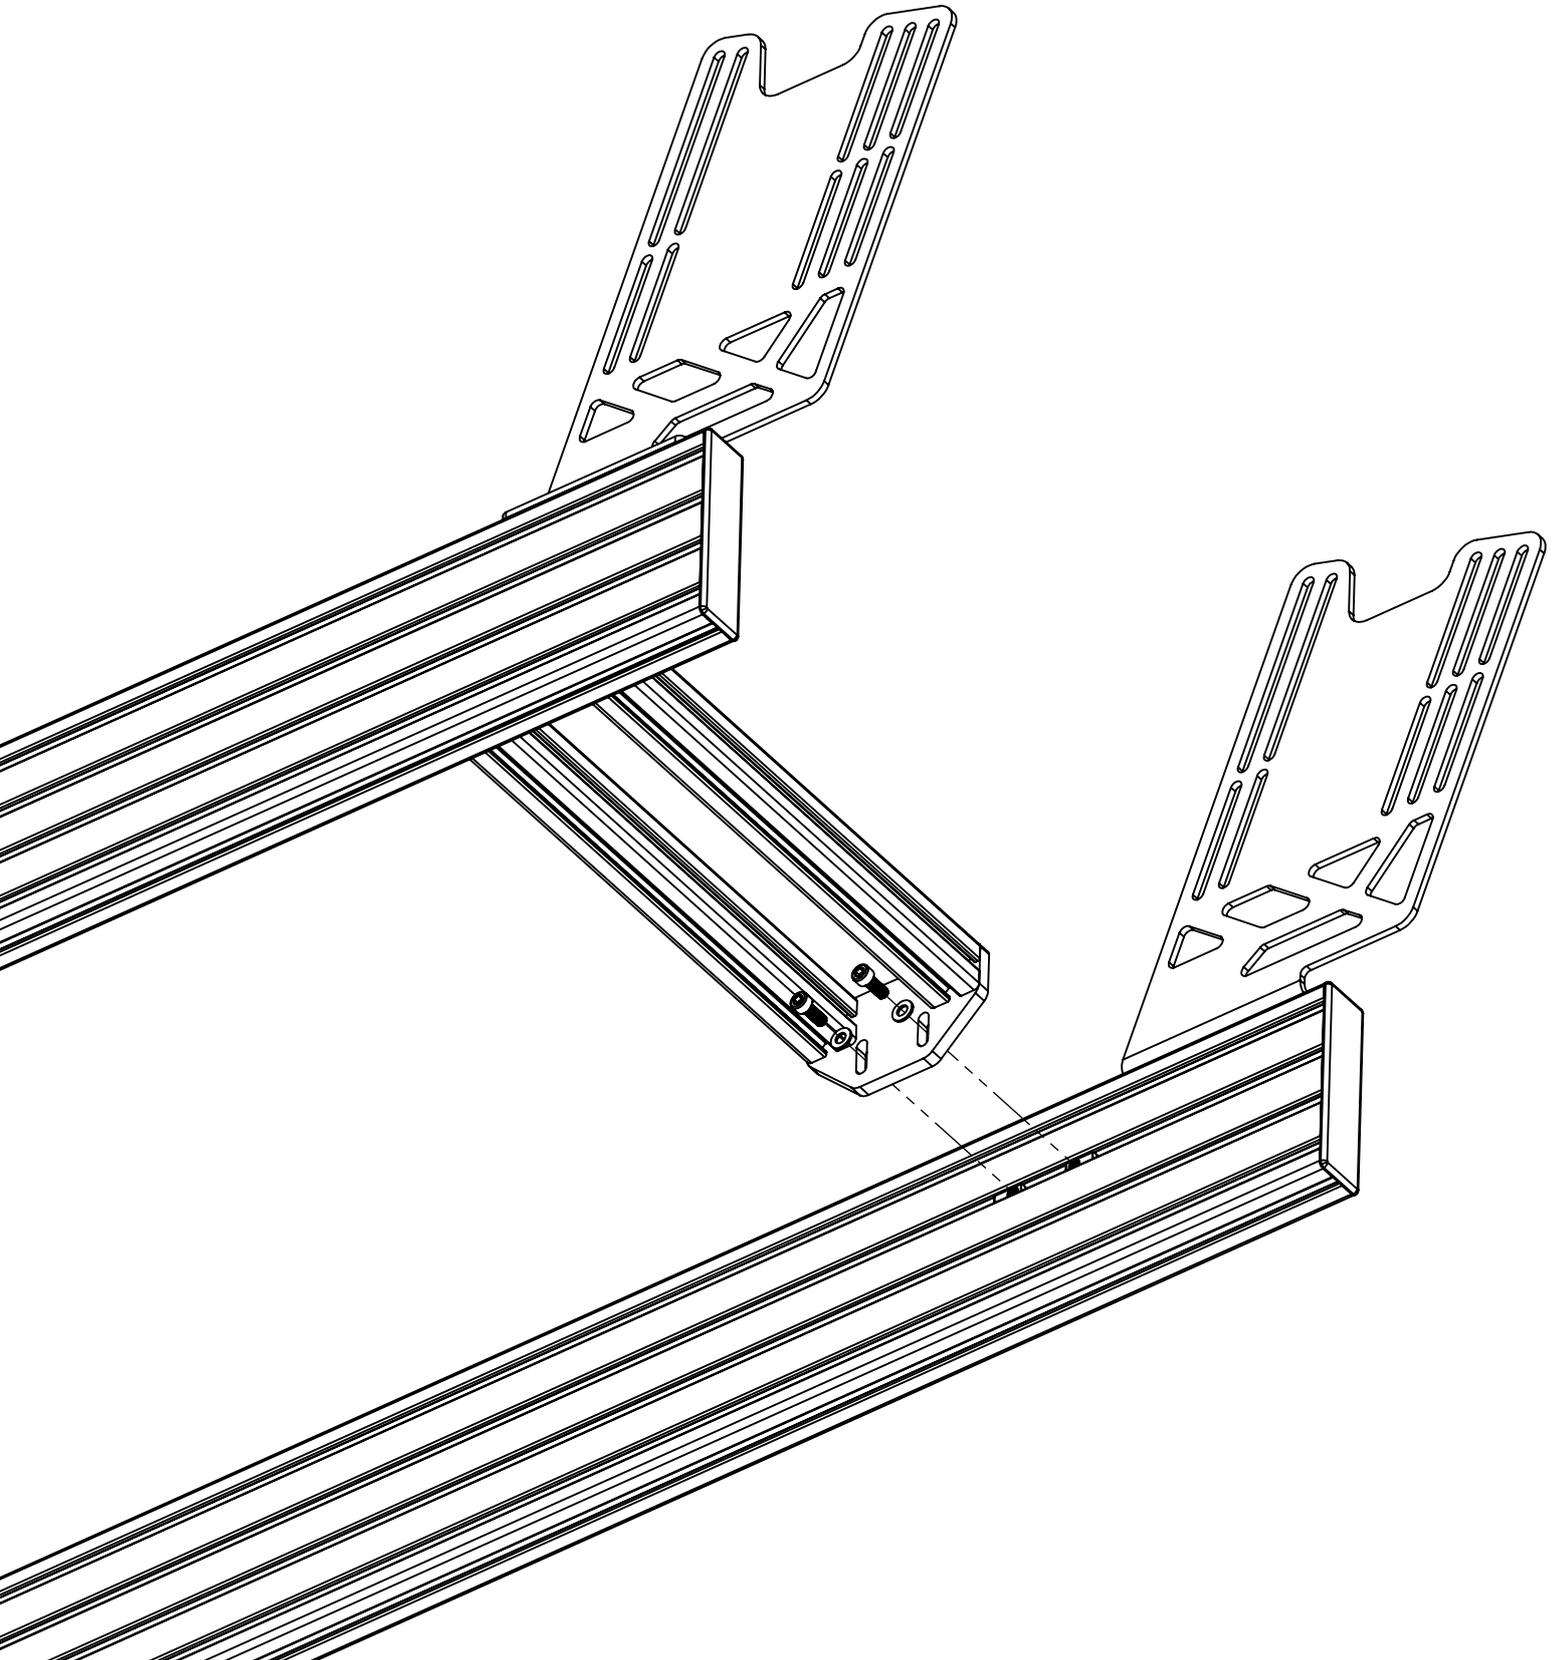

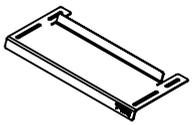


Heel Rest  
1x



M8x16  
4x




M8 T-Nut  
4x




M8 Washer  
4x

4

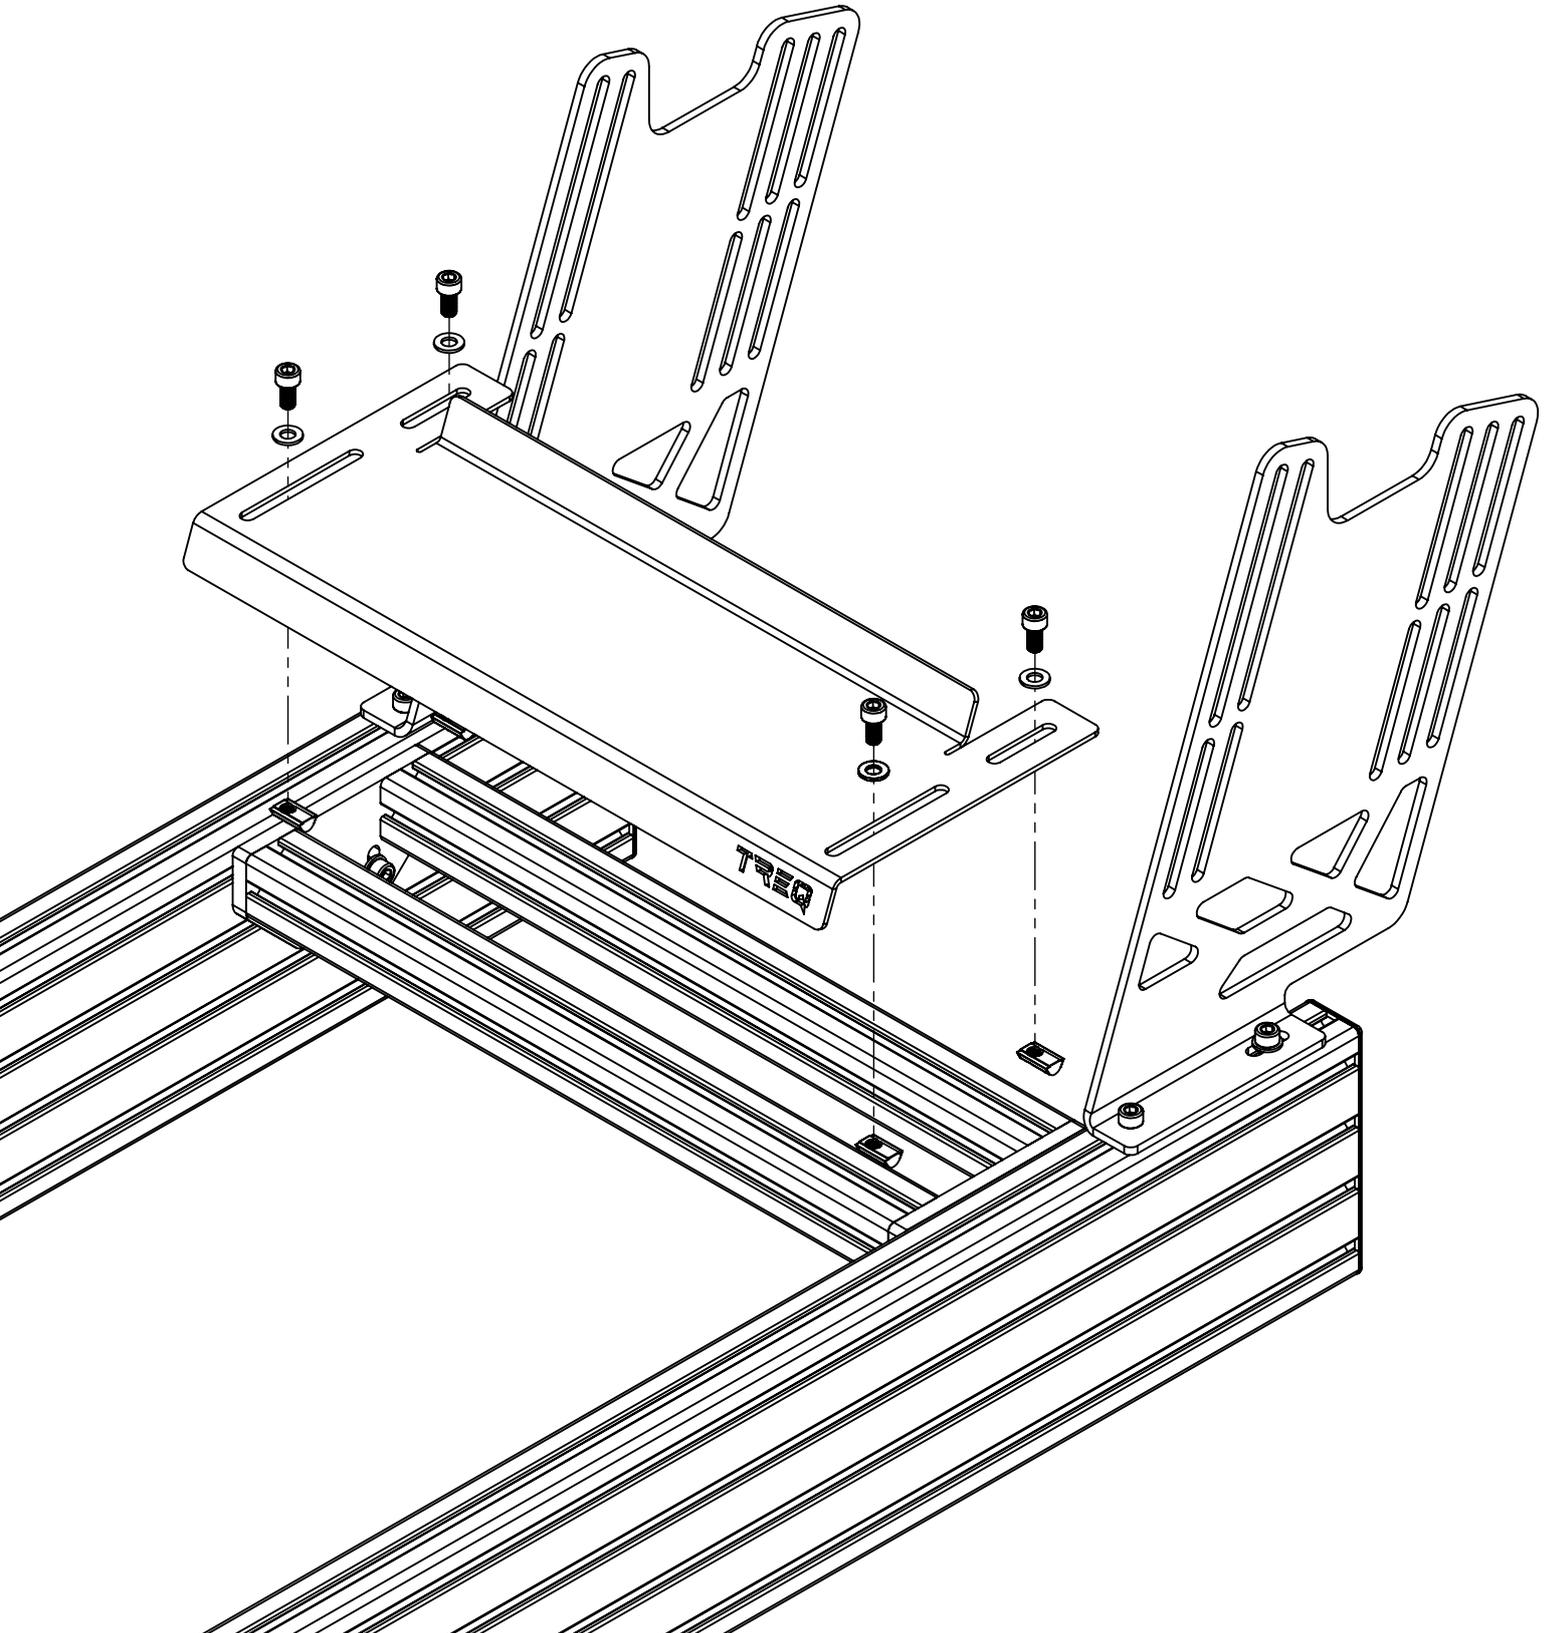




Pedal Bracket  
2x



8040 L=478  
1x

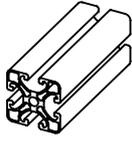



4040 L=478  
2x



M8x20  
8x

**5**

Skip this step if your Pedal Deck is already installed.

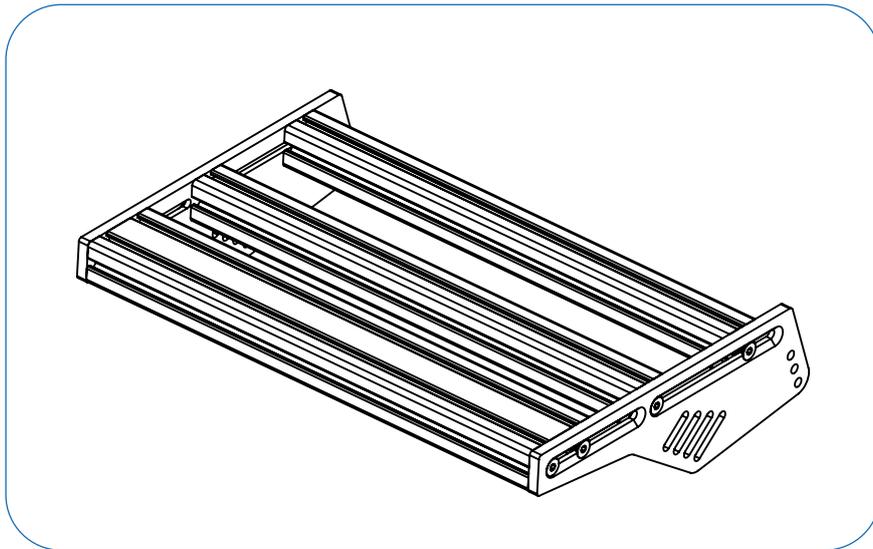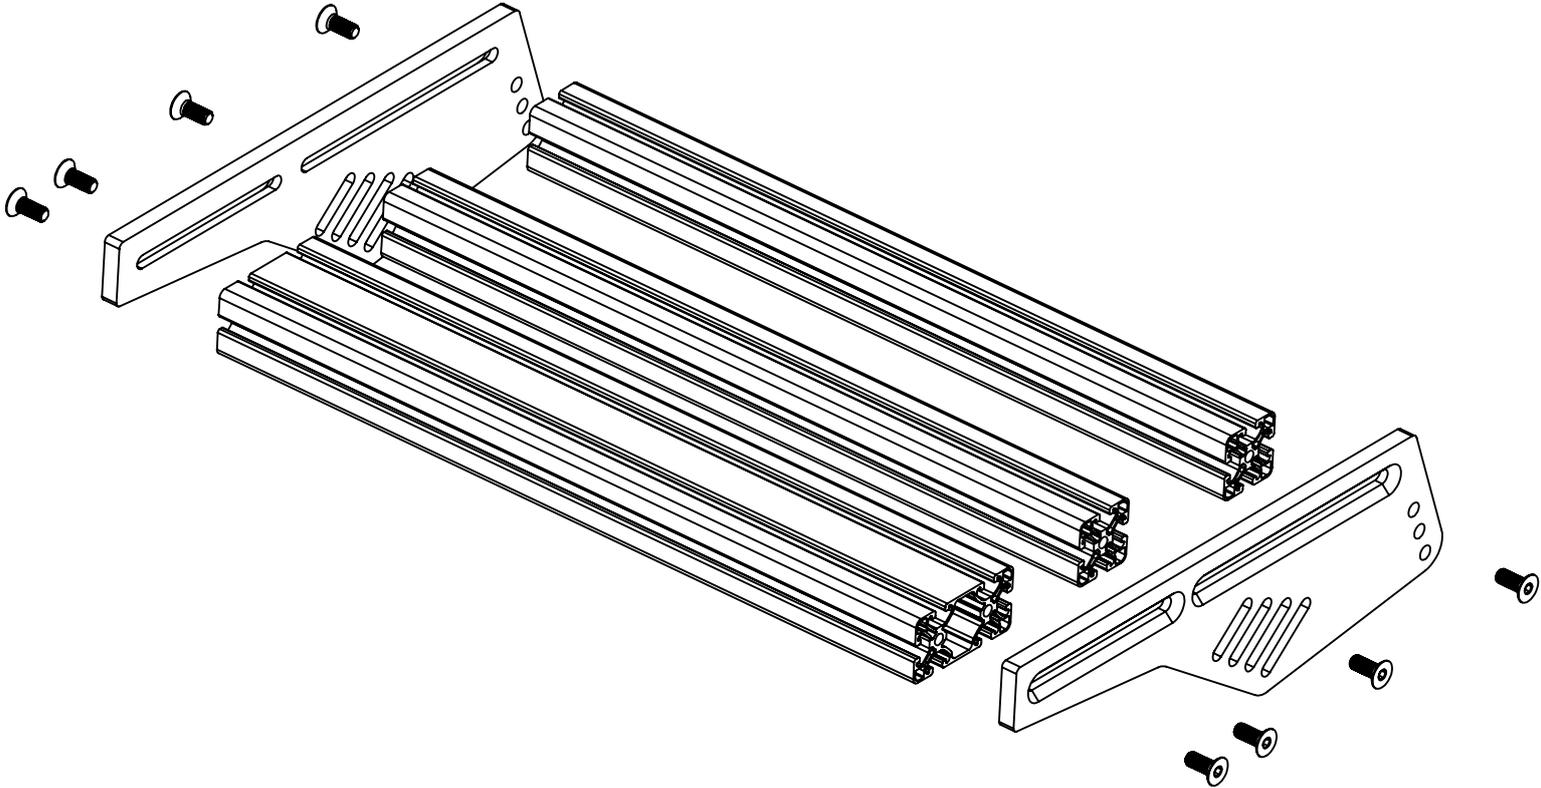




M8x25  
4x



M8 Lock Nut  
4x



M8 Washer  
6x

6

