



UNIFIED TRIPLE MONITOR MOUNT 4040

INSTRUCTION MANUAL

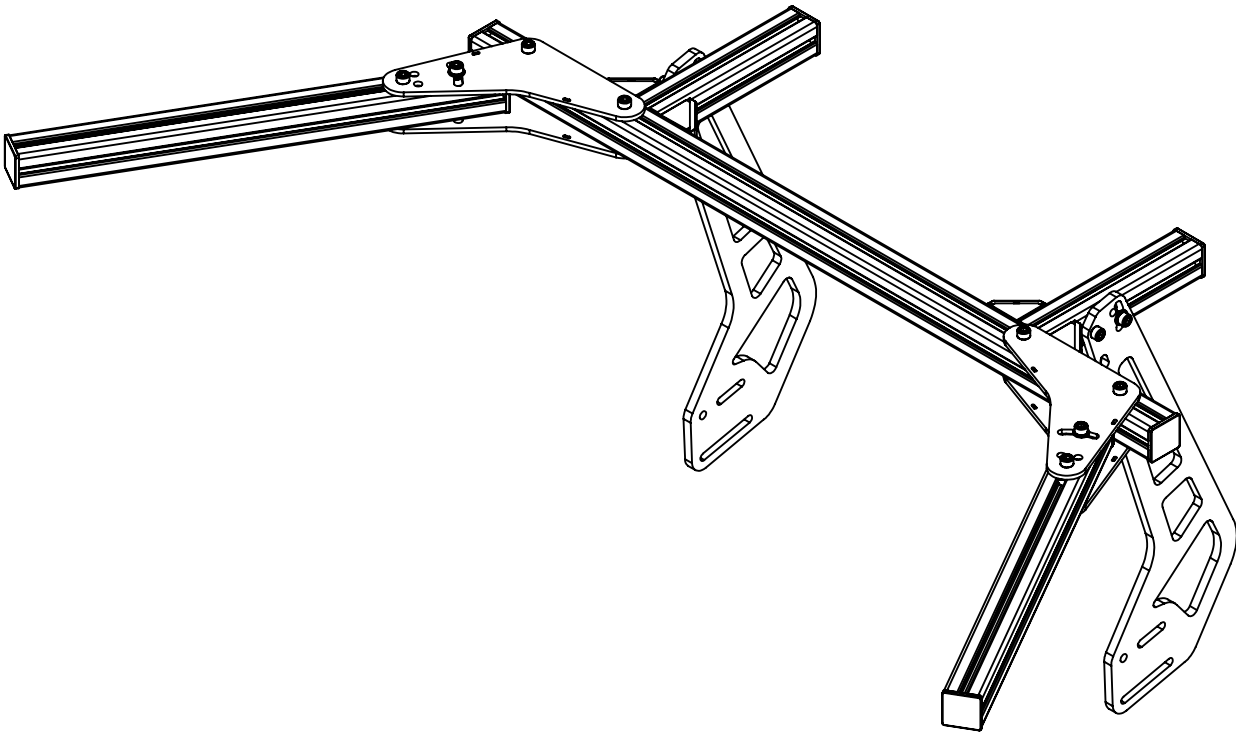


REQUIRED TOOLS:

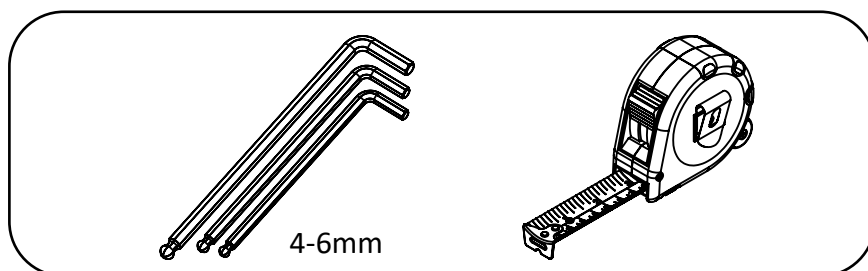


GENERAL INSTRUCTIONS

The easiest way to mount the T-Slot Click-in-Nuts, is to slide them in from one side of the profile, with the ball facing down. But don't worry if you need to put in a click-in-nut in a profile which has both ends already closed: it is also possible to push them in the T-slot anywhere you like!

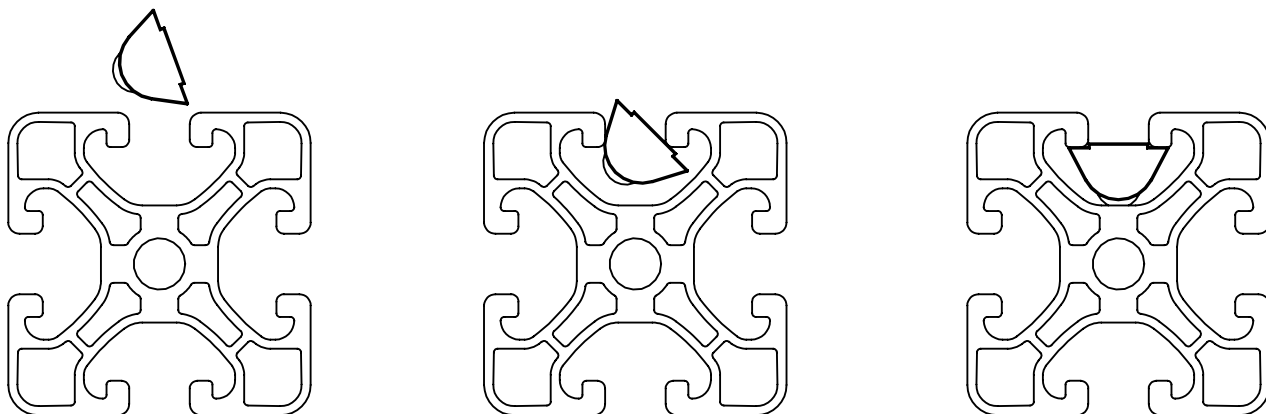


INCLUDED ITEMS

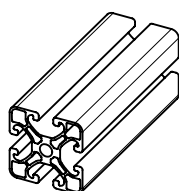


4040 L=220

2x

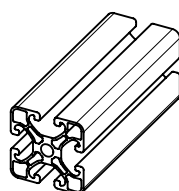


4040 L=500

2x

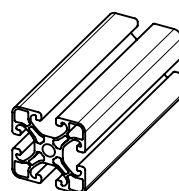


4040 L=950

1x

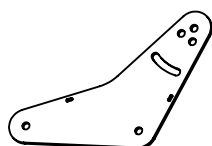


Connector Plate

4x

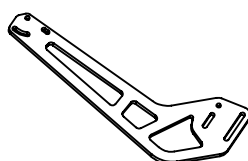


Unified Bracket

2x

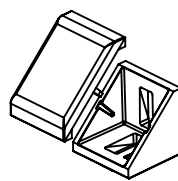


Corner Bracket

4x




Cover 4040

8x

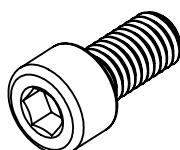


M8x16

8x

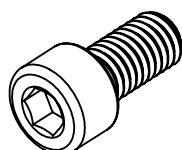

M8x16 (Black)

16x

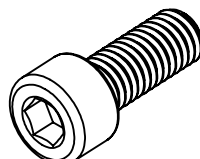


M8x20 (Black)

10x




M8 T-Nut

34x



M8 Washer


10x

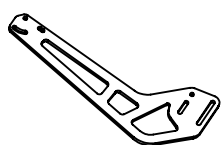


Unified Bracket
2x



M8 T-Nut
6x

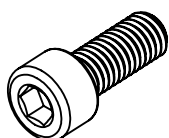


M8x20
6x

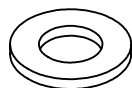


M8 Washer
4x

1

Mount the Unified Brackets to the uprights of your rig.

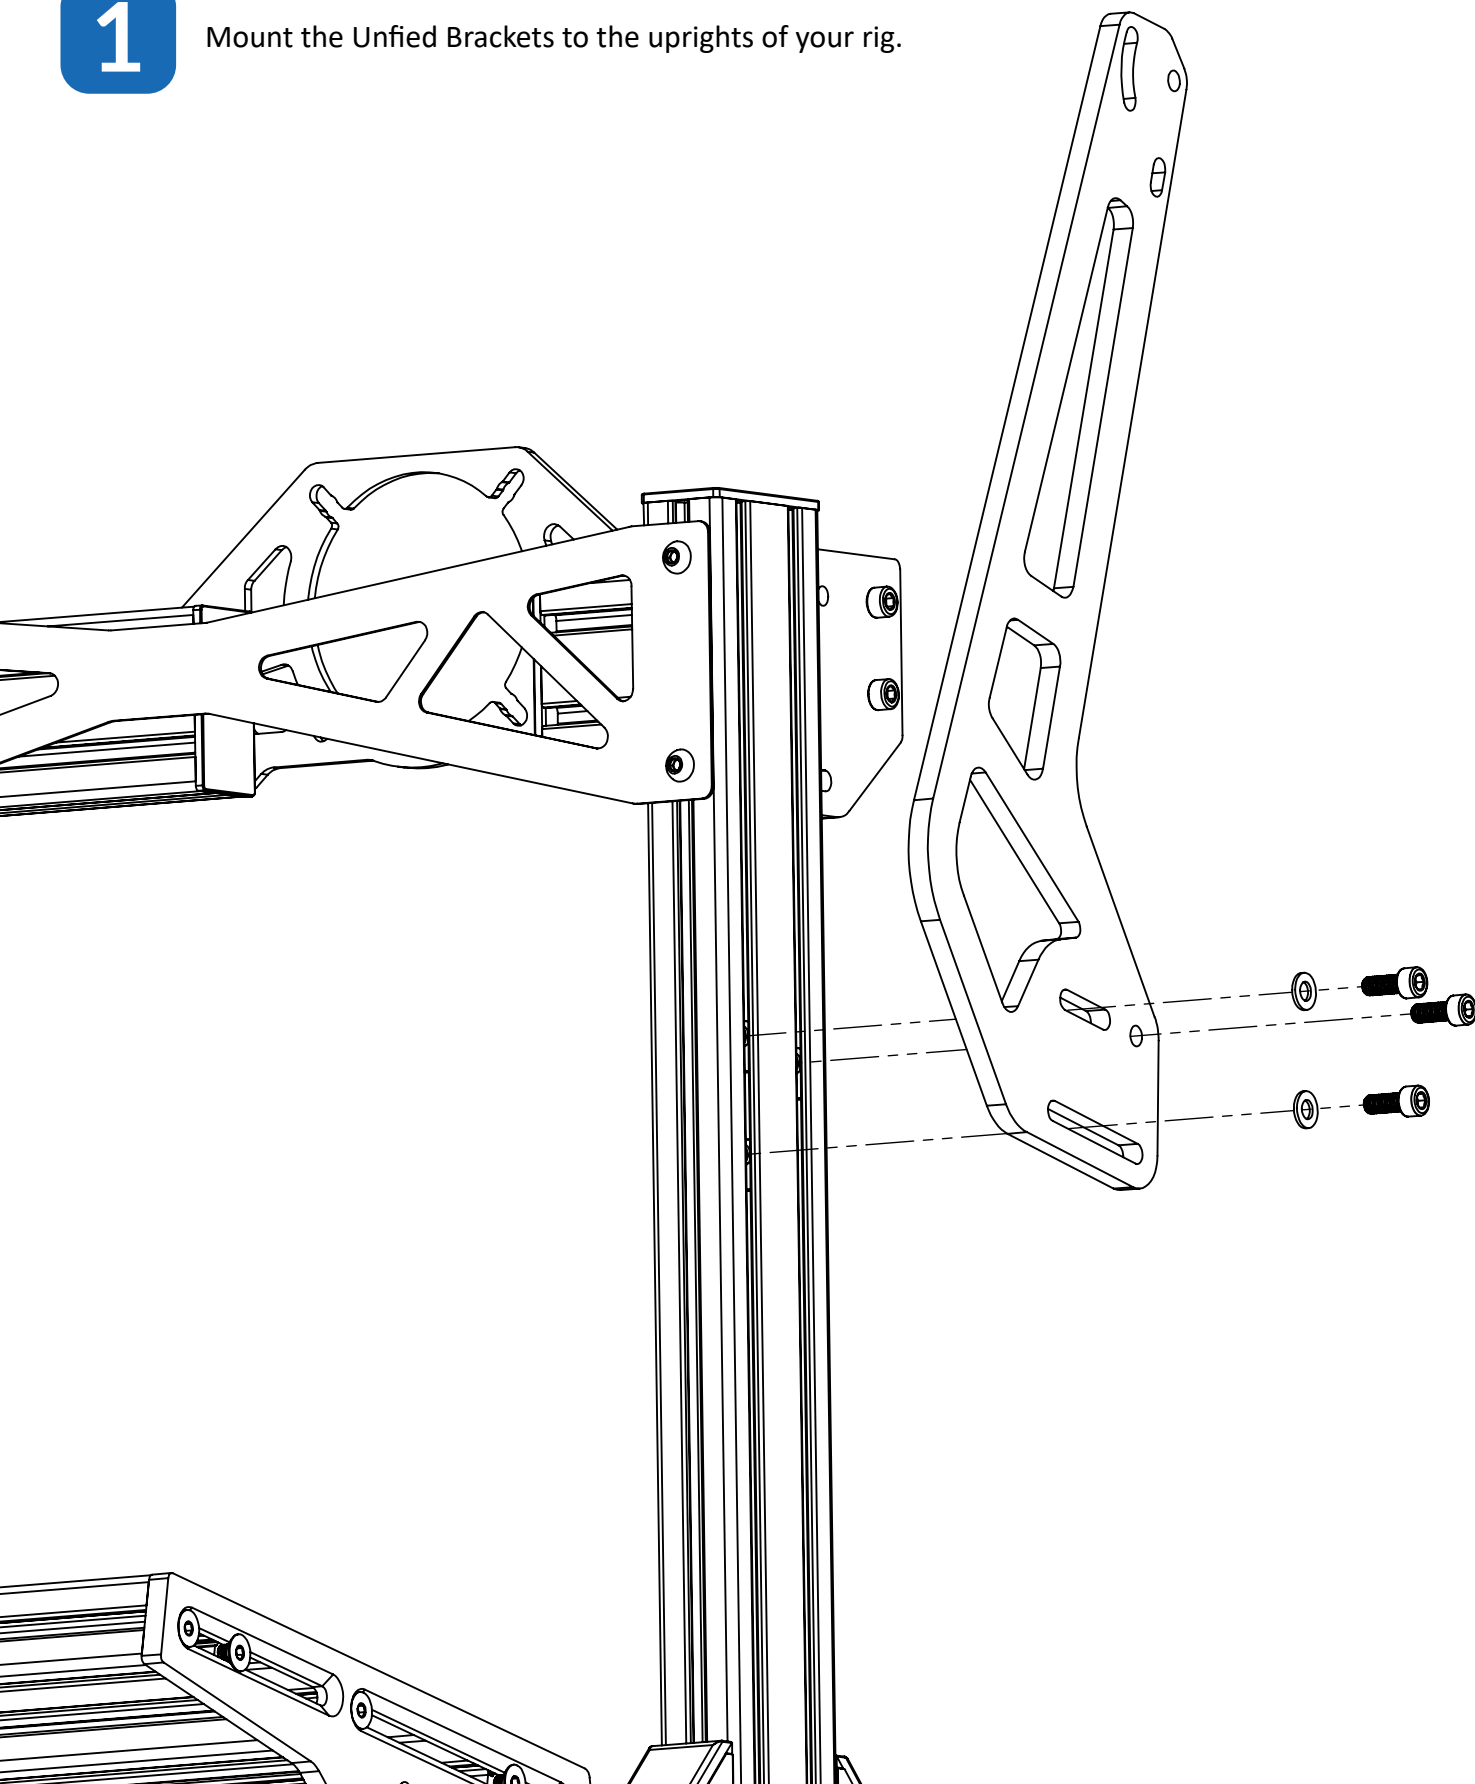

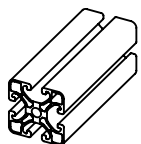


4040 L=220

2x




M8 T-Nut

4x

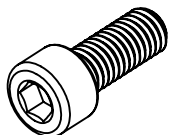

M8x20

4x

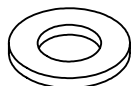



M8 Washer

2x

2

Attach the two small profiles to the Unified Brackets.

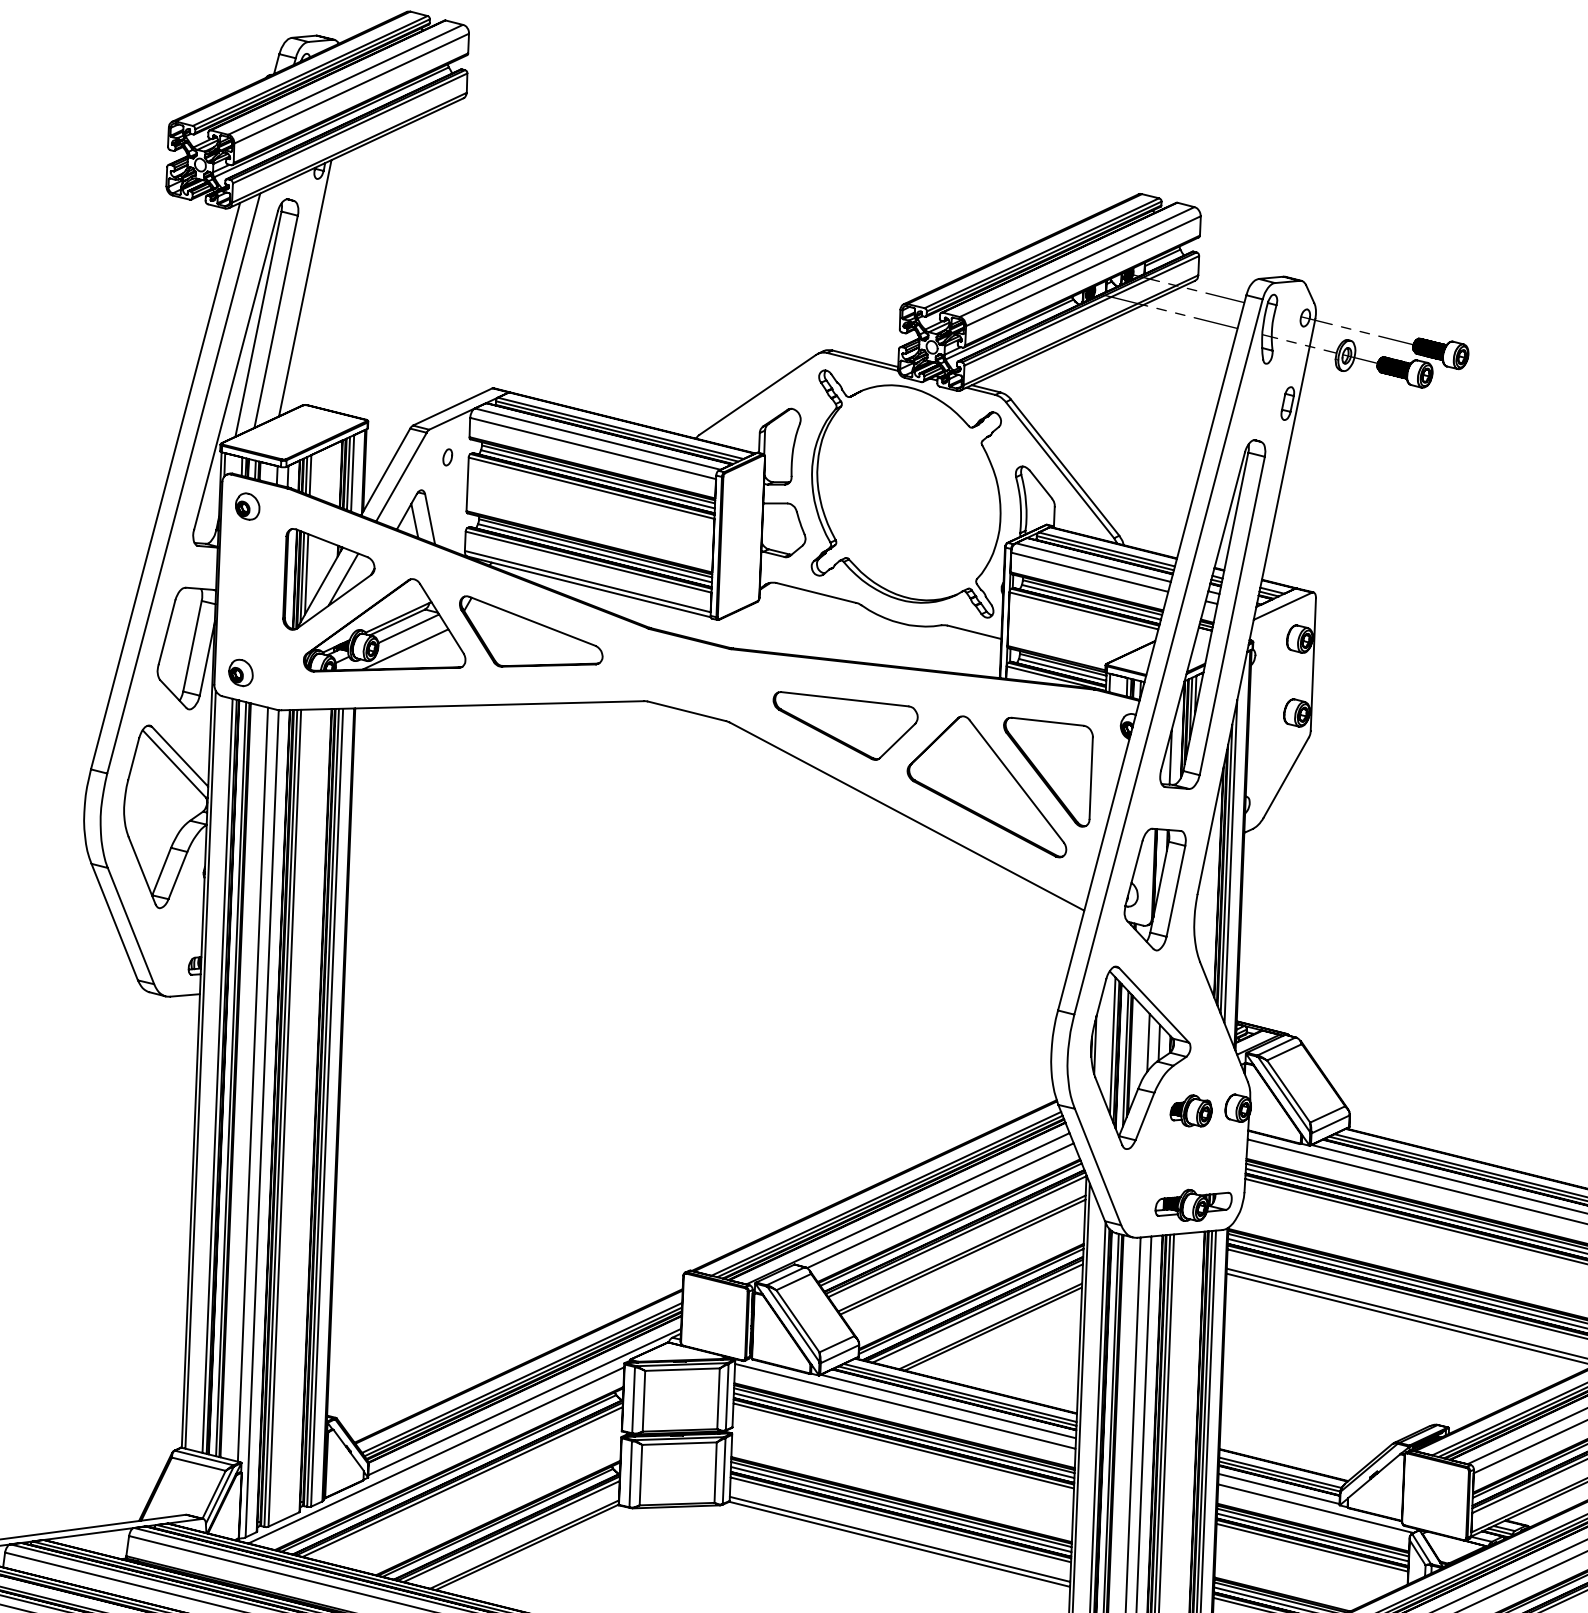

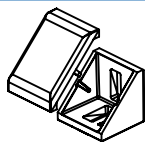


Corner Bracket

4x



M8 T-Nut

4x

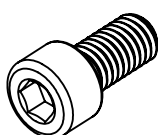


M8x16



4x


3

Attach the Corner Brackets to the 4040 L=220 profiles.

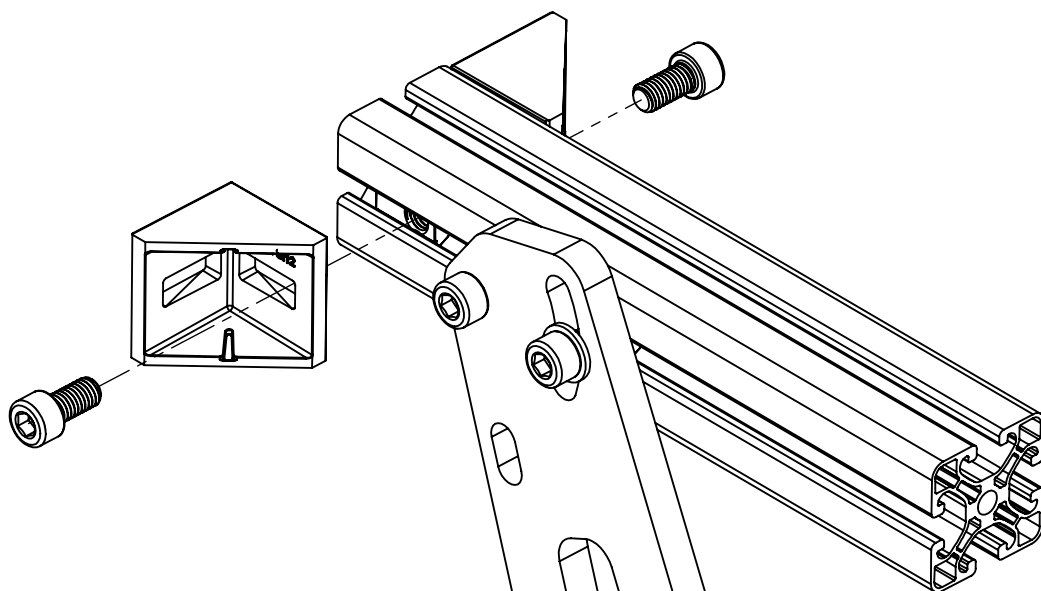

Make sure the corner brackets are in line with the end of the profile, or 'pulled back' a very short distance (maximum of 1 mm), as displayed on the left. They must not reach further than the end of the profile, as displayed on the right. This weakens the construction.

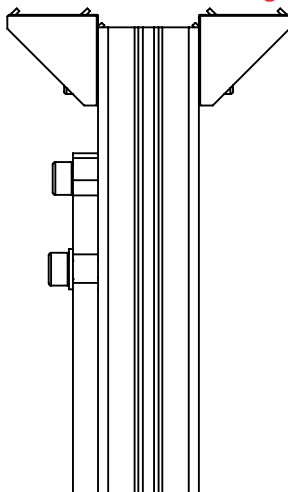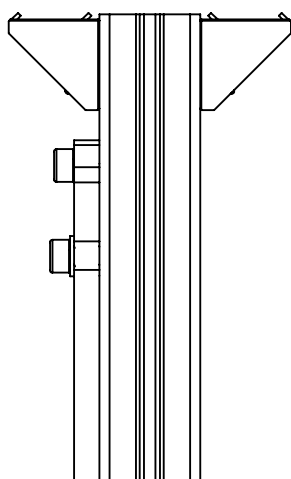

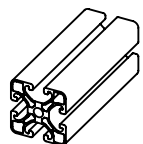


4040 L=950

1x



M8 T-Nut


4x

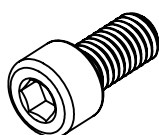


M8x16

4x


4

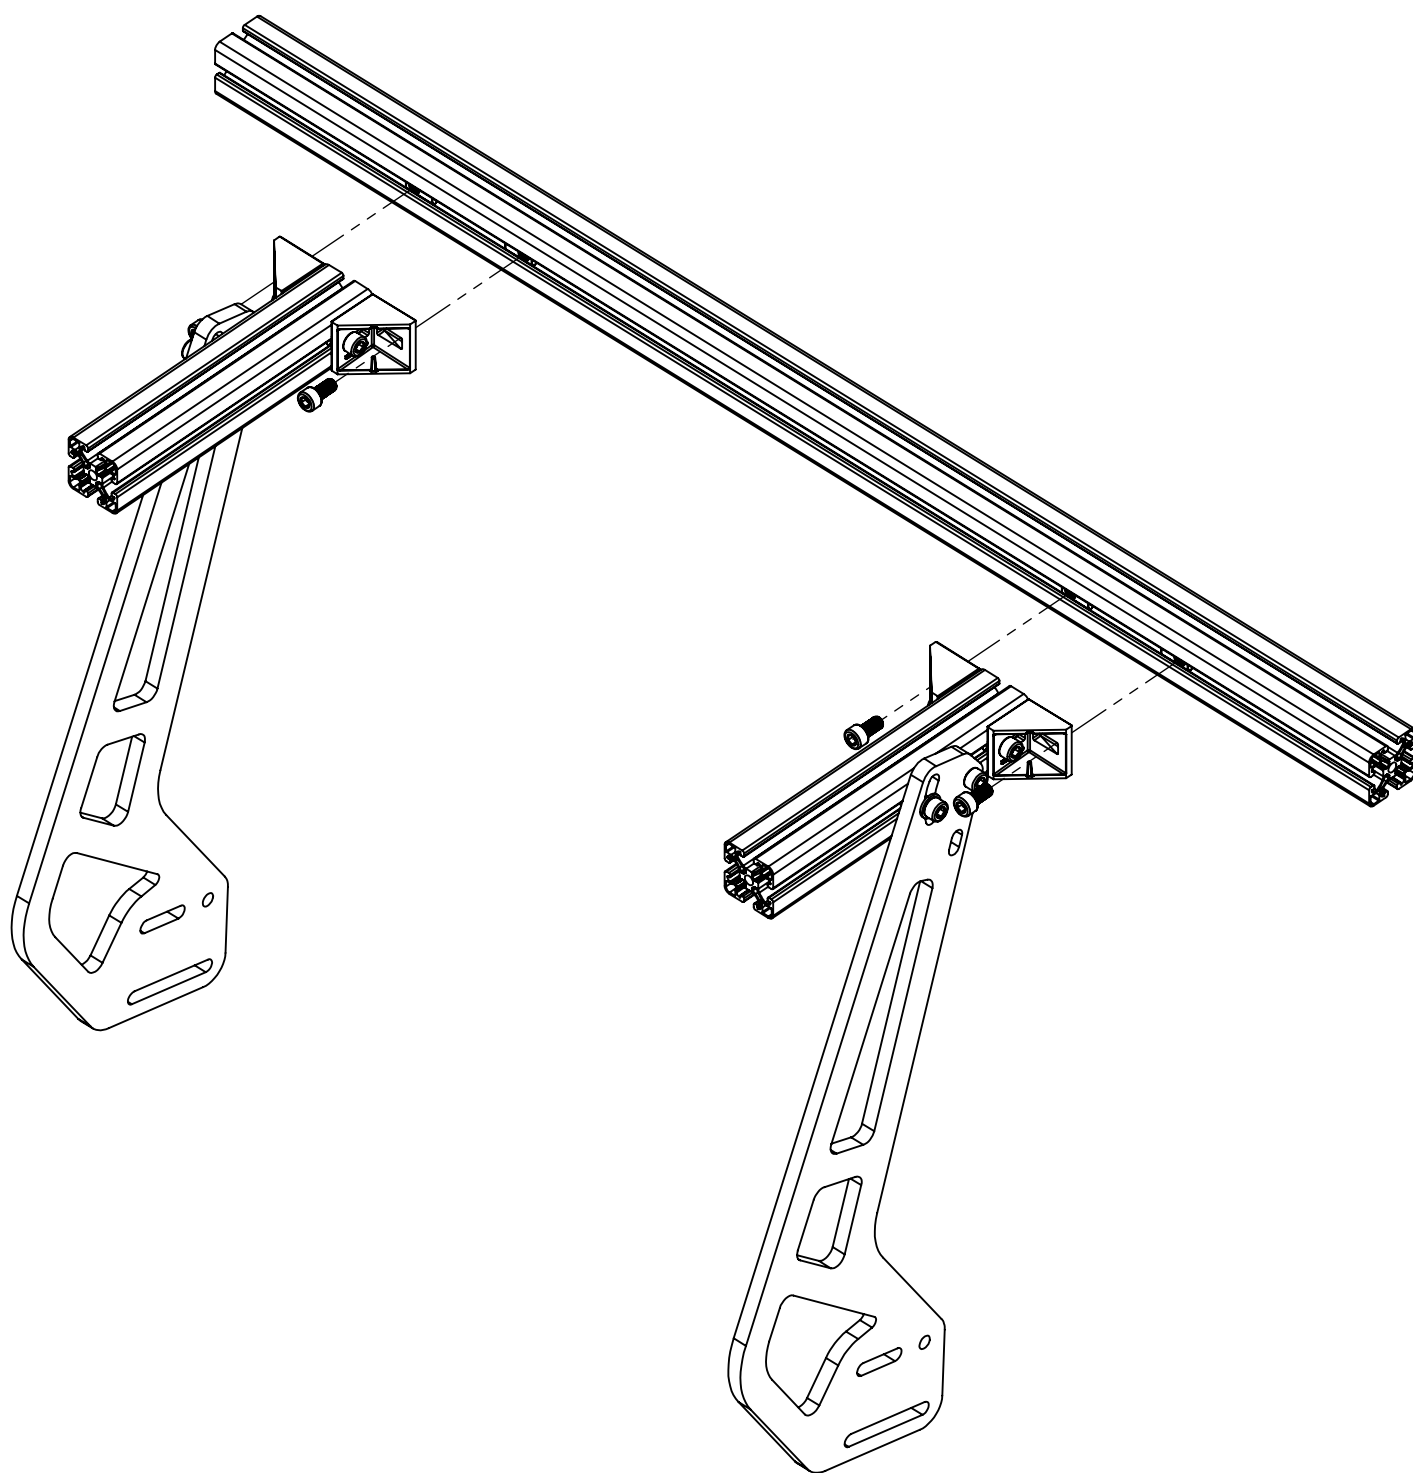

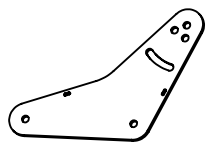

Connector Plate

1x

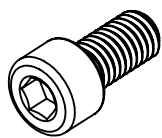

M8x16 (Black)


2x




M8 T-Nut

2x


5

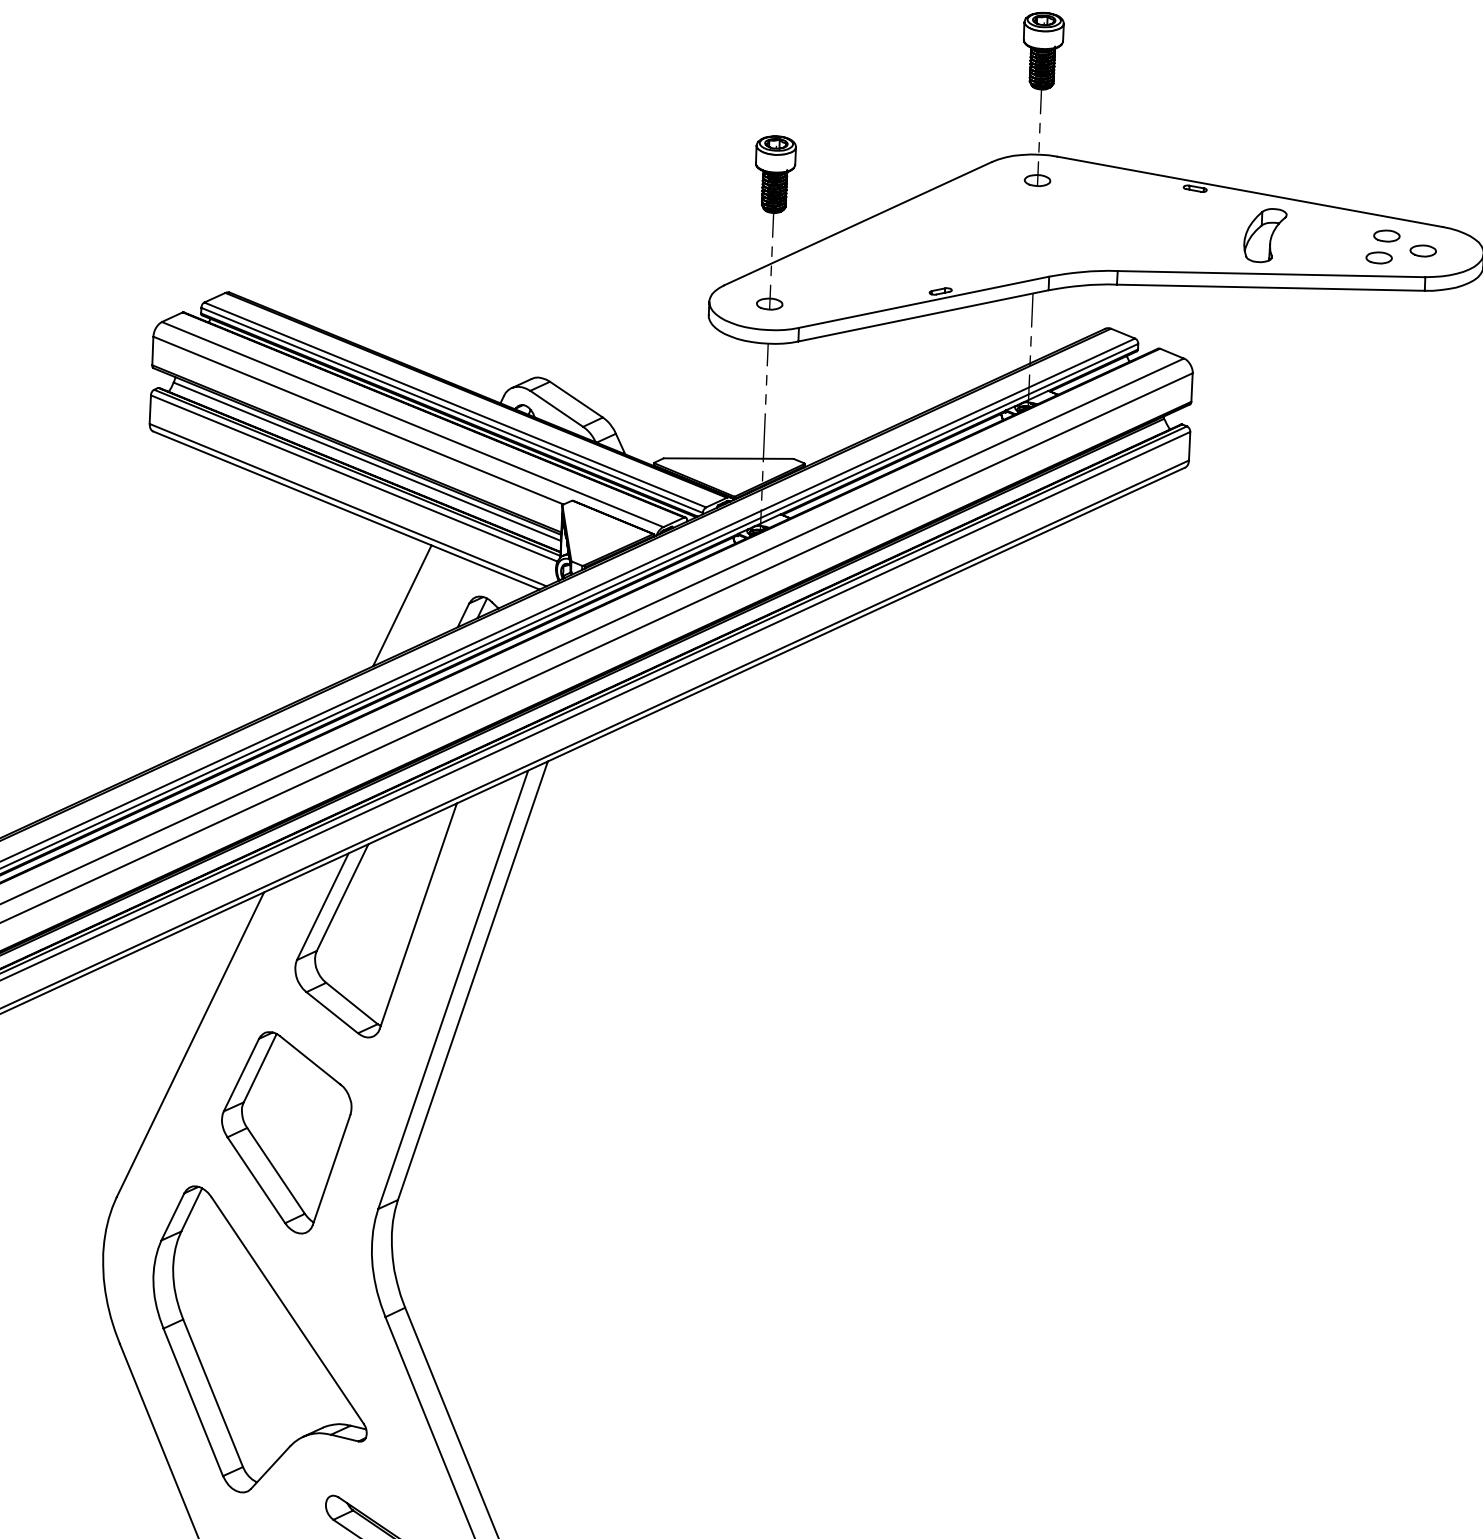

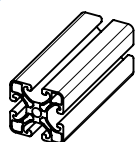

4040 L=500

1x

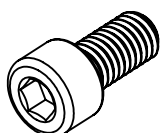


M8x16 (Black)

2x




M8 T-Nut

2x



M8 Washer


1x




Cover 4040

1x


6

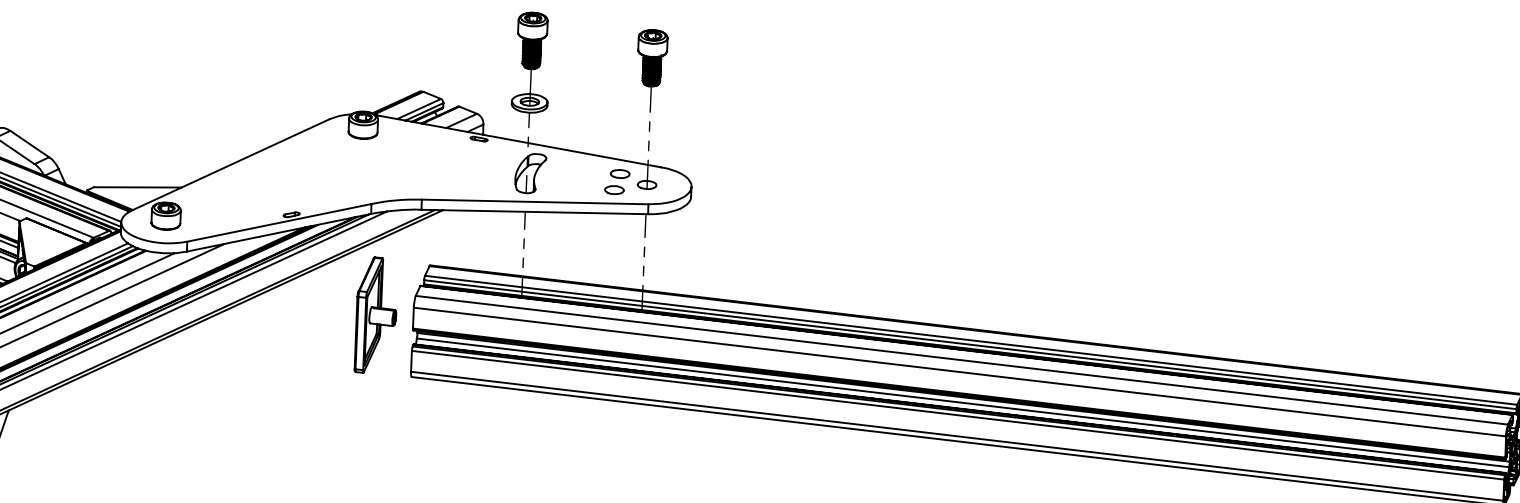

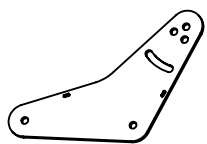

Connector Plate

1x

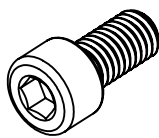


M8x16 (Black)

4x



M8 T-Nut


4x




M8 Washer

1x


7

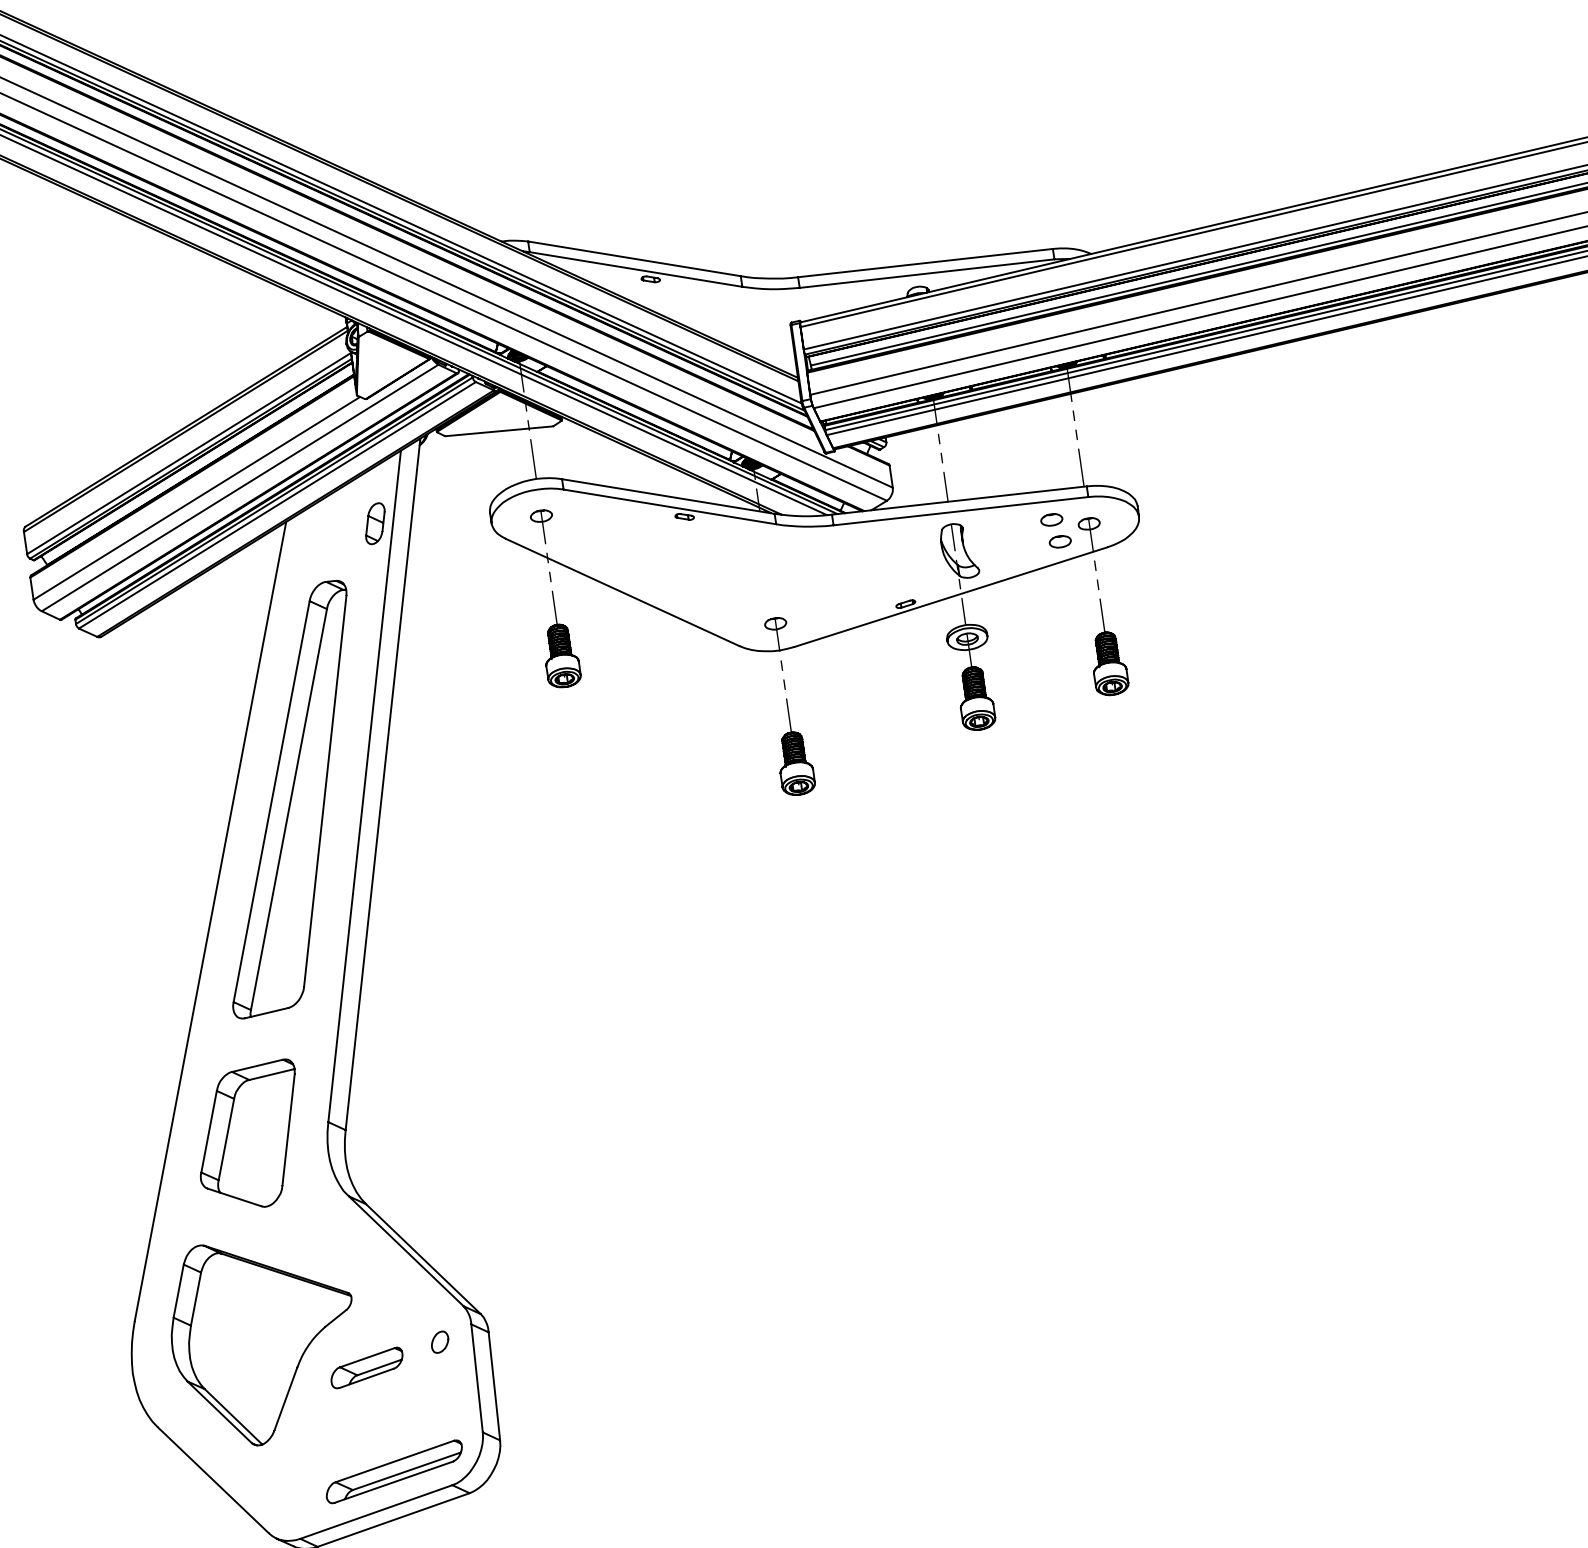


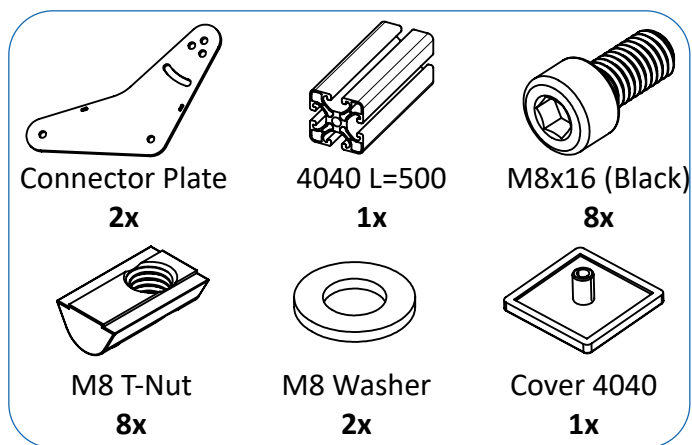

8

Perform step **5**, **6** and **7** on the other side of the mount.

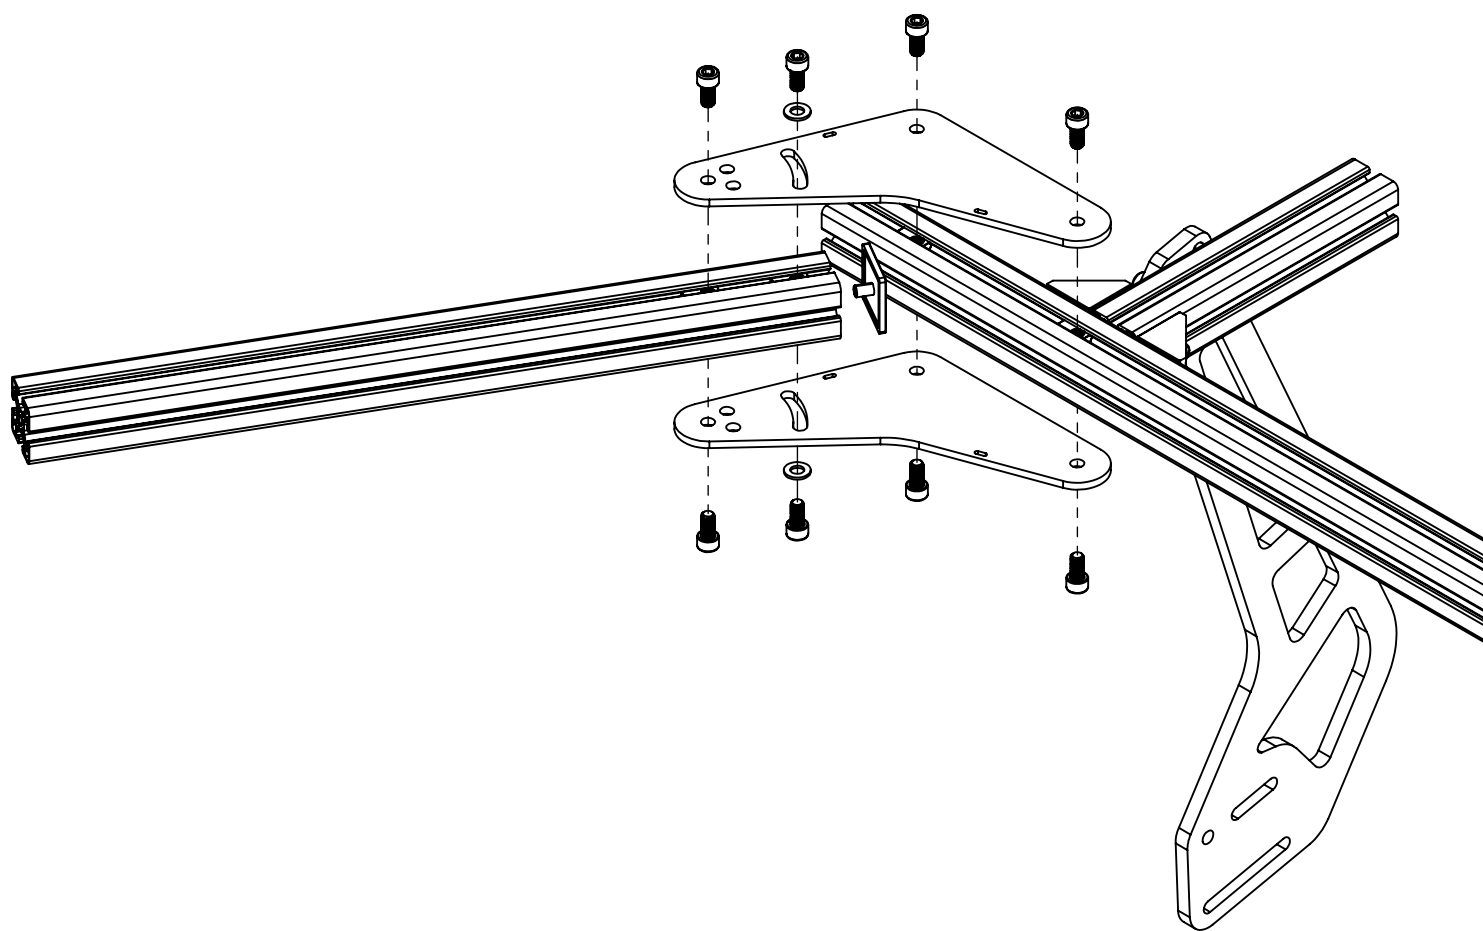




Cover 4040
6x


9

Place all remaining cover caps on the mount.

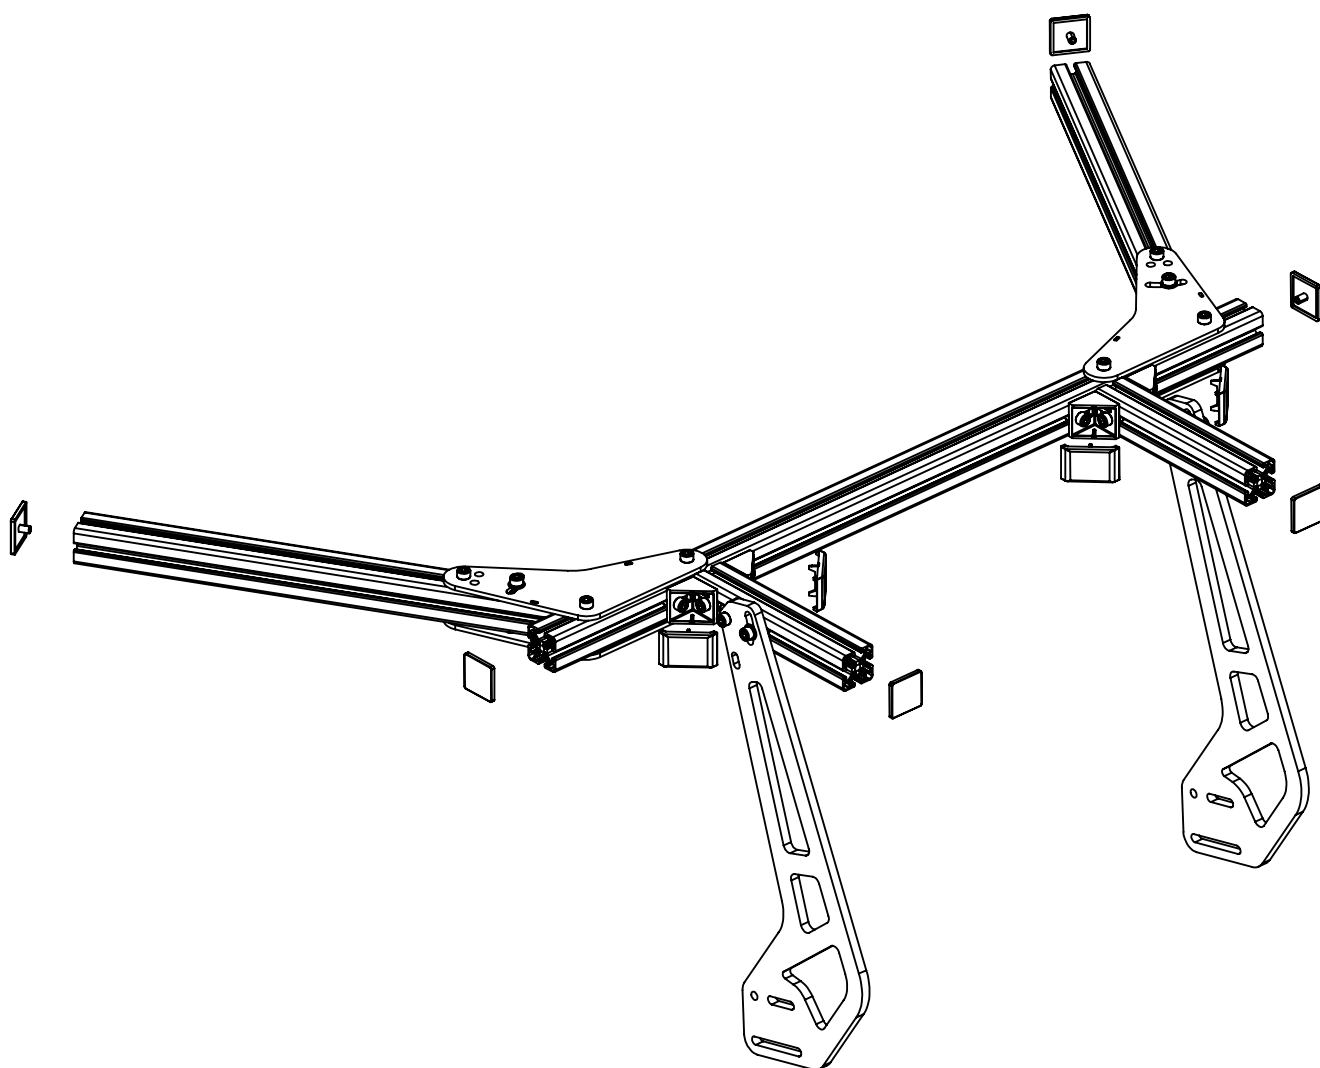

This monitor stand had the option of 'Standard VESA Bracket' and 'Easy Monitor Alignment Kit'. Both these monitor mounting solutions have their own manual. Please proceed the build of your monitor stand by using one of these. Find them at <https://www.treq-sim.com/manuals>

EASY MONITOR ALIGNMENT KIT

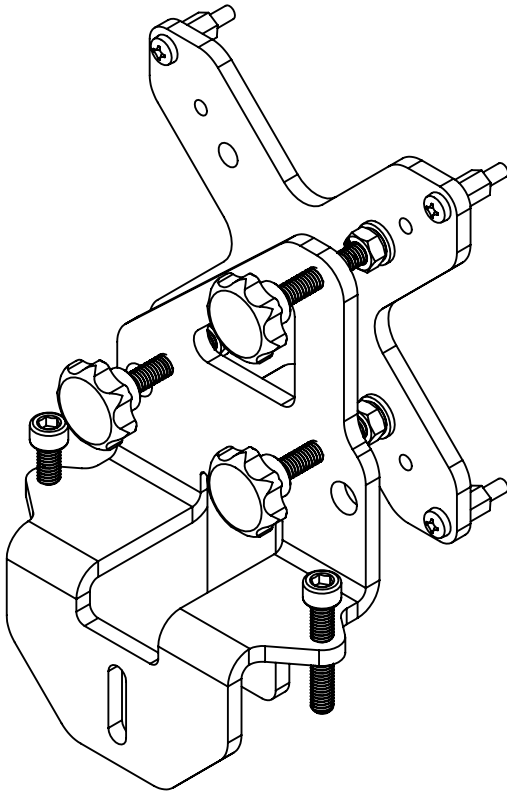

STANDARD VESA BRACKET

