



HEEL REST

INSTRUCTION MANUAL

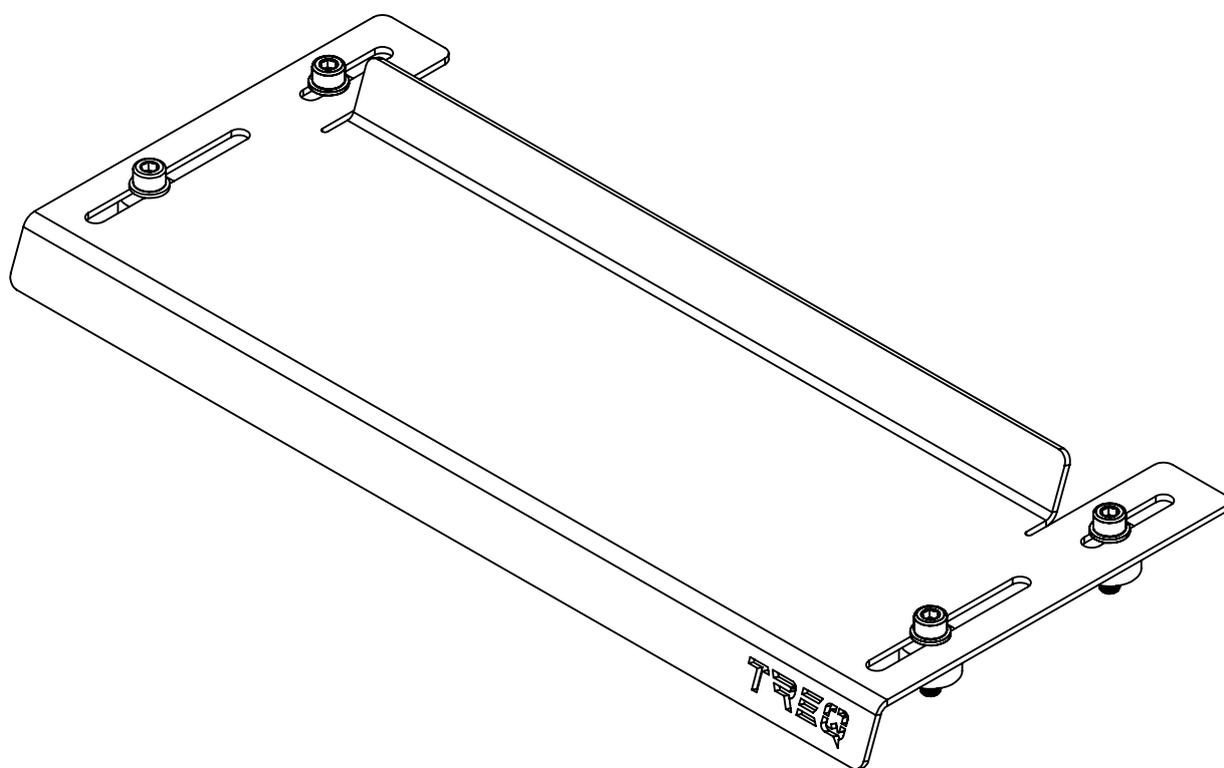


REQUIRED TOOLS:

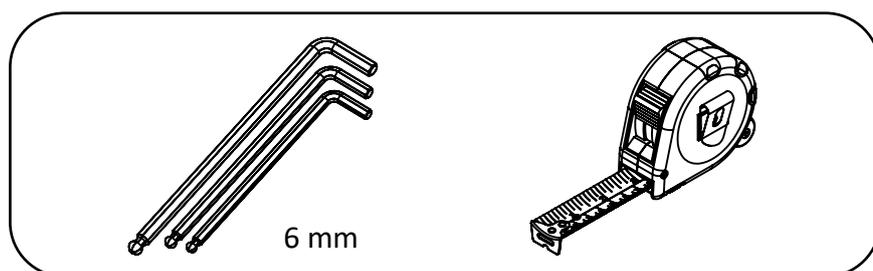


GENERAL INSTRUCTIONS

The easiest way to mount the T-Slot Click-in-Nuts, is to slide them in from one side of the profile, with the ball facing down. But don't worry if you need to put in a click-in-nut in a profile which has both ends already closed: it is also possible to push them in the T-slot anywhere you like!

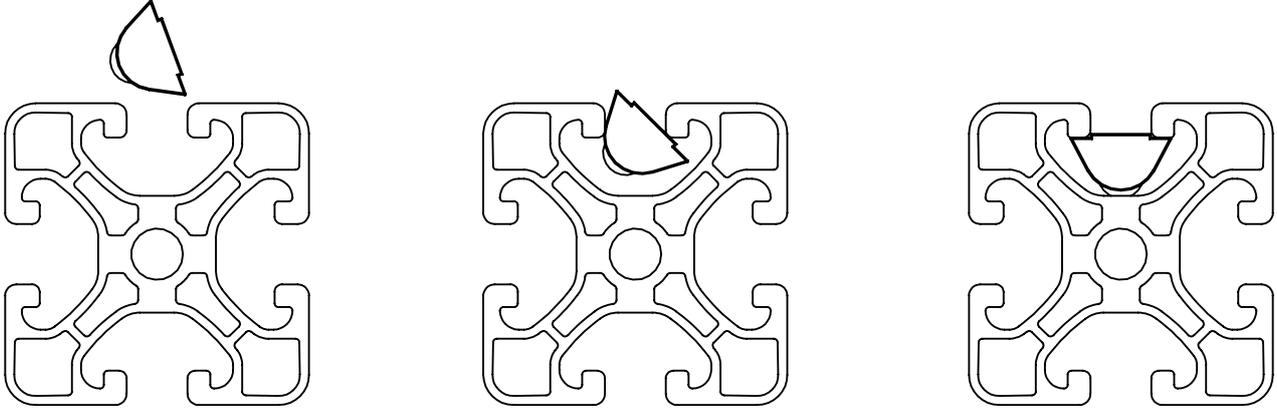


INCLUDED ITEMS

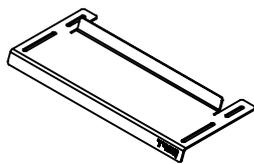


Heel Rest Plate
1x



M8x16
4x

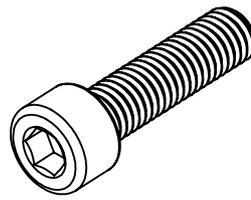

M8x30
4x

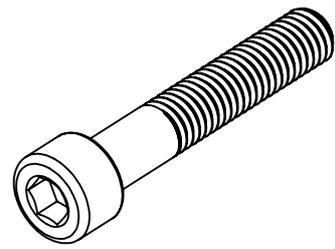


M8x45
4x



Spacer 15mm
8x



M8 T-Nut
4x



M8 Washer
4x

1

Mount your Heel Rest like show in the drawing. All spacers are optional.

- 0mm height: Use M8x16 and 0 spacers.
- 15mm height: Use M8x30 and 1 spacer on each corner.
- 30mm height: Use M8x45 and 2 spacers on each corner.

