



PEDAL RAISE KIT

INSTRUCTION MANUAL

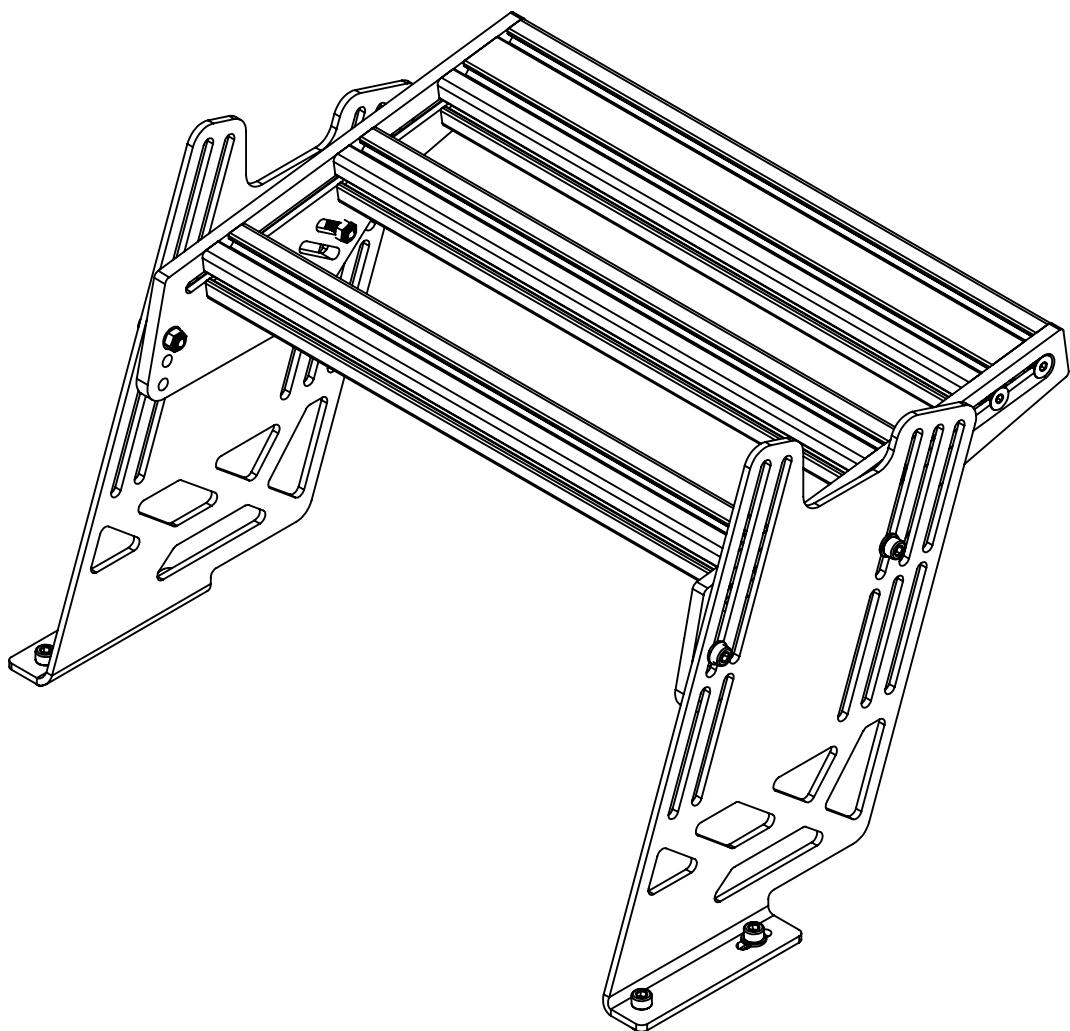


REQUIRED TOOLS:

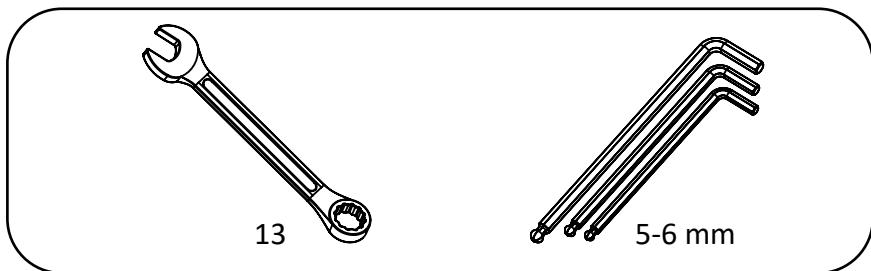


GENERAL INSTRUCTIONS


The easiest way to mount the T-Slot Click-in-Nuts, is to slide them in from one side of the profile, with the ball facing down. But don't worry if you need to put in a click-in-nut in a profile which has both ends already closed: it is also possible to push them in the T-slot anywhere you like!

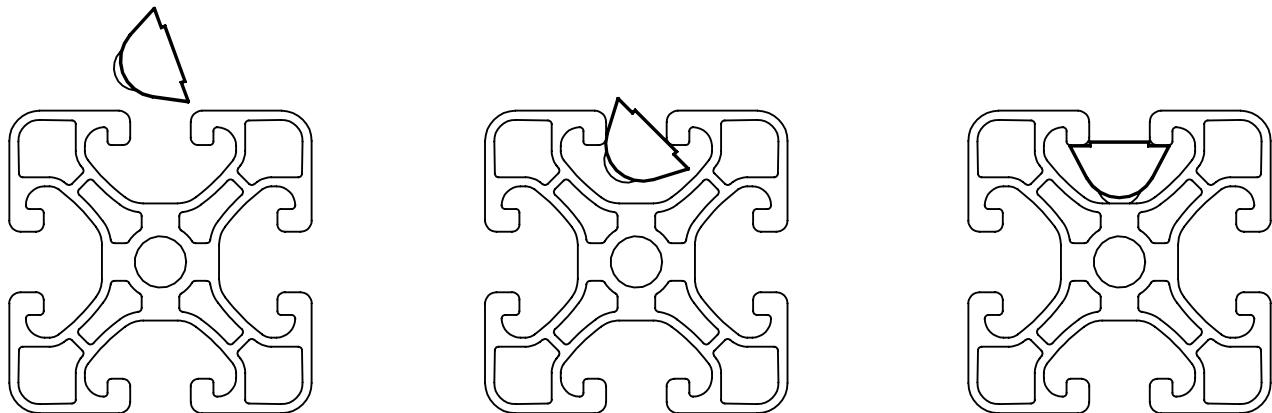

INCLUDED ITEMS

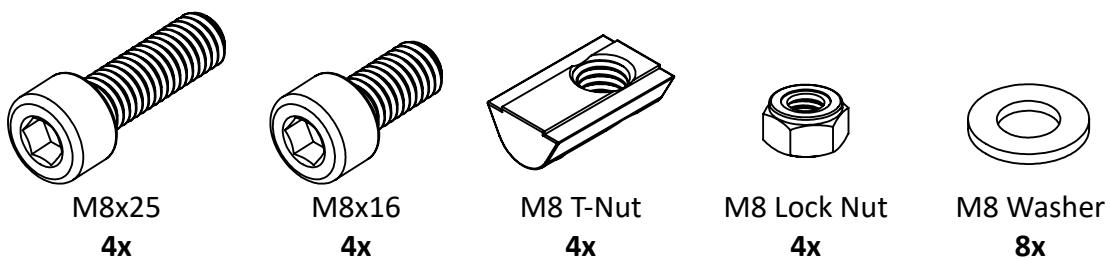

EXTRA ITEMS INCLUDED WITH THE 'COMPLETE KIT'

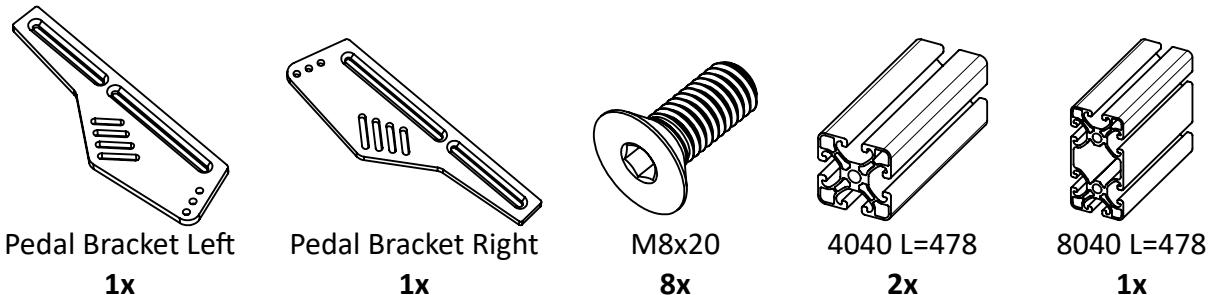



Left Plate
1x




Right Plate
1x



M8x16
4x




M8 T-Nut
4x




M8 Washer
2x


1

Attach the two brackets to your simulator.

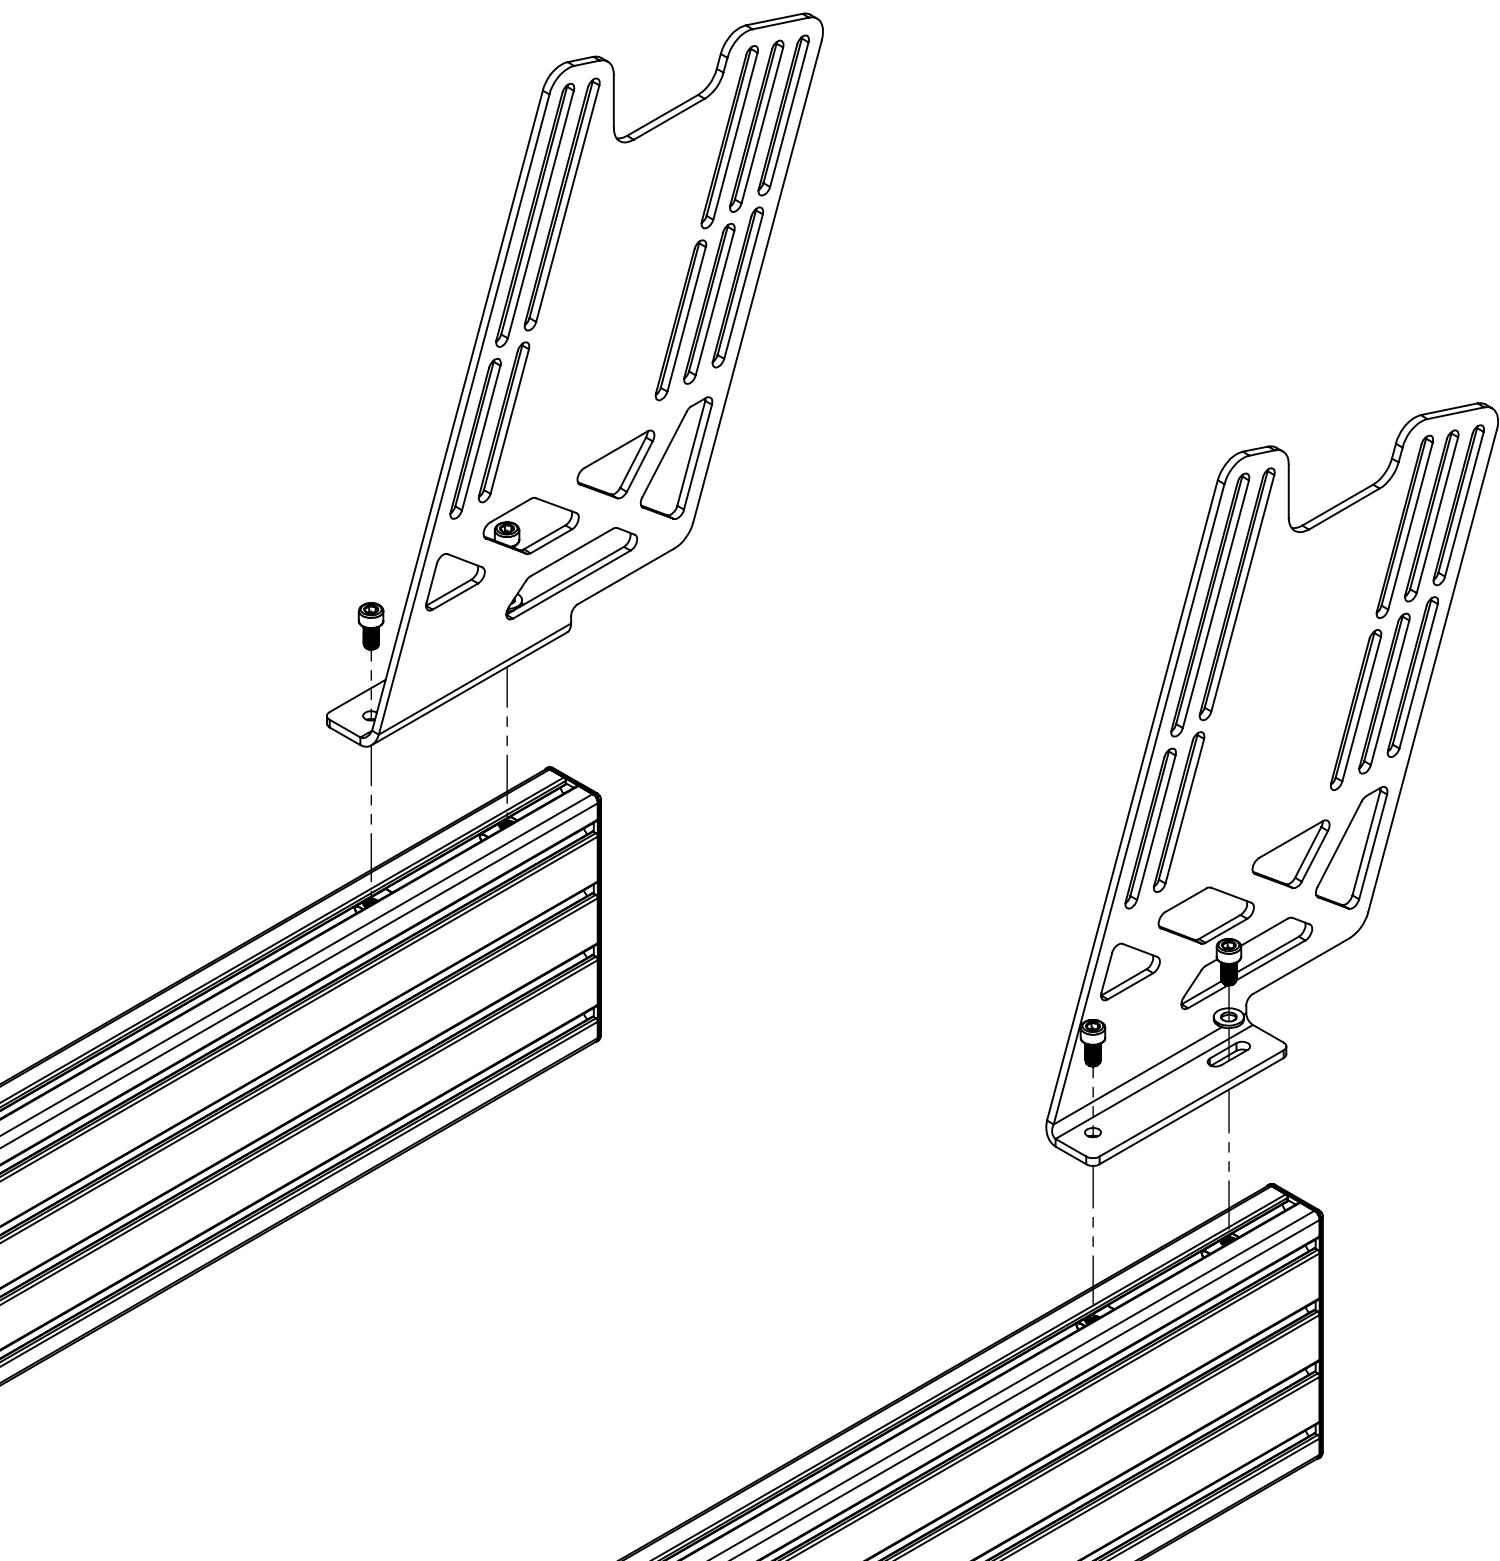


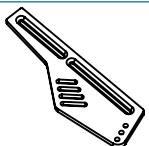

Pedal Bracket
2x



8040 L=478
1x

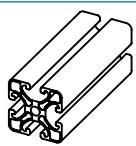



4040 L=478
2x



M8x20
8x

2

Skip this step if your Pedal Deck is already installed.

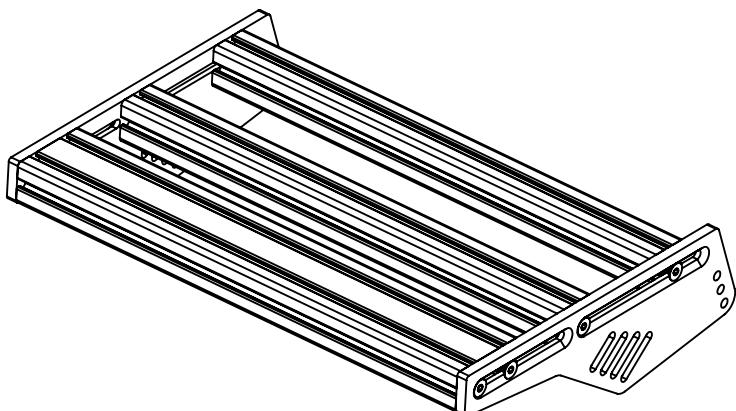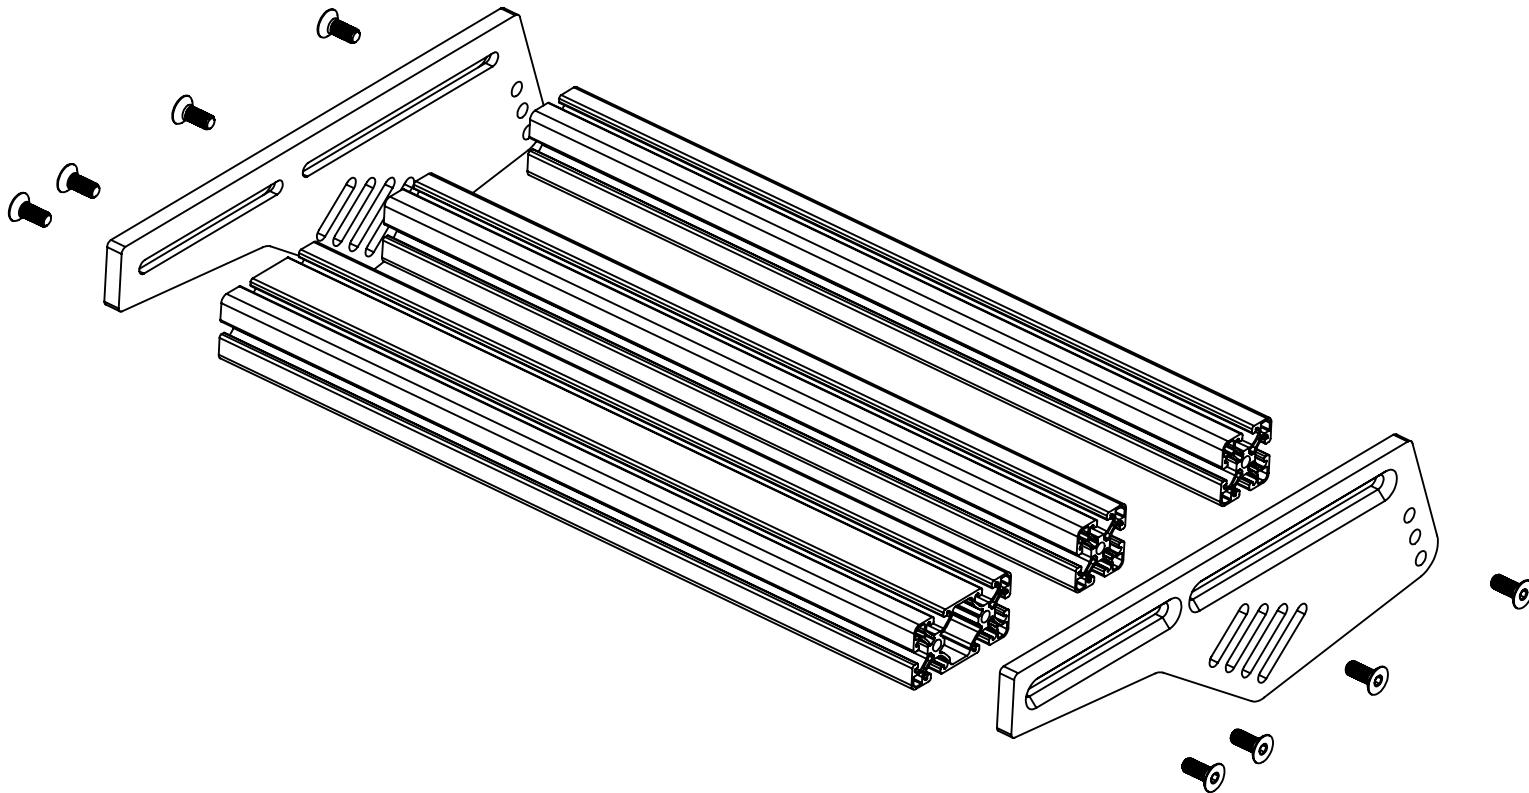



M8x25