



TELEVISION STAND

INSTRUCTION MANUAL

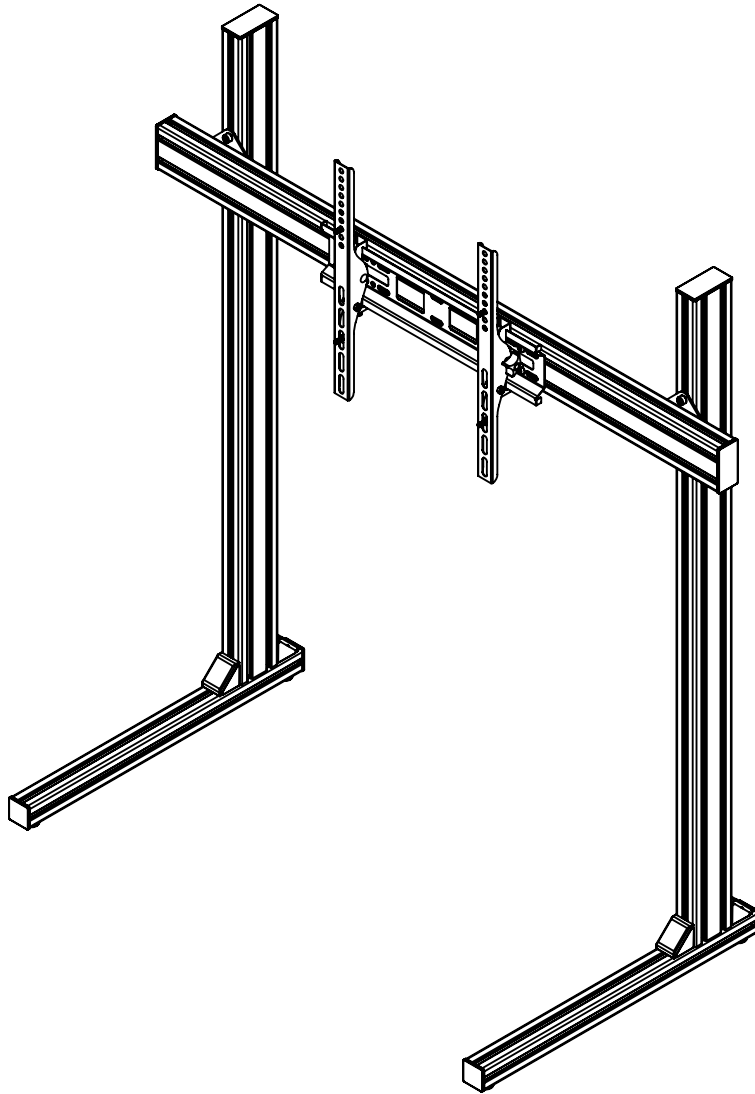


REQUIRED TOOLS:

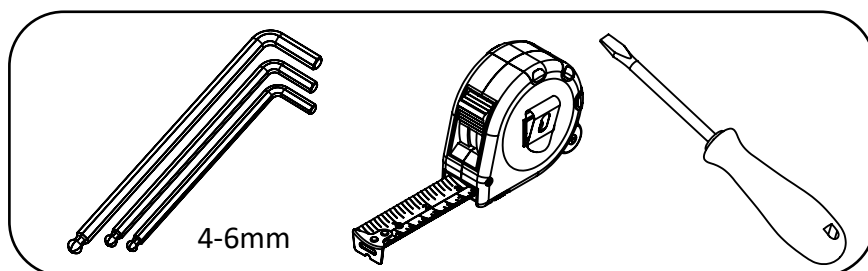


GENERAL INSTRUCTIONS


The easiest way to mount the T-Slot Click-in-Nuts, is to slide them in from one side of the profile, with the ball facing down. But don't worry if you need to put in a click-in-nut in a profile which has both ends already closed: it is also possible to push them in the T-slot anywhere you like!

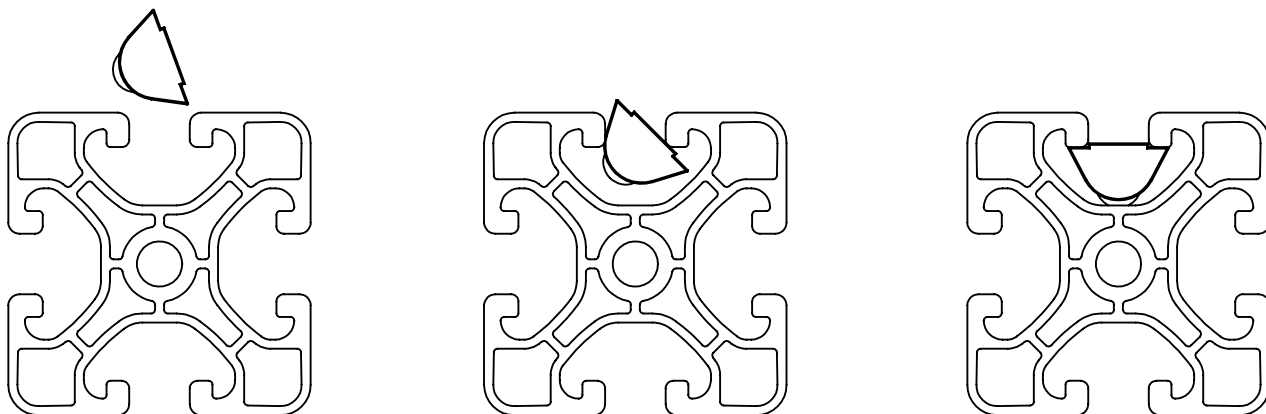


INCLUDED ITEMS

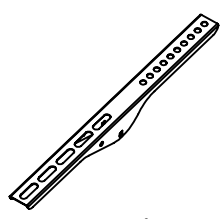


TV Bracket
2x

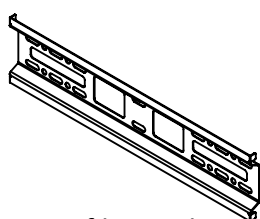


Profile Bracket
1x

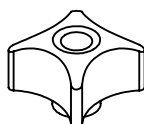


Knob
2x

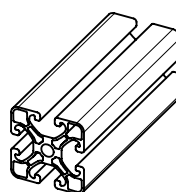


4040 L=570
2x

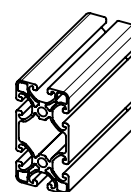


8040 L=1170
3x

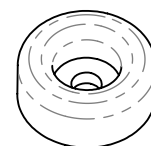


Rubber Foot
4x




Perpendicular Plate
2x

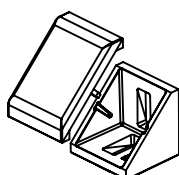

Corner Bracket
4x



Cover 4040
4x

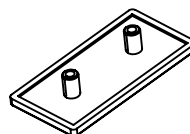


Cover 8040
4x




M8 T-Nut
24x




M5 T-Nut
4x

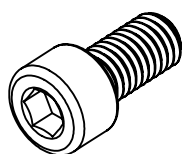


M8x16
8x

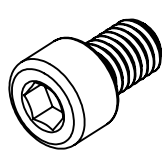


M8x12 (Black)
12x

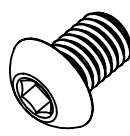

M8x12
4x

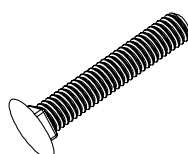


M6x35
2x

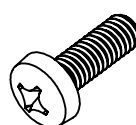


M6x16
4x



M5x12
4x






M6 Washer
4x

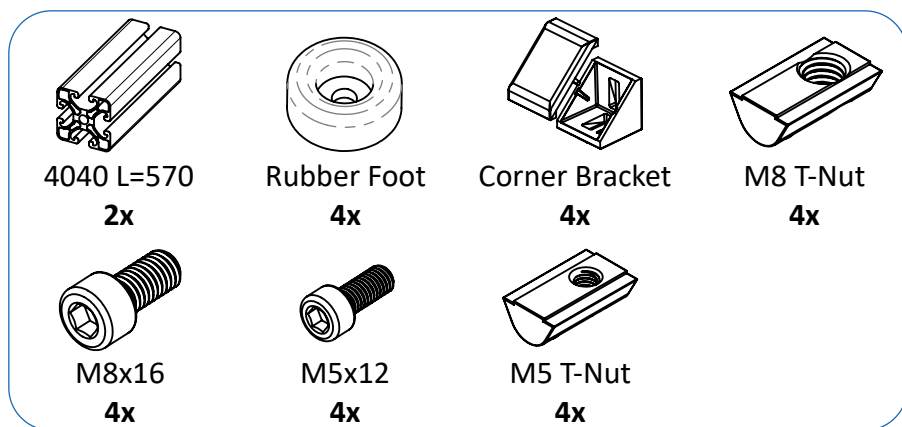

1

Attach the rubber feet and the corner brackets to the 4040 L=570 profiles. Perform this step twice.

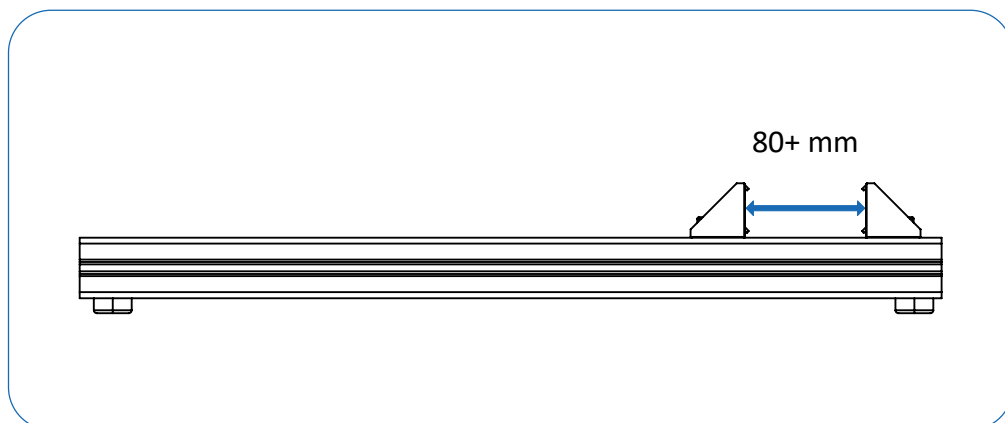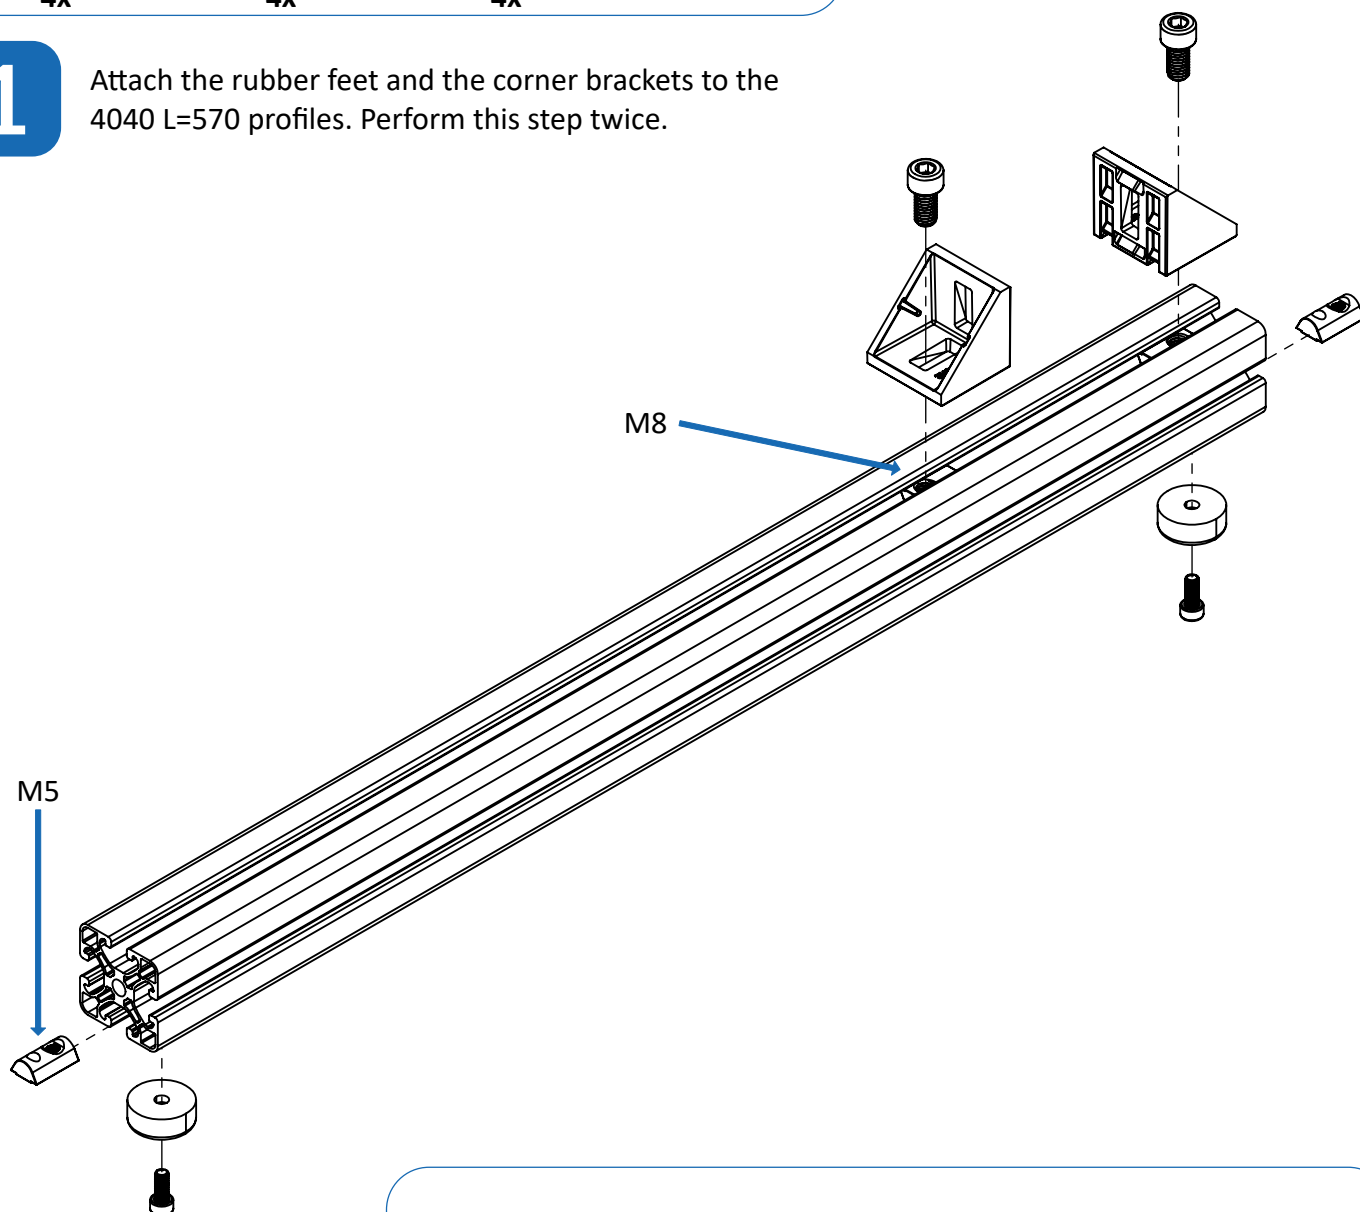



8040 L=1170

2x



M8x16

4x





M8 T-Nut

4x


2

Mount the 8040 profiles.
Perform this step twice.

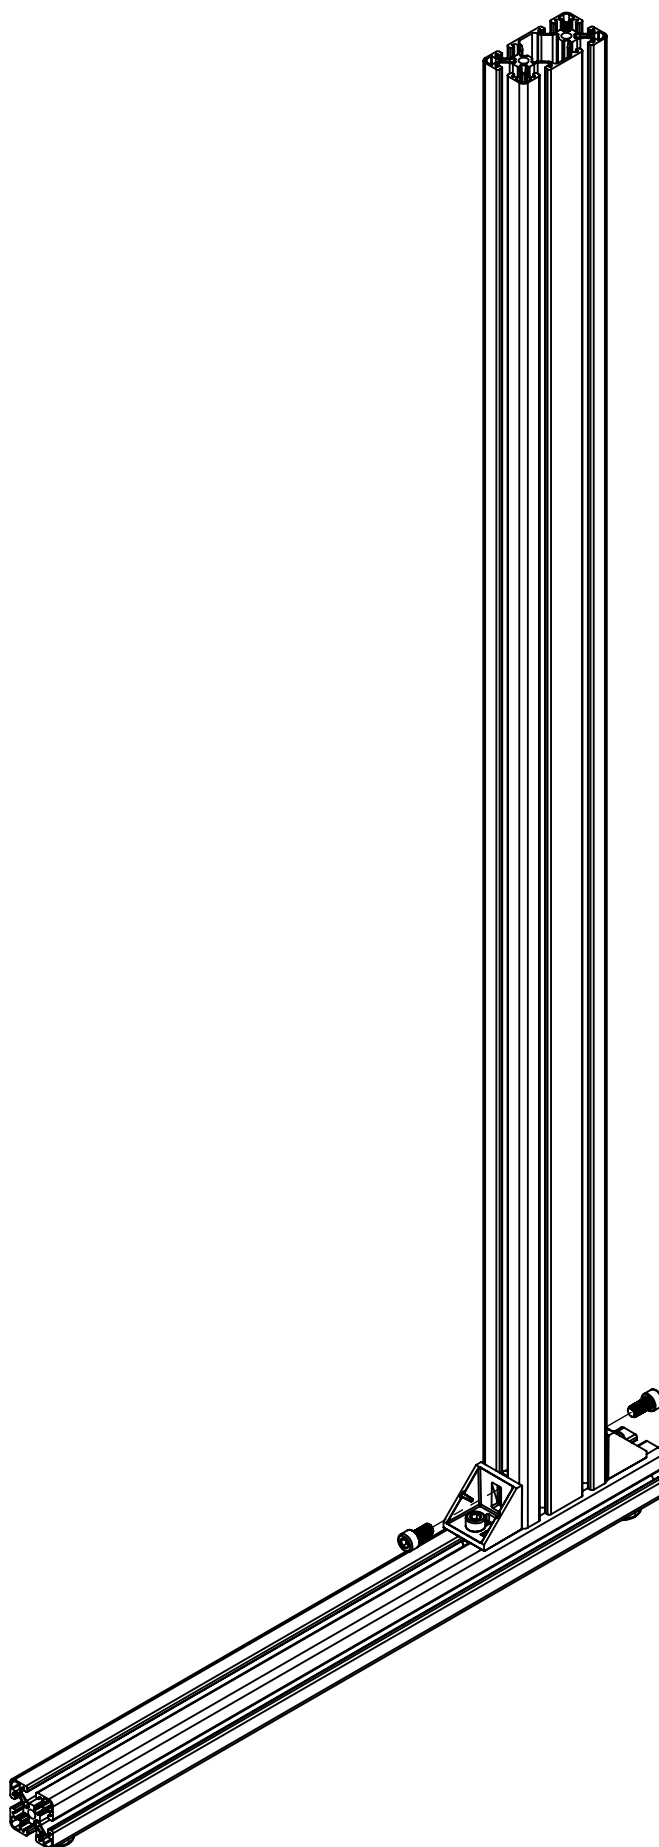



Perpendicular Plate
2x

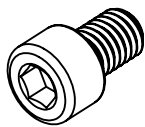



M8x12 (Black)
4x




M8 T-Nut
4x

3


Perform this step twice.

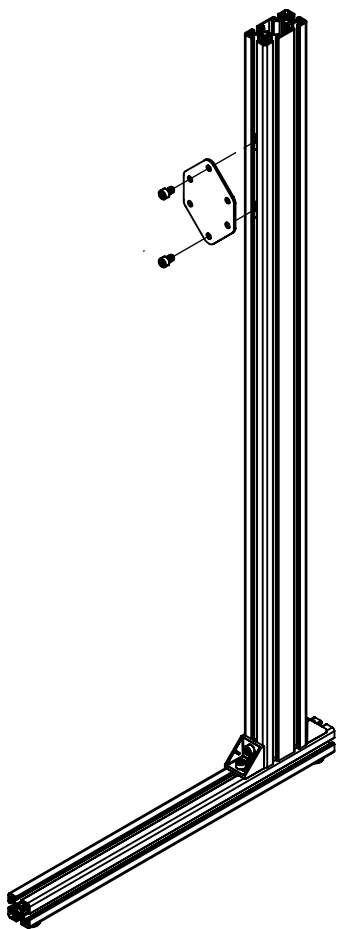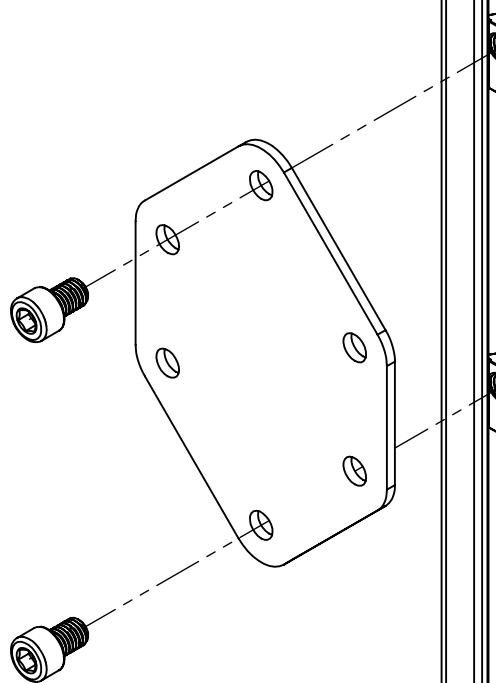



8040 L=1170

1x

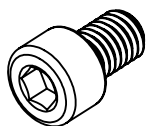

M8x12 (Black)


8x




M8 T-Nut

8x


4

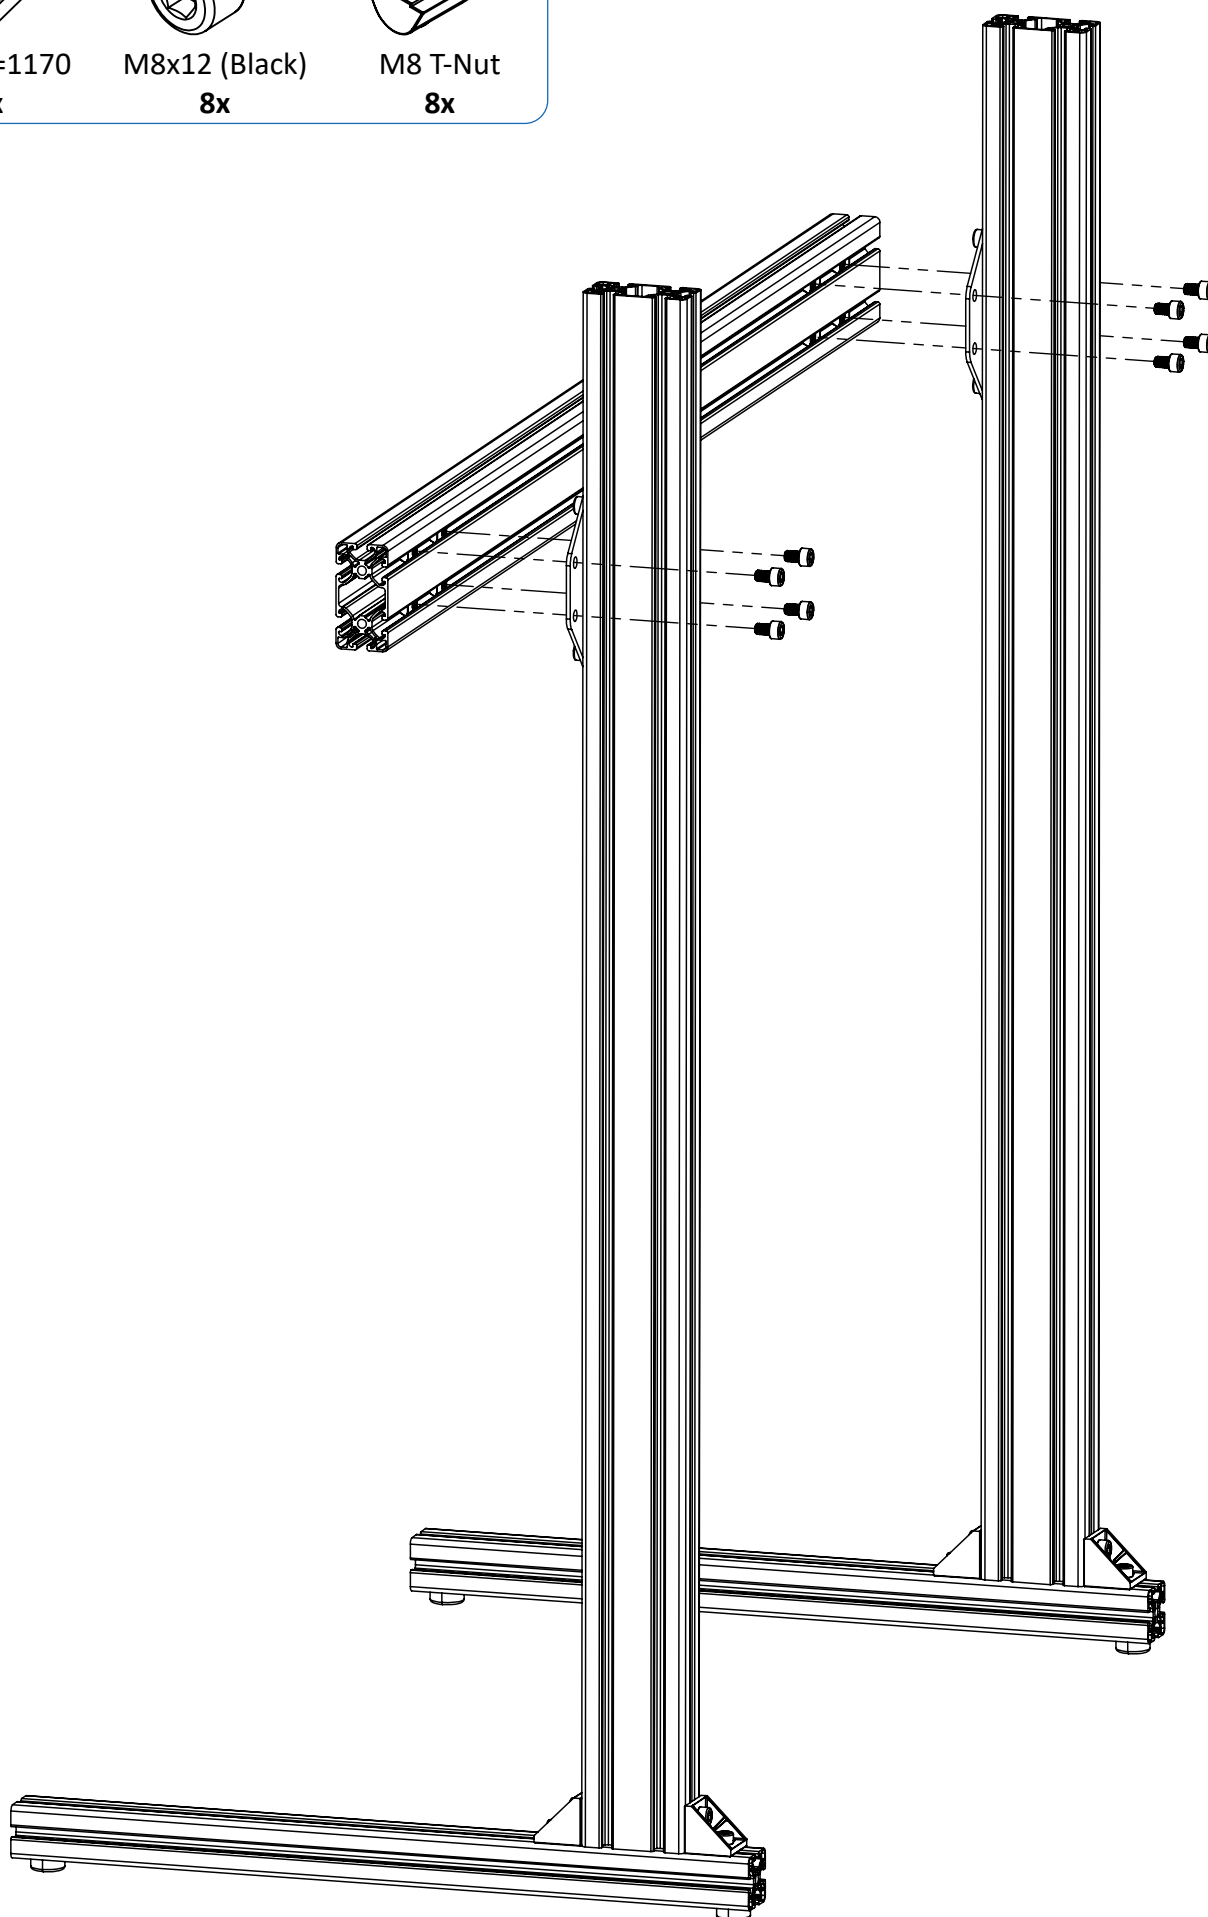



Cover 4040

4x

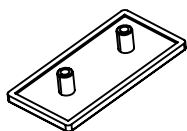



Cover 8040

4x


5

Place all cover caps on the end of the profiles.

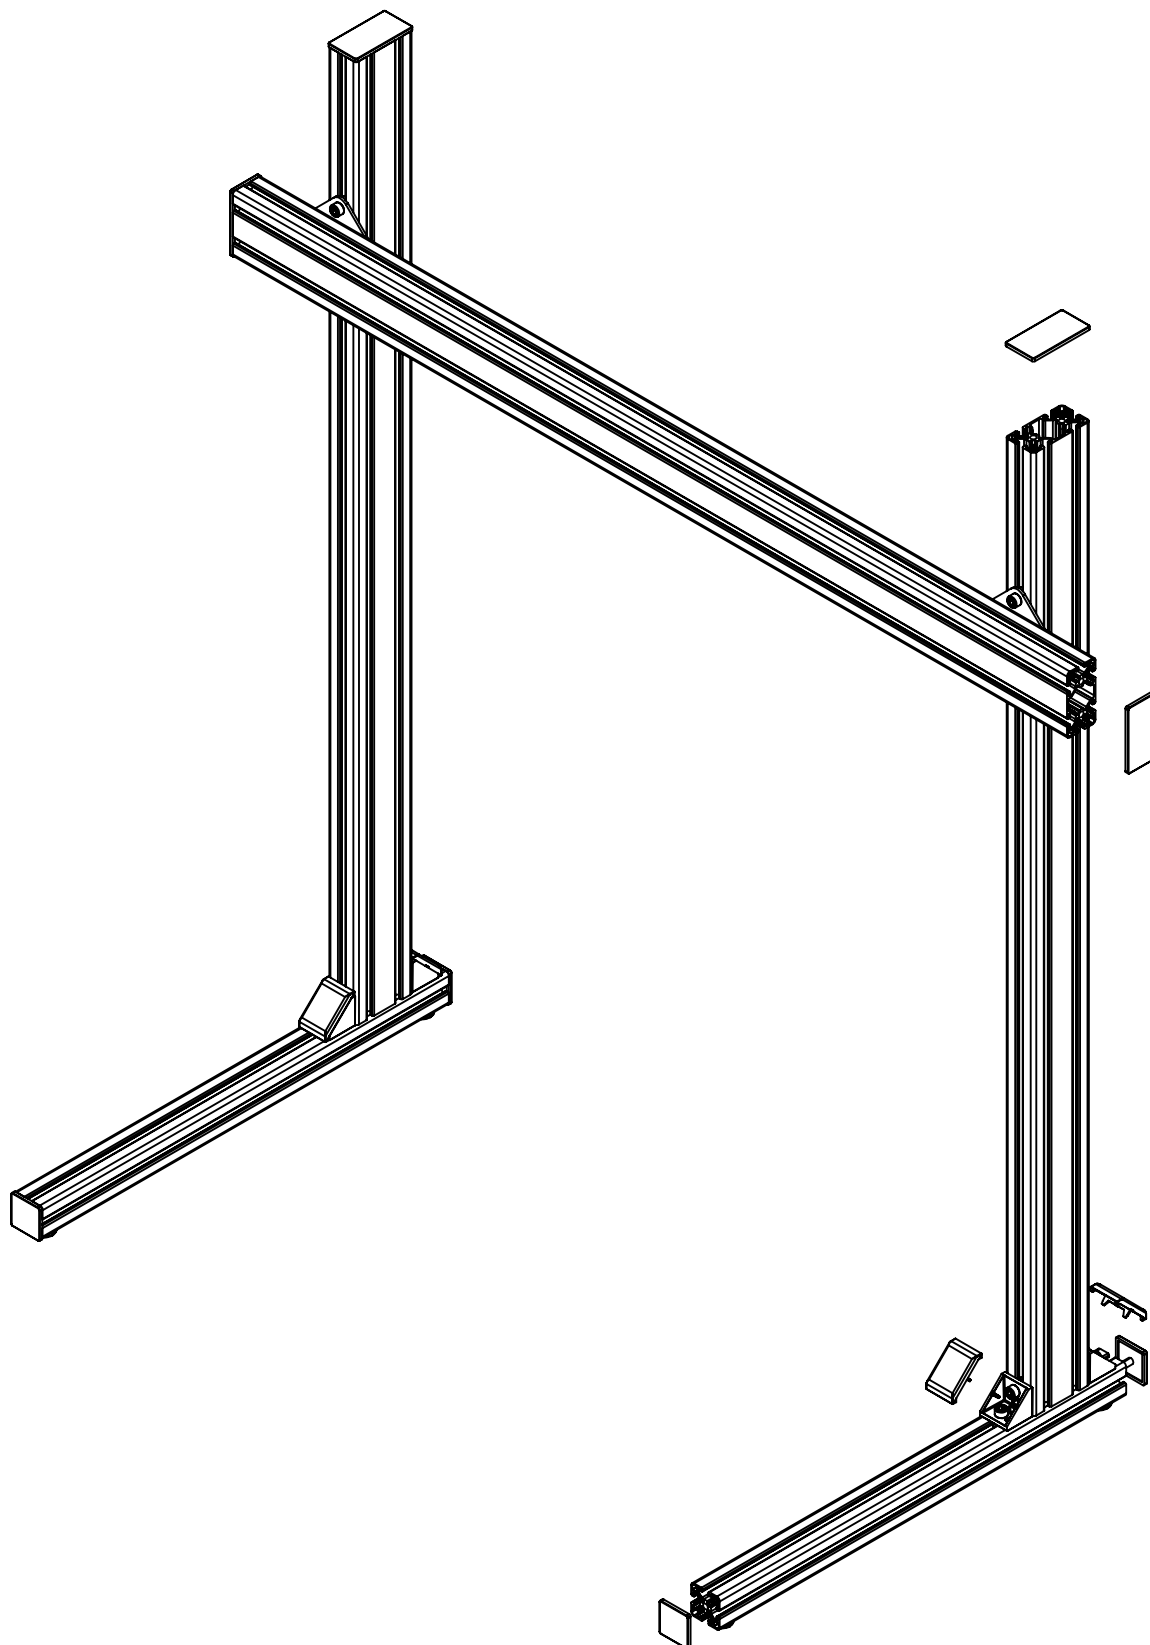


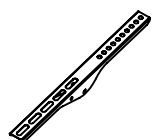

TV Bracket
2x

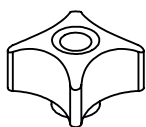



Knob
2x




M6x35
2x


6

Install the knobs onto the two TV brackets. These knobs will later be used to setup the angle for the television.

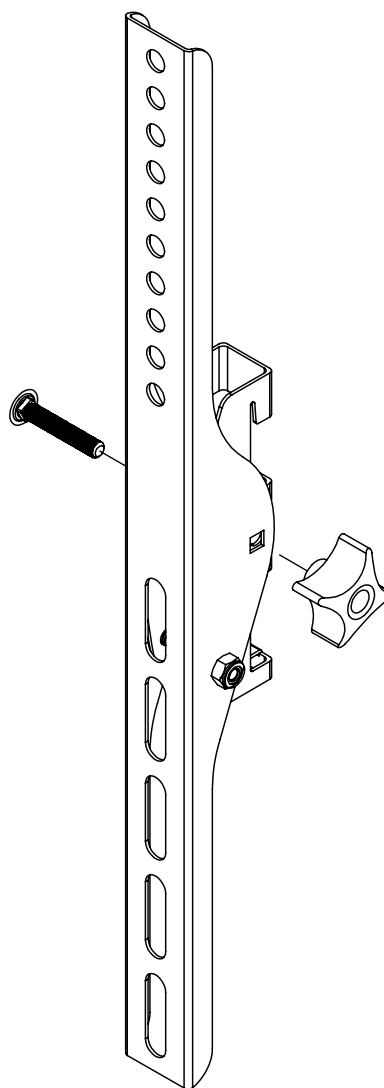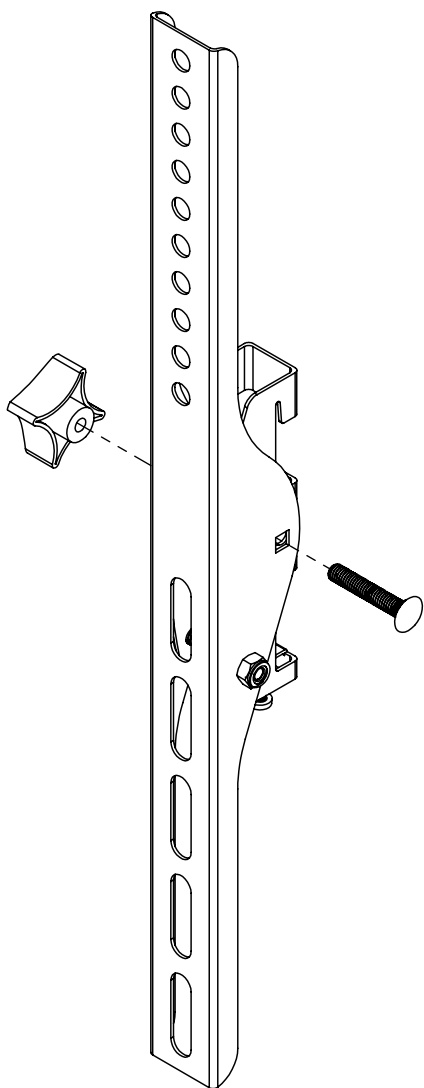

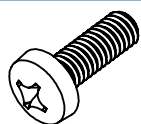


M6x16
4x




M6 Washer
4x

7


Mount the TV brackets to the back of your television.

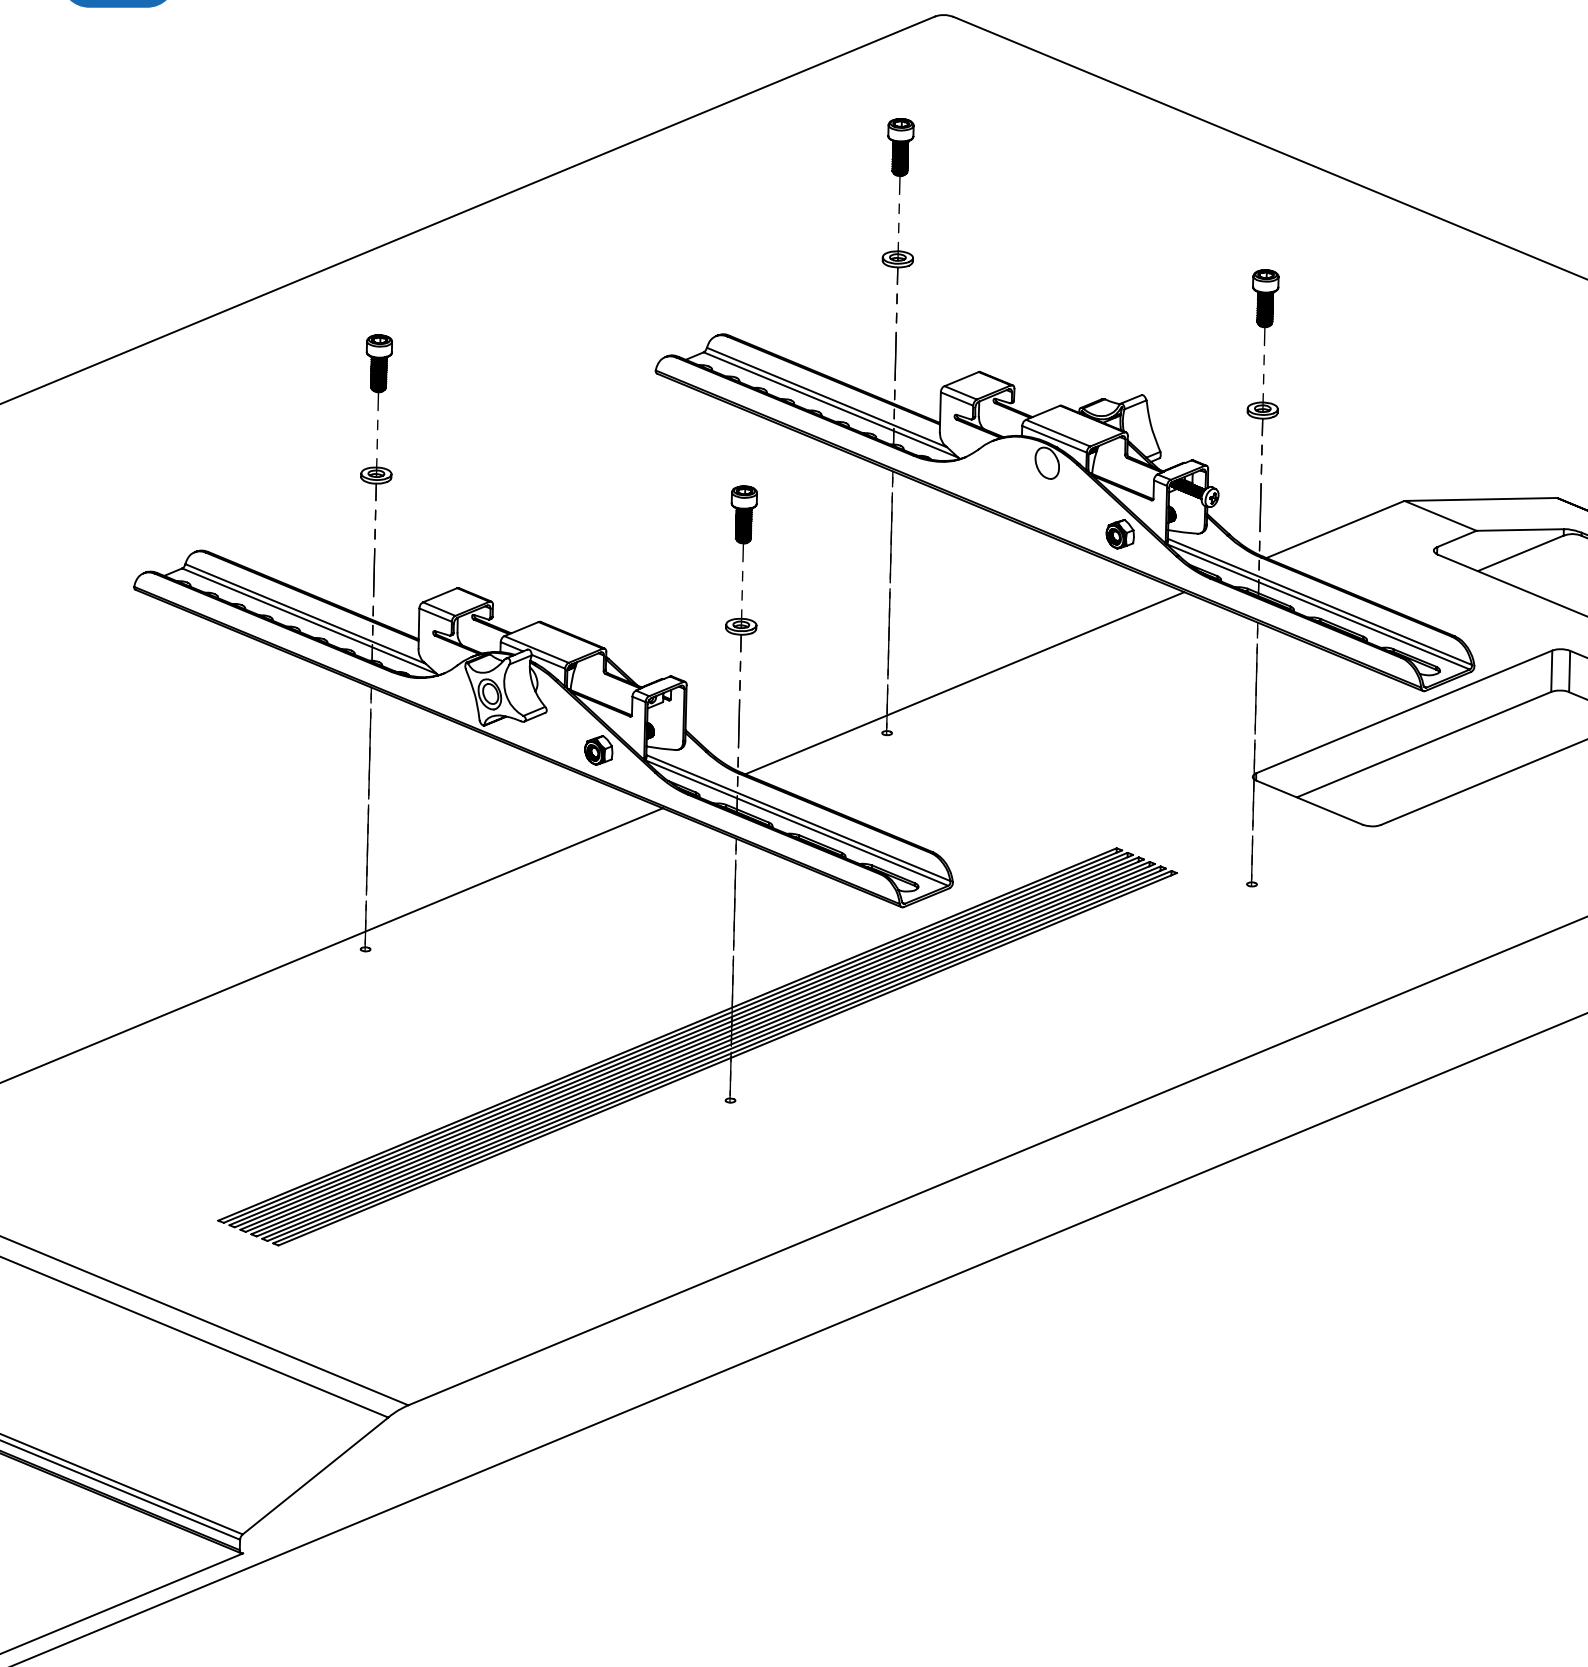

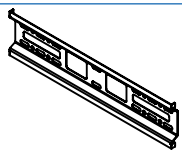

Profile Bracket

1x



M8x12


4x



M8 T-Nut


4x

8

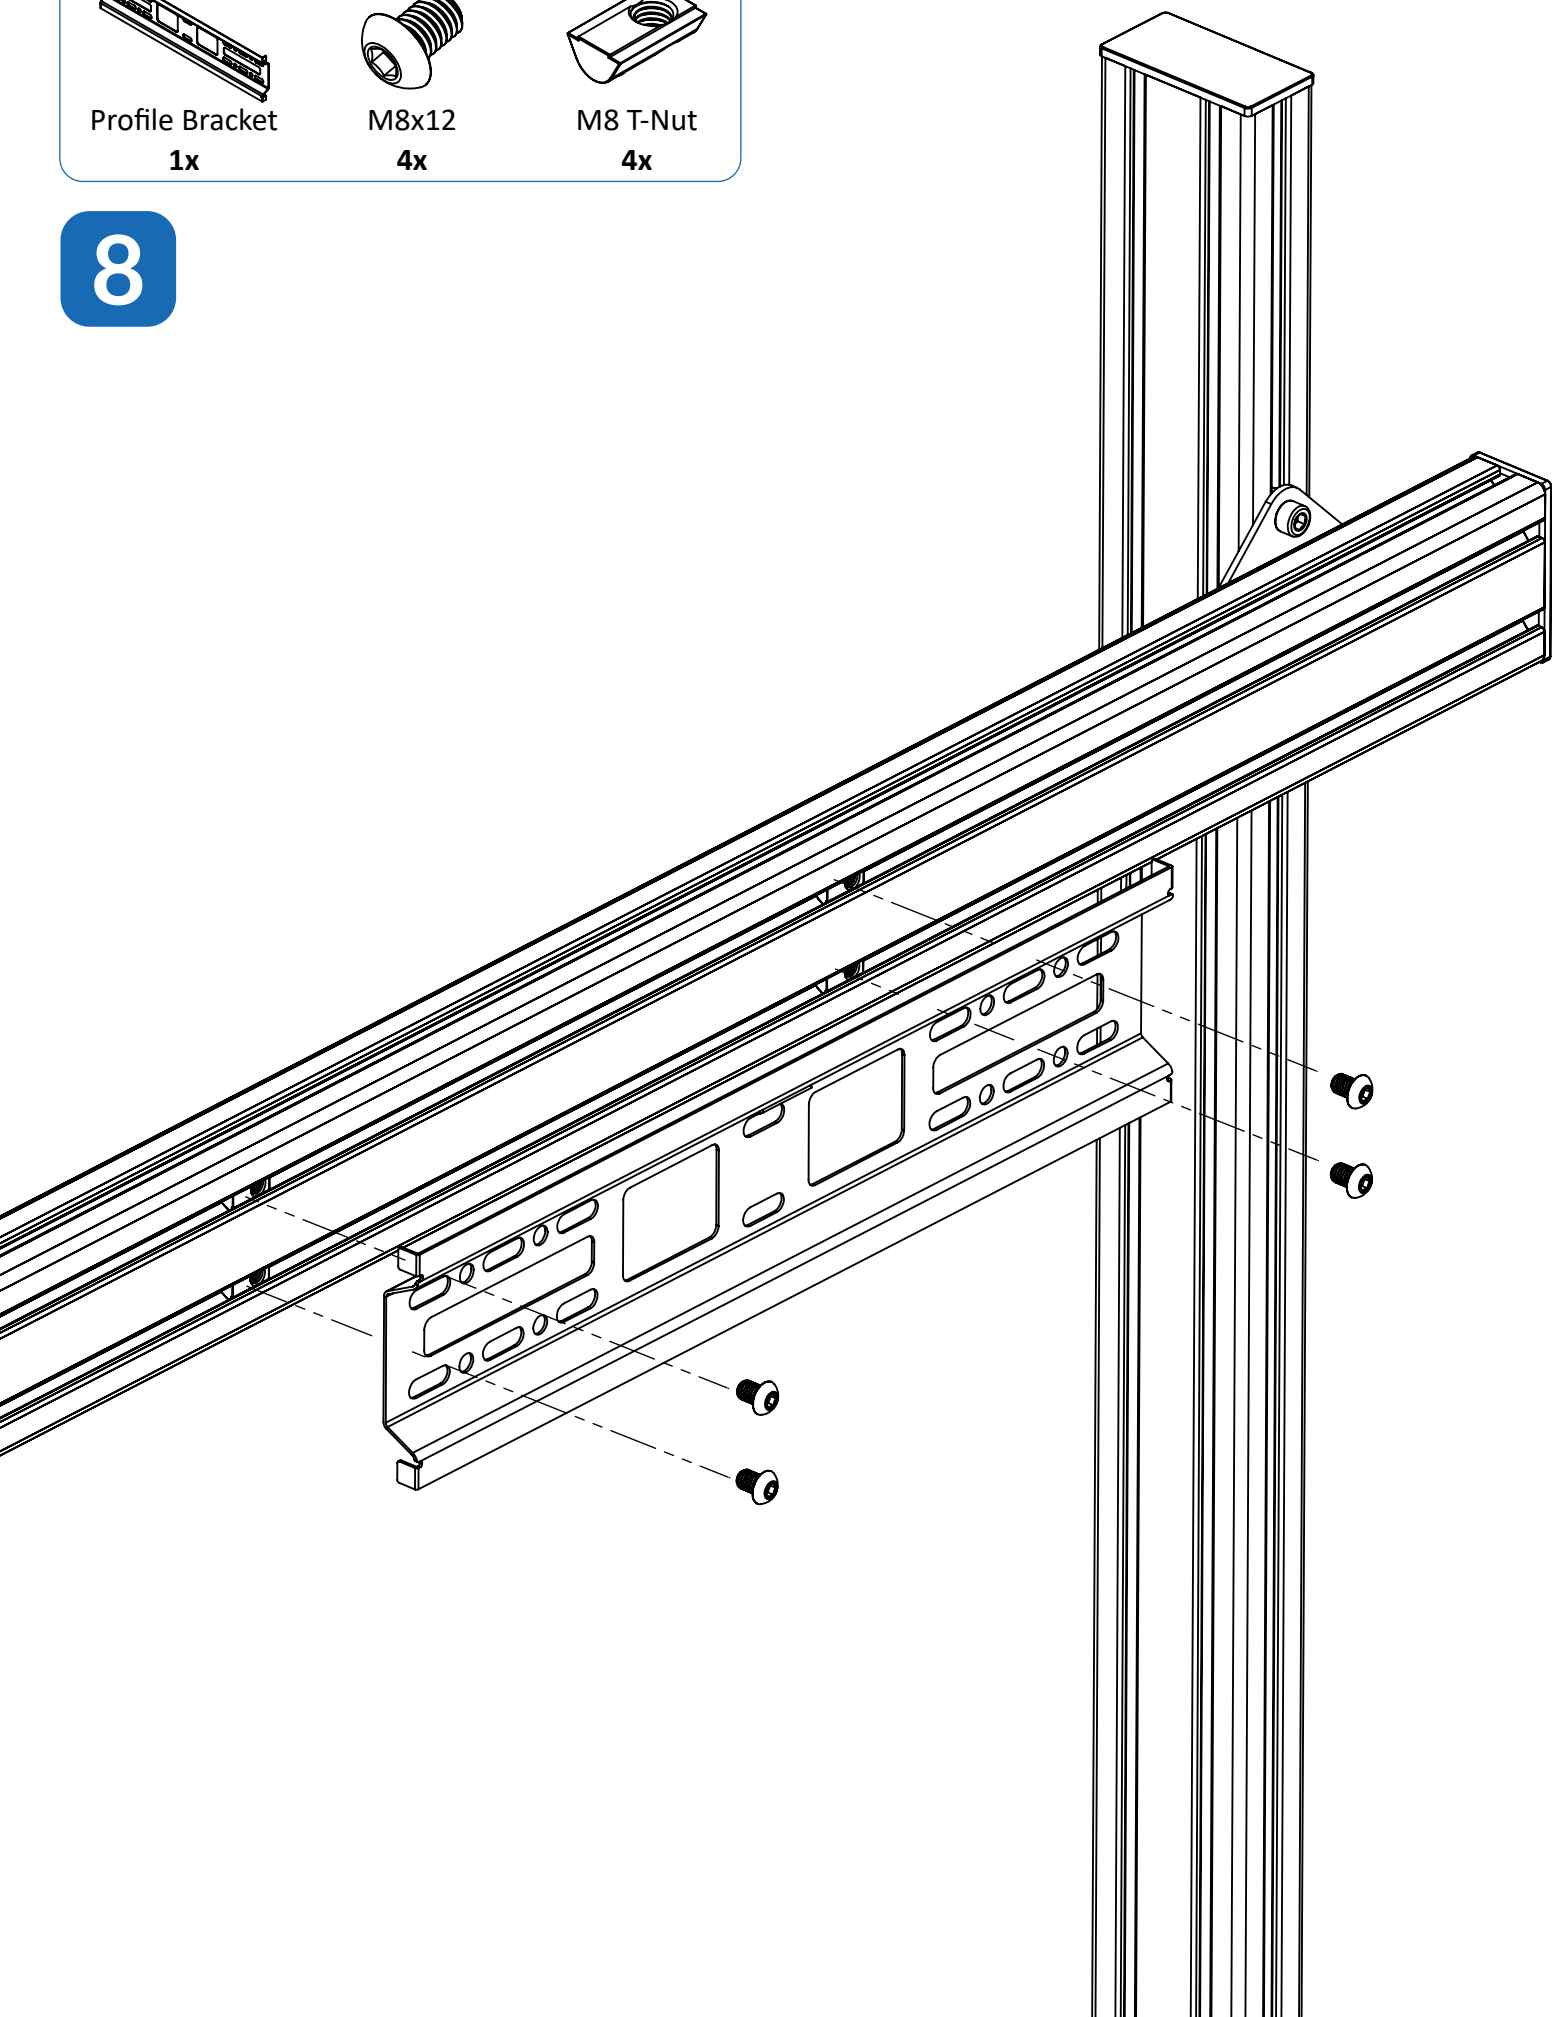



9

Hang the TV onto the Profile Bracket.

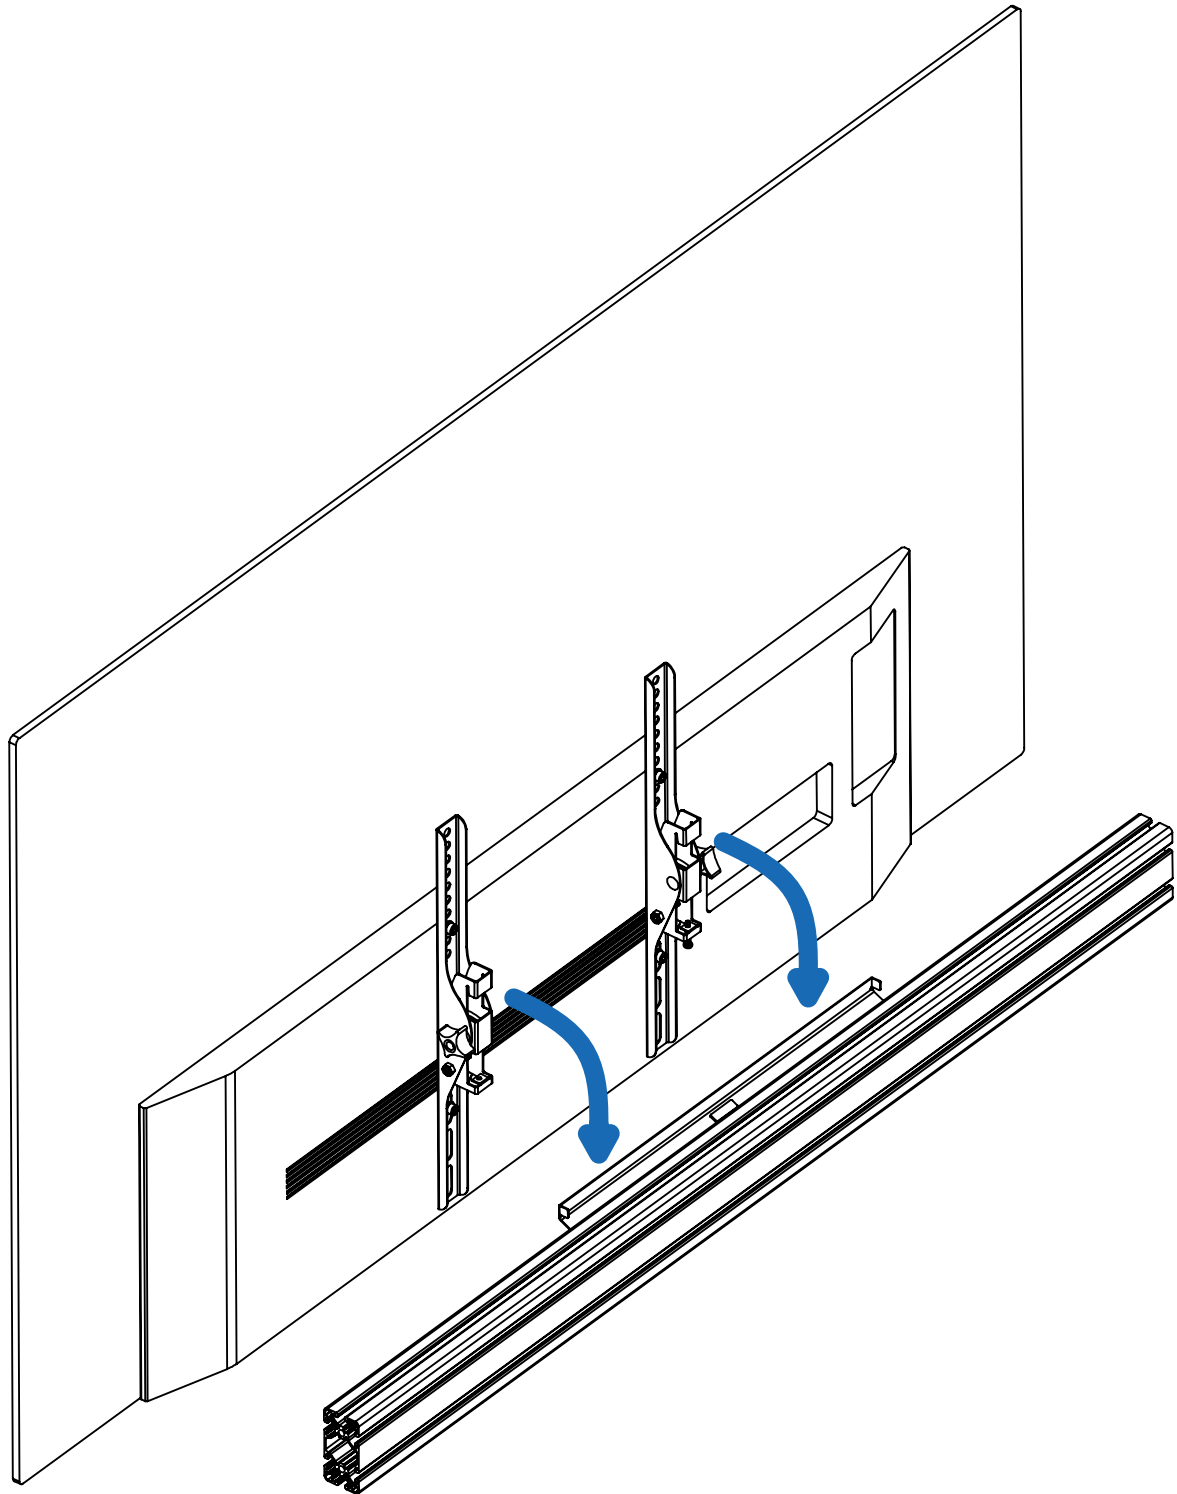

10

Lock the assembly by tightening the bottom screws.
Use the knobs to adjust / lock the tilt of the TV.

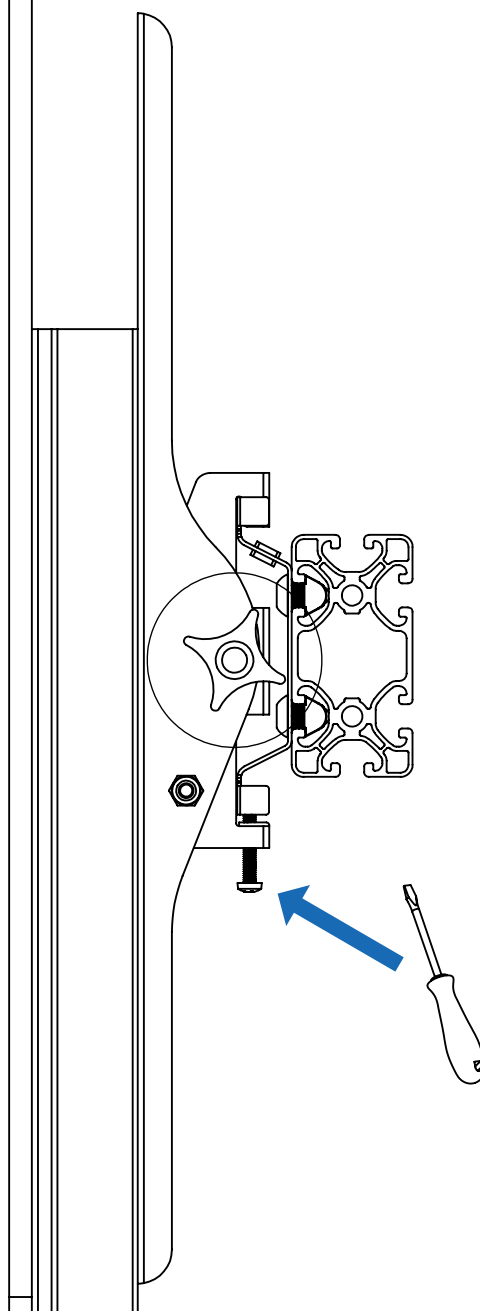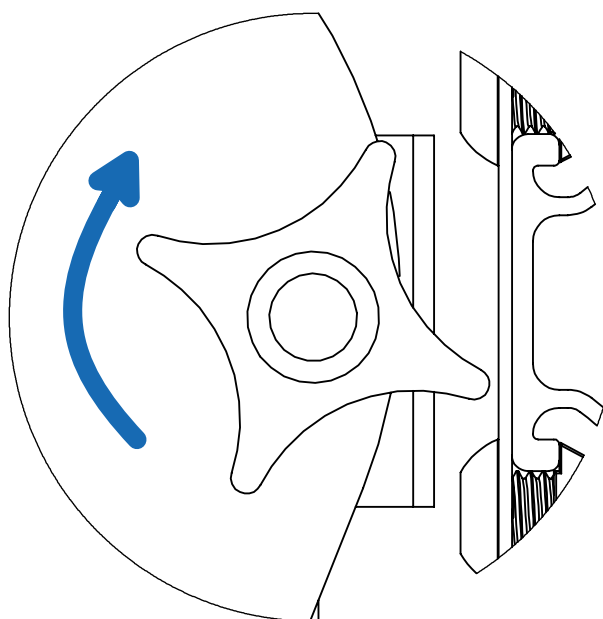

QUESTIONS & COMMENTS

If you have any questions about building our products, missing items, or mistakes in this manual, please contact us! We reply quickly via our email info@treq-sim.com, and this is the #1 way to go if your question involves personal information. Need help from our community? Or you just want to show your new build to the world? Join our Discord and connect with hundreds of other sim racing enthusiasts!

CONTACT FORM



www.treq-sim.com/contactus/

DISCORD



www.discord.gg/8ezbgz3q45/

LEAVE A REVIEW

Now that you are done building it is a great time to share your experience with us and even more importantly, other fellow sim-racers!

Recommending us to friends, or leaving a review on your preferred website and letting other people know would what you think of us, would help us a lot! We are a small company that has its main focus on creating and delivering great products and helping customers quickly, and not on advertising and marketing.

Kind regards, team Treq