



CABLE BOX

INSTRUCTION MANUAL

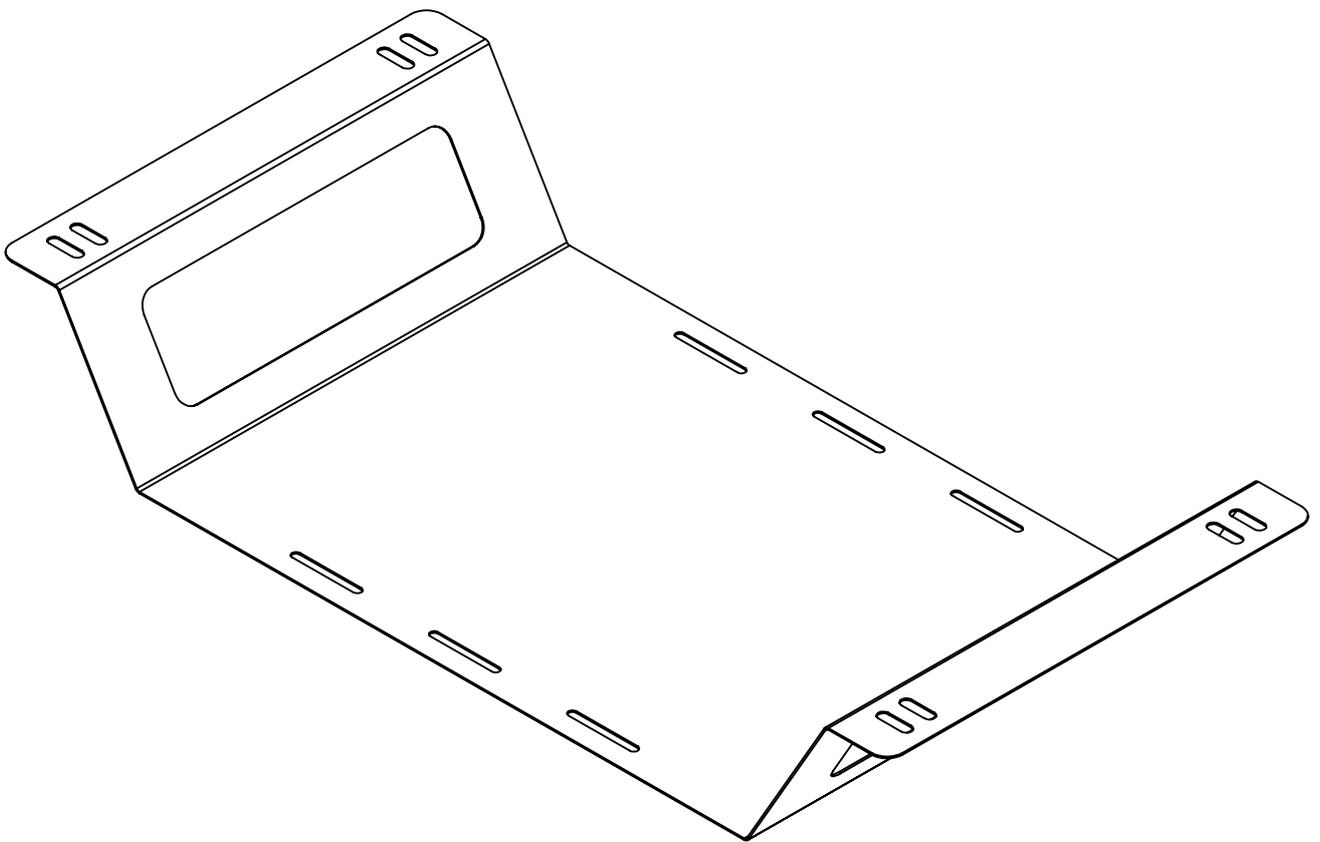


REQUIRED TOOLS:

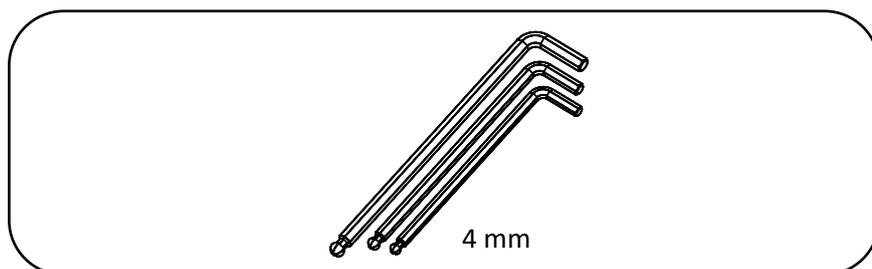


GENERAL INSTRUCTIONS


The easiest way to mount the T-Slot Click-in-Nuts, is to slide them in from one side of the profile, with the ball facing down. But don't worry if you need to put in a click-in-nut in a profile which has both ends already closed: it is also possible to push them in the T-slot anywhere you like!

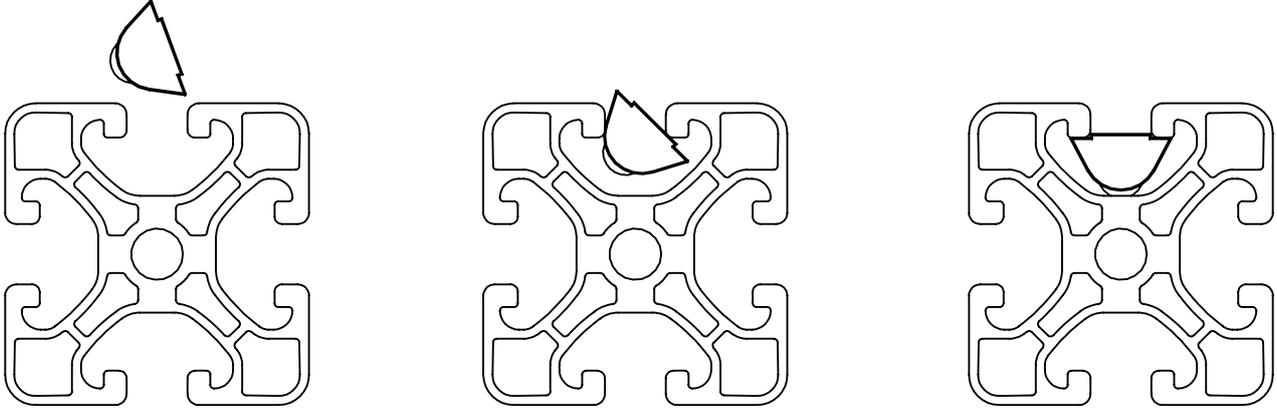

INCLUDED ITEMS

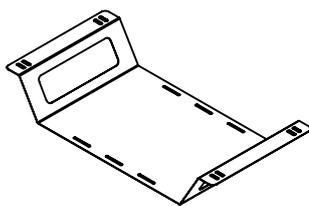


Cable Box Plate
1x

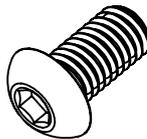


M6x12
4x



M6 T-Nut
4x



M6 Washer
4x

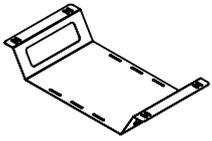


Cable Box Plate
1x



M6x12
4x




M6 T-Nut
4x




M6 Washer
4x

1a

Follow this step if you want to mount the Cable Box underneath the profiles.

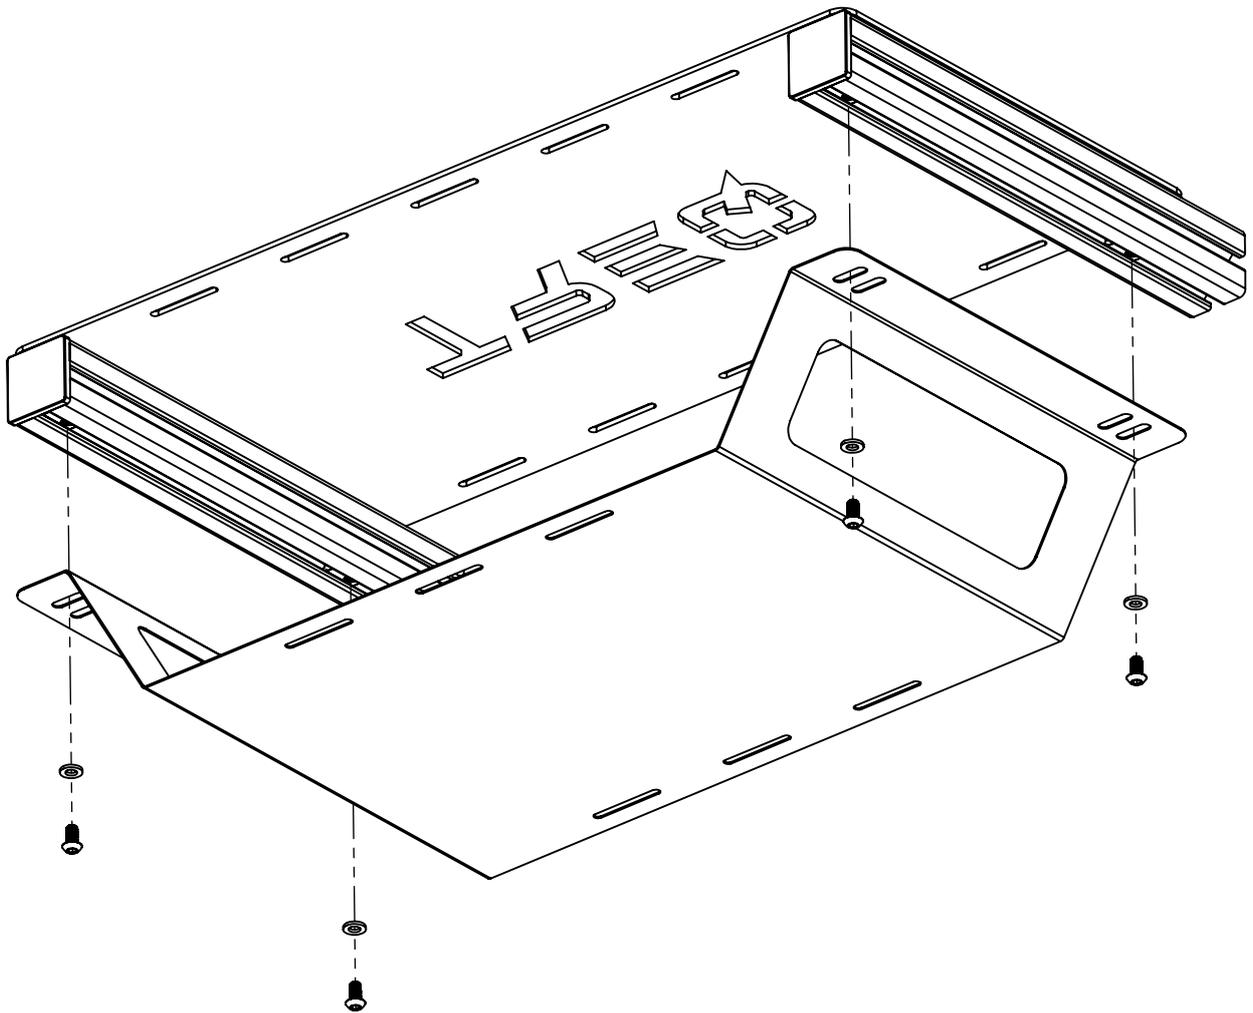

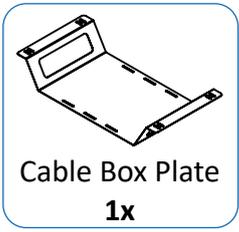

1b

Follow this step if you want to place the Cable Box between the profiles and the Computer Mount. This solution works better if you have limited space caused by your wheel base.

